Nicewell MQD-C018

Nicewell Food Scale Instruction Manual

Your comprehensive guide to operating and maintaining your Nicewell Digital Kitchen Scale.

Introduction

The Nicewell Food Scale is a versatile and precise digital kitchen scale designed for accurate measurements in cooking, baking, and portion control. Featuring a sleek stainless steel and tempered glass design, it offers a large display and multiple unit options to suit various culinary needs. This manual provides essential information for setup, operation, and care of your new kitchen scale.

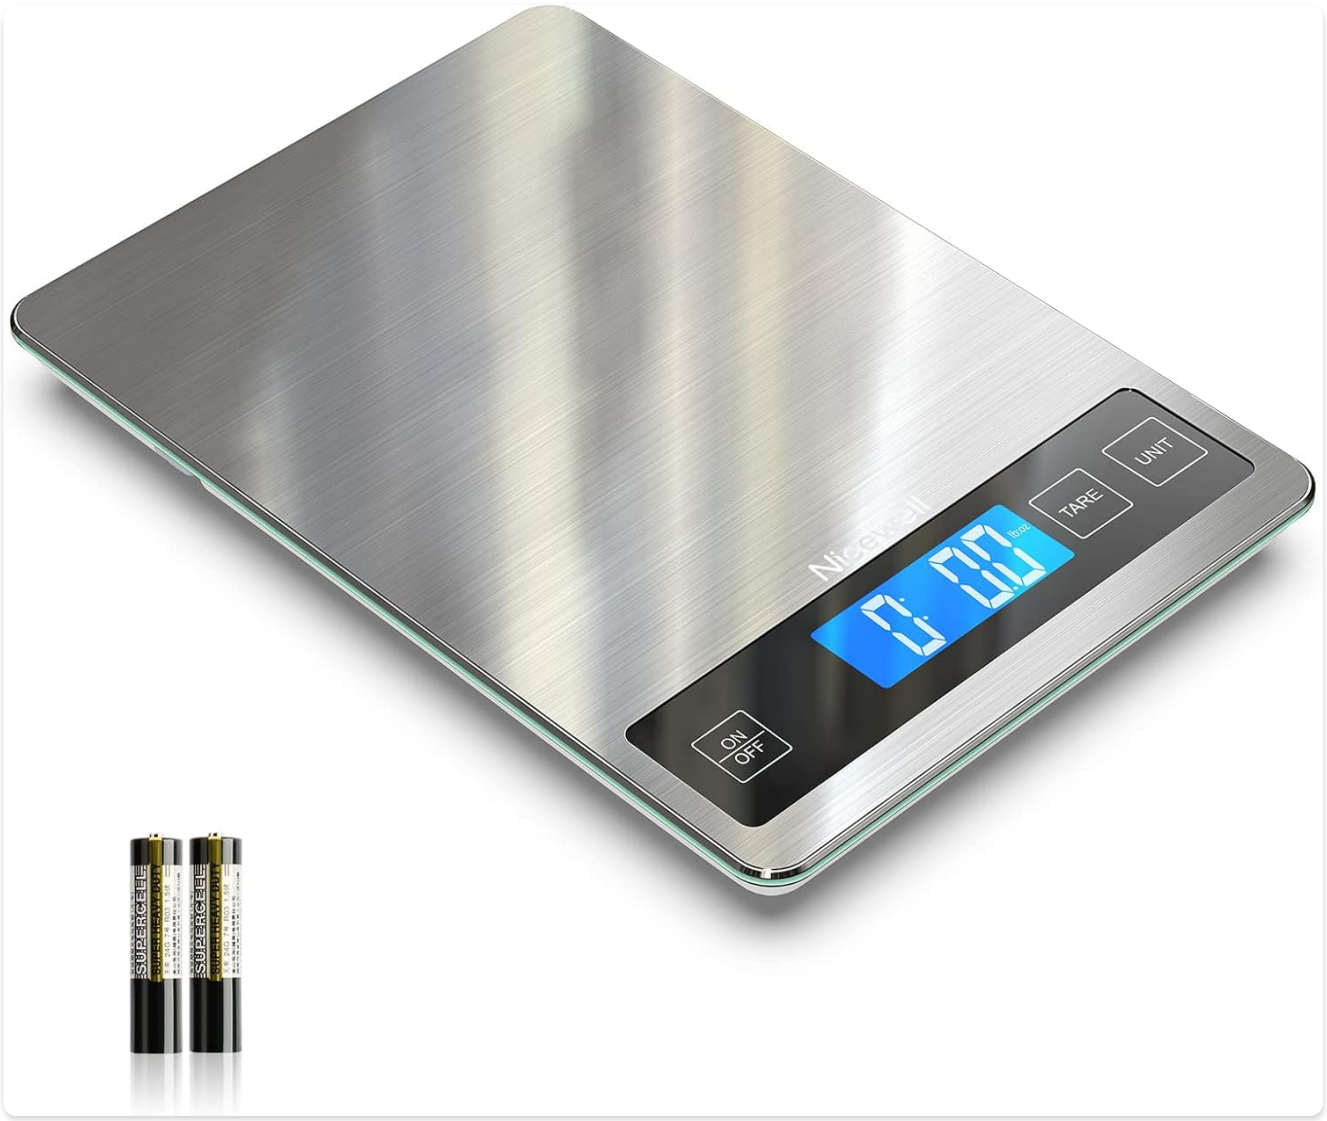


Figure 1: Nicewell Digital Food Scale (Ash Silver model) with its sleek stainless steel and tempered glass surface, featuring an easy-to-read digital display and control buttons.

Setup

Battery Installation

Your Nicewell Food Scale requires 2 AAA batteries (included). To install or replace batteries:

1. Locate the battery compartment on the underside of the scale.
2. Open the battery cover.
3. Insert 2 AAA batteries, ensuring correct polarity (+/-).
4. Close the battery cover securely.



Figure 2: The underside of the scale, highlighting the battery compartment and the four non-slip rubber feet for stable placement. A blue protective film is visible on the top surface, which should be removed before use.

Placement

For accurate readings, always place the scale on a hard and level surface. Avoid soft or uneven surfaces that may affect stability and measurement precision.

Operating Instructions

Power On/Off

Press the **ON/OFF** button to turn the scale on. The display will light up and show "0.0". To turn off the scale, press and hold the **ON/OFF** button for a few seconds, or it will automatically shut off after a period of inactivity to conserve battery life.

Unit Conversion

The Nicewell Food Scale supports multiple units of measurement. Press the**UNIT** button to cycle through the available units: grams (g), kilograms (kg), pounds:ounces (lb:oz), fluid ounces (fl.oz), and milliliters (ml).



Figure 3: The scale's display illustrating the ease of switching between various units such as grams, kilograms, pounds:ounces, fluid ounces, and milliliters.

Tare Function (Zero Out)

The tare function allows you to subtract the weight of a container or previously added ingredients, enabling you to measure subsequent ingredients accurately in the same bowl. To use the tare function:

1. Place an empty bowl or container on the scale. The display will show its weight.
2. Press the **TARE** button. The display will reset to "0.0".
3. Add your ingredients to the container. The scale will now display only the weight of the added ingredients.



Figure 4: A visual guide demonstrating the tare function, showing how to place a bowl, press TARE to zero it out, and then add ingredients for precise measurement.

Maintenance

Cleaning

The Nicewell Food Scale features a sleek stainless steel top surface and tempered glass, making it easy to clean.

Simply wipe the surface with a damp cloth after each use. Avoid abrasive cleaners or submerging the scale in water.

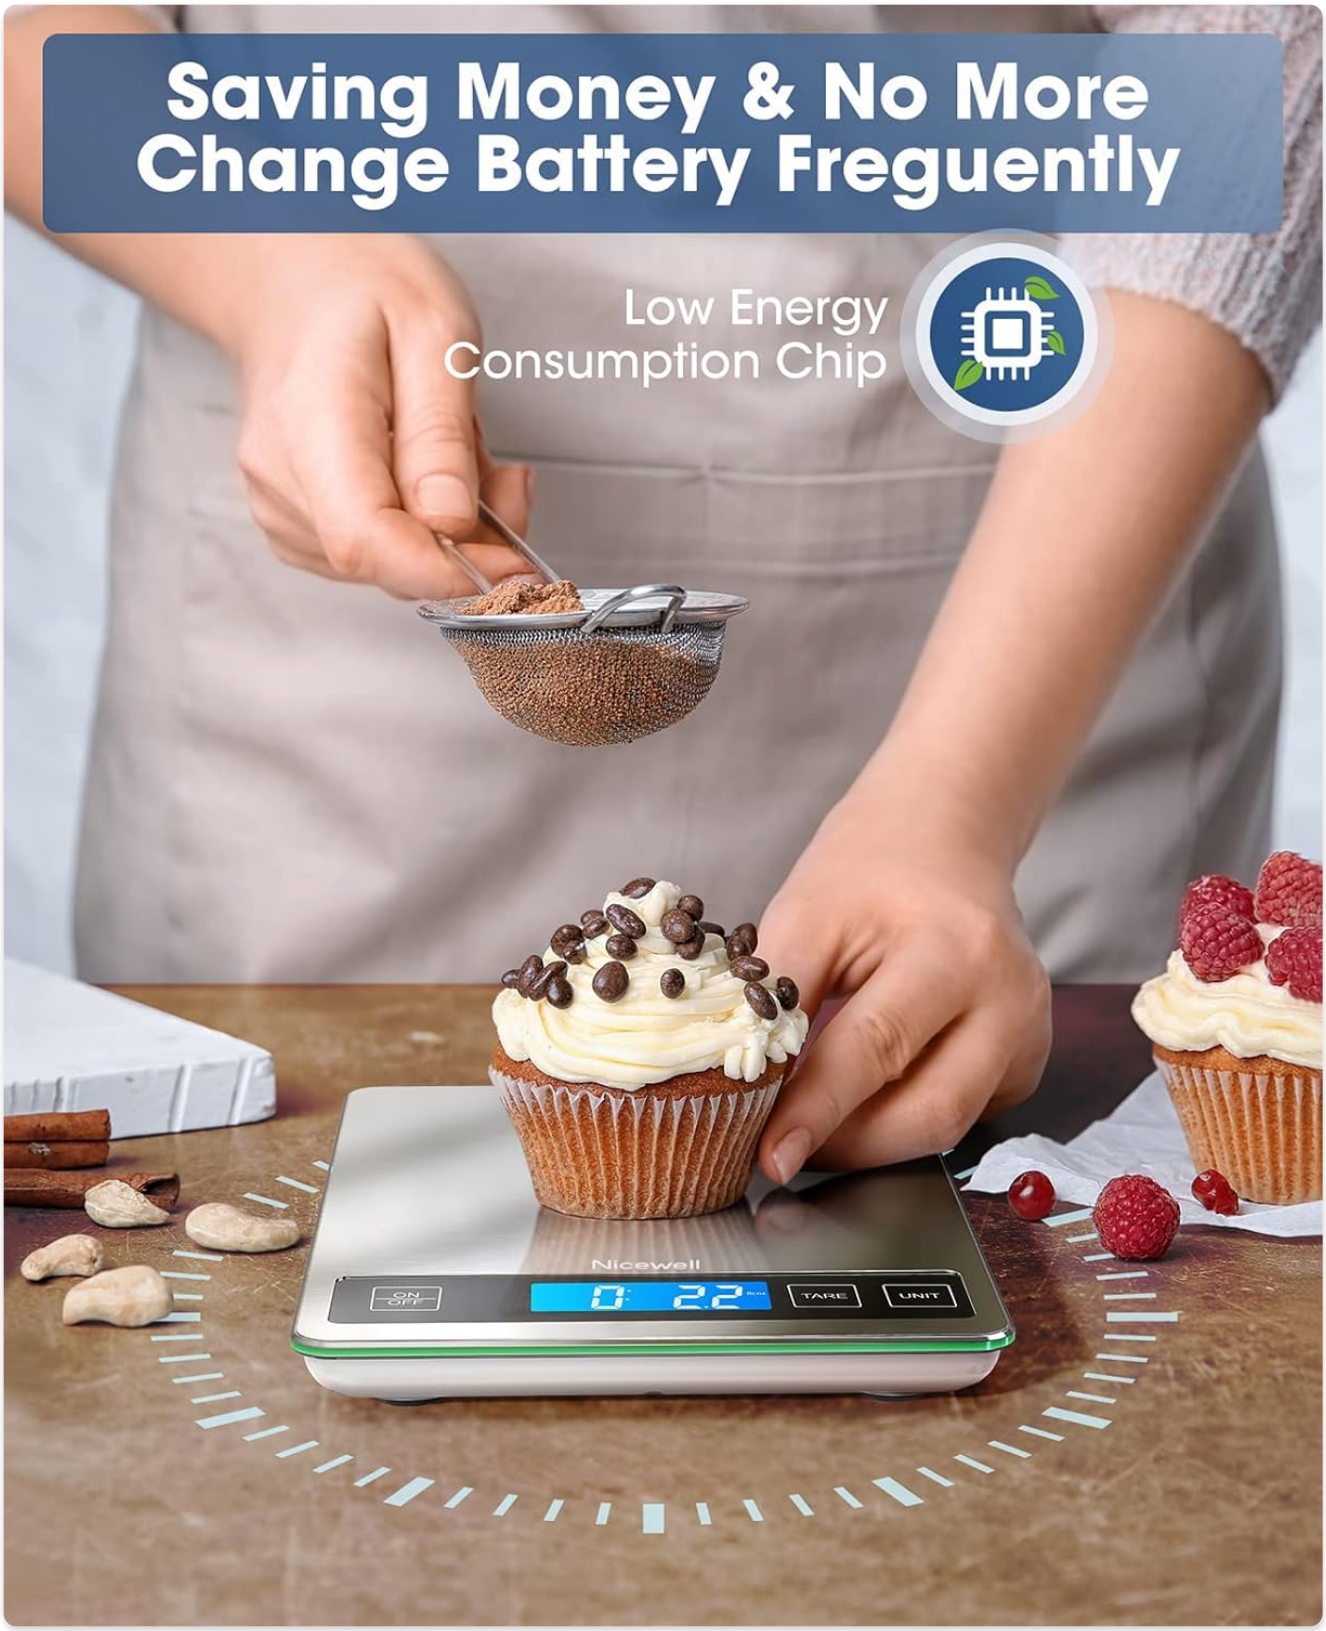


Figure 5: A hand wiping the scale's surface, illustrating how easily flour residue can be cleaned from the unified top panel.

Battery Care

To ensure optimal performance and longevity, replace batteries when the low battery indicator appears on the display. Always use 2 AAA batteries of the same type.

Troubleshooting

If you encounter any issues with your Nicewell Food Scale, please consider the following common solutions:

- **Inaccurate Readings:** Ensure the scale is placed on a flat, stable, and level surface. Uneven surfaces can lead to inaccurate measurements.
- **Display Not Turning On:** Check if the batteries are correctly installed and have sufficient charge. Replace them if necessary.
- **Overload Indication:** If the display shows an "Err" or "O-Ld" message, the scale is overloaded. Remove items immediately to prevent damage. The maximum weighing capacity is 22 lbs (10 kg).
- **Slow Response:** Ensure there are no obstructions under the scale and that it is on a clean, level surface.

For persistent issues or further assistance, please refer to the Support section.

Specifications

Feature	Detail
Model Number	MQD-C018
Material	Stainless Steel, Tempered Glass, ABS
Weighing Units	lb:oz, g, kg, fl'oz, ml
Maximum Weighing Capacity	22 lbs (10 kg)
Minimum Weighing Capacity	0.1 oz (3 g)
Increment (Resolution)	0.1 oz, 1 g
Power Source	2 x AAA batteries (included)
Product Dimensions	9 x 6.2 x 0.8 inches
Item Weight	1.34 pounds (606 Grams)
Special Features	Large Display, Backlit Display, Lightweight, High Weight Capacity, Tare Function



Figure 6: Visual representation of the scale alongside its key specifications, including model, materials, and weighing capabilities.

Warranty Information

Nicewell stands behind the quality of its kitchen scales. While specific warranty terms may vary, the product is designed for durability and reliability. For detailed warranty information and claims, please contact Nicewell customer support.

Customer Support

If you have any questions, concerns, or require assistance with your Nicewell Food Scale, please do not hesitate to reach out to our customer support team. We are committed to providing excellent service and support for our

products.
For contact details, please refer to the product packaging or visit the official Nicewell website.

© 2024 Nicewell. All rights reserved.