Pemberly Row PR-4753-1939935

Pemberley Row Mid Century Dining Chairs (Set of 2) Instruction Manual

Model: PR-4753-1939935

1. Product Overview

Thank you for purchasing the Pemberley Row Mid Century Dining Chairs. This set of two chairs features a modern mid-century design with upholstered leather seats and solid wooden legs, providing both comfort and style for your kitchen or dining room. This manual provides essential information for assembly, care, and maintenance to ensure the longevity and proper use of your chairs.



Image 1.1: A pair of Pemberley Row Mid Century Dining Chairs.

2. Safety Information

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- **Keep children away:** During assembly, keep small parts and packaging materials away from children.
- **Proper assembly:** Ensure all bolts and screws are securely tightened before using the chairs. Periodically check and re-tighten hardware as needed.
- **Weight limit:** Do not exceed the maximum weight recommendation of **250 pounds** per chair.
- **Stable surface:** Always place the chairs on a flat, stable, and level surface to prevent tipping.
- **Avoid standing:** Do not stand on the chairs.
- **Careful handling:** Lift chairs when moving them; do not drag them, as this can damage the legs or floor.

3. Package Contents

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

Expected Items (per chair):

- 1x Seat Frame with Upholstered Seat
- 1x Backrest
- 4x Chair Legs
- Hardware Pack (screws, washers, Allen wrench)

4. Assembly Instructions

Assembly typically requires two adults. Please follow these steps carefully.

Tools Required:

- Included Allen Wrench
- Phillips Head Screwdriver (not included, optional for some fasteners)

Step-by-Step Assembly:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches.
2. **Attach Legs to Seat Frame:** Identify the four chair legs. Align each leg with the corresponding mounting points on the underside of the seat frame. Secure them using the provided screws and washers. Do not fully tighten the screws at this stage.
3. **Attach Backrest:** Position the backrest onto the seat frame, aligning the pre-drilled holes. Secure it with the appropriate screws and washers. Again, do not fully tighten yet.
4. **Stabilize and Tighten:** Once all components are loosely assembled, place the chair upright on a level surface. Apply gentle downward pressure to ensure all parts are properly seated and the chair is stable. Then, systematically tighten all screws and bolts using the Allen wrench, starting from the seat frame and moving to the backrest. Ensure all connections are firm.
5. **Final Check:** Verify that the chair is stable and all hardware is securely tightened. Repeat the process for the second chair.



Image 4.1: Assembled chairs in a dining room setting.

5. Care and Maintenance

Proper care will help maintain the appearance and extend the life of your dining chairs.

- **Cleaning:** Wipe clean with a damp cloth. For stubborn spots on the faux leather, use a mild soap solution and immediately wipe dry. Avoid harsh chemicals or abrasive cleaners.
- **Spills:** Blot spills immediately with a clean, dry cloth.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading of the upholstery and wood finish.
- **Heat:** Keep chairs away from direct heat sources like radiators or fireplaces.
- **Hardware:** Periodically check and re-tighten all screws and bolts to ensure stability.

6. Troubleshooting

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Chair wobbles	Uneven floor or loose hardware	Ensure chair is on a level surface. Check and tighten all assembly screws. If wobbling persists, try placing felt pads under shorter legs.
Screws become loose over time	Normal wear and tear	Periodically check and re-tighten all screws and bolts. Do not overtighten.
Upholstery appears dull or stained	Dirt accumulation or spills	Clean with a damp cloth and mild soap solution. Blot spills immediately. Avoid abrasive cleaners.

7. Specifications

Detailed product specifications for the Pemberley Row Mid Century Dining Chairs.

Feature	Detail
Brand	Pemberly Row
Model Number	PR-4753-1939935
Color	Black Leather
Product Dimensions (D x W x H)	20.5"D x 23"W x 27.5"H
Seat Height	29.1 Inches
Seat Depth	21.3 inches
Back Style	Solid Back
Maximum Weight Recommendation	250 Pounds
Material	Solid Wood Frame, Faux Leather Upholstery, Foam Cushion
Item Weight	15 pounds (per chair)
Indoor/Outdoor Usage	Indoor

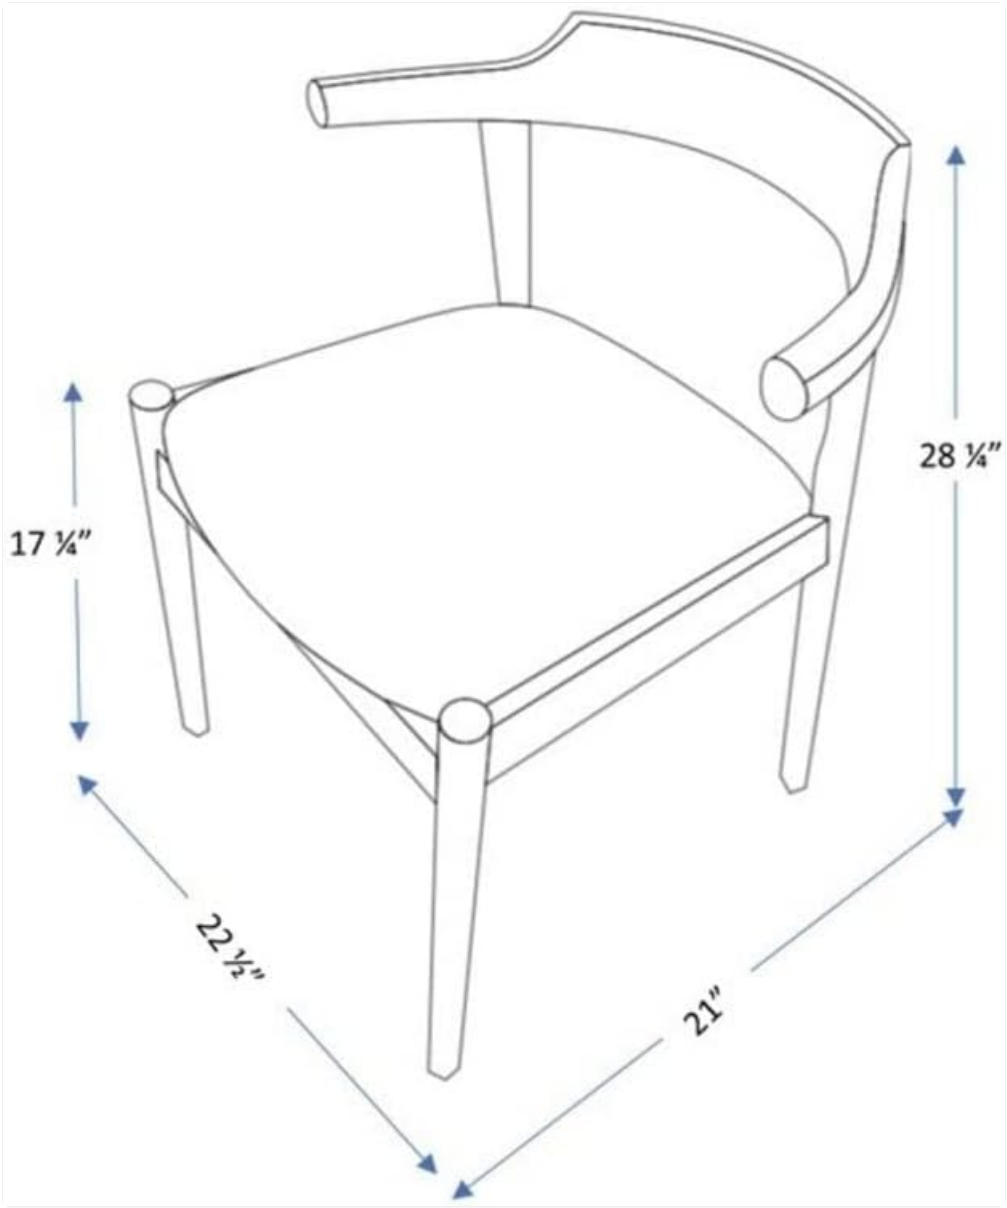


Image 7.1: Product Dimensions Diagram.

8. Warranty and Support

Pemberley Row products are manufactured to high-quality standards. For specific warranty information, please refer to the documentation included with your purchase or contact the retailer where the product was acquired.

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Pemberley Row customer support through their official website or the retailer's customer service channels. Please have your model number (PR-4753-1939935) and purchase date available when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question