Geeni GN-OW

Geeni Outdoor Duo Wi-Fi Smart Plug Instruction Manual

Model: GN-OW | Brand: Geeni

Introduction

Welcome to the Geeni Outdoor Duo Wi-Fi Smart Plug instruction manual. This guide provides comprehensive information on setting up, operating, and maintaining your new smart plug. Designed for outdoor use, this device offers convenient control over your outdoor appliances and lighting, enhancing your smart home experience.

Key Features

- **SMART OUTDOOR CONTROL:** Remotely manage outdoor lighting, pumps, and devices via smartphone. Schedule holiday lights or sprinklers from anywhere, anytime.
- **EASY SETUP & VOICE CONTROL:** Connect seamlessly to 2.4GHz Wi-Fi and enjoy hands-free control with Alexa and Google Home compatibility.
- **DURABLE WEATHERPROOF DESIGN:** Built for outdoor use, the smart plug's dual sockets feature weather-resistant covers for added protection.
- **REMOTE ACCESS ANYWHERE:** Conveniently turn seasonal lights on/off or name the plug for precise control, even with voice commands.
- **COMPACT, USER-FRIENDLY DESIGN:** Easy installation with dust protection, hanging buckle, and shared access options for safe, convenient outdoor control.



Image: Key features of the Geeni Outdoor Duo Smart Plug, including dual outlets, app control, voice control, weatherproof design, timer mode, and daily scheduling capabilities.

Package Contents

The Geeni Outdoor Duo Wi-Fi Smart Plug package includes:

- 1x Geeni Outdoor Duo Plug
- Quick start guide
- Voice control guide

Setup Guide

Step 1: Download the Geeni App

Download the Geeni app from the App Store (iOS) or Google Play Store (Android). Register for a new account or log in if you already have one.



Image: The Geeni app interface on a smartphone, showing controls for outdoor lighting and sprinklers, demonstrating remote management.

Step 2: Connect to Wi-Fi

Plug the Geeni Outdoor Duo Smart Plug into an outdoor power outlet. Open the Geeni app and follow the on-screen instructions to add your new device. Ensure your Wi-Fi network is 2.4GHz for optimal connectivity.

Your browser does not support the video tag.

Video: An overview of Geeni Smart Home Products, demonstrating various smart devices and their integration for a connected home experience.

Step 3: Placement and Protection

Mount the smart plug in a suitable outdoor location, ensuring its weatherproof covers are securely closed when not in use. The durable design is built to withstand various weather conditions.



Image: The Geeni Outdoor Duo Smart Plug in a rainy environment, showcasing its weatherproof capabilities and robust design for outdoor use.

Operating Your Smart Plug

Remote Control via App

Once connected, use the Geeni app to remotely turn on or off devices plugged into the smart plug. You can also set customized daily or weekly schedules and countdown timers for automated control.

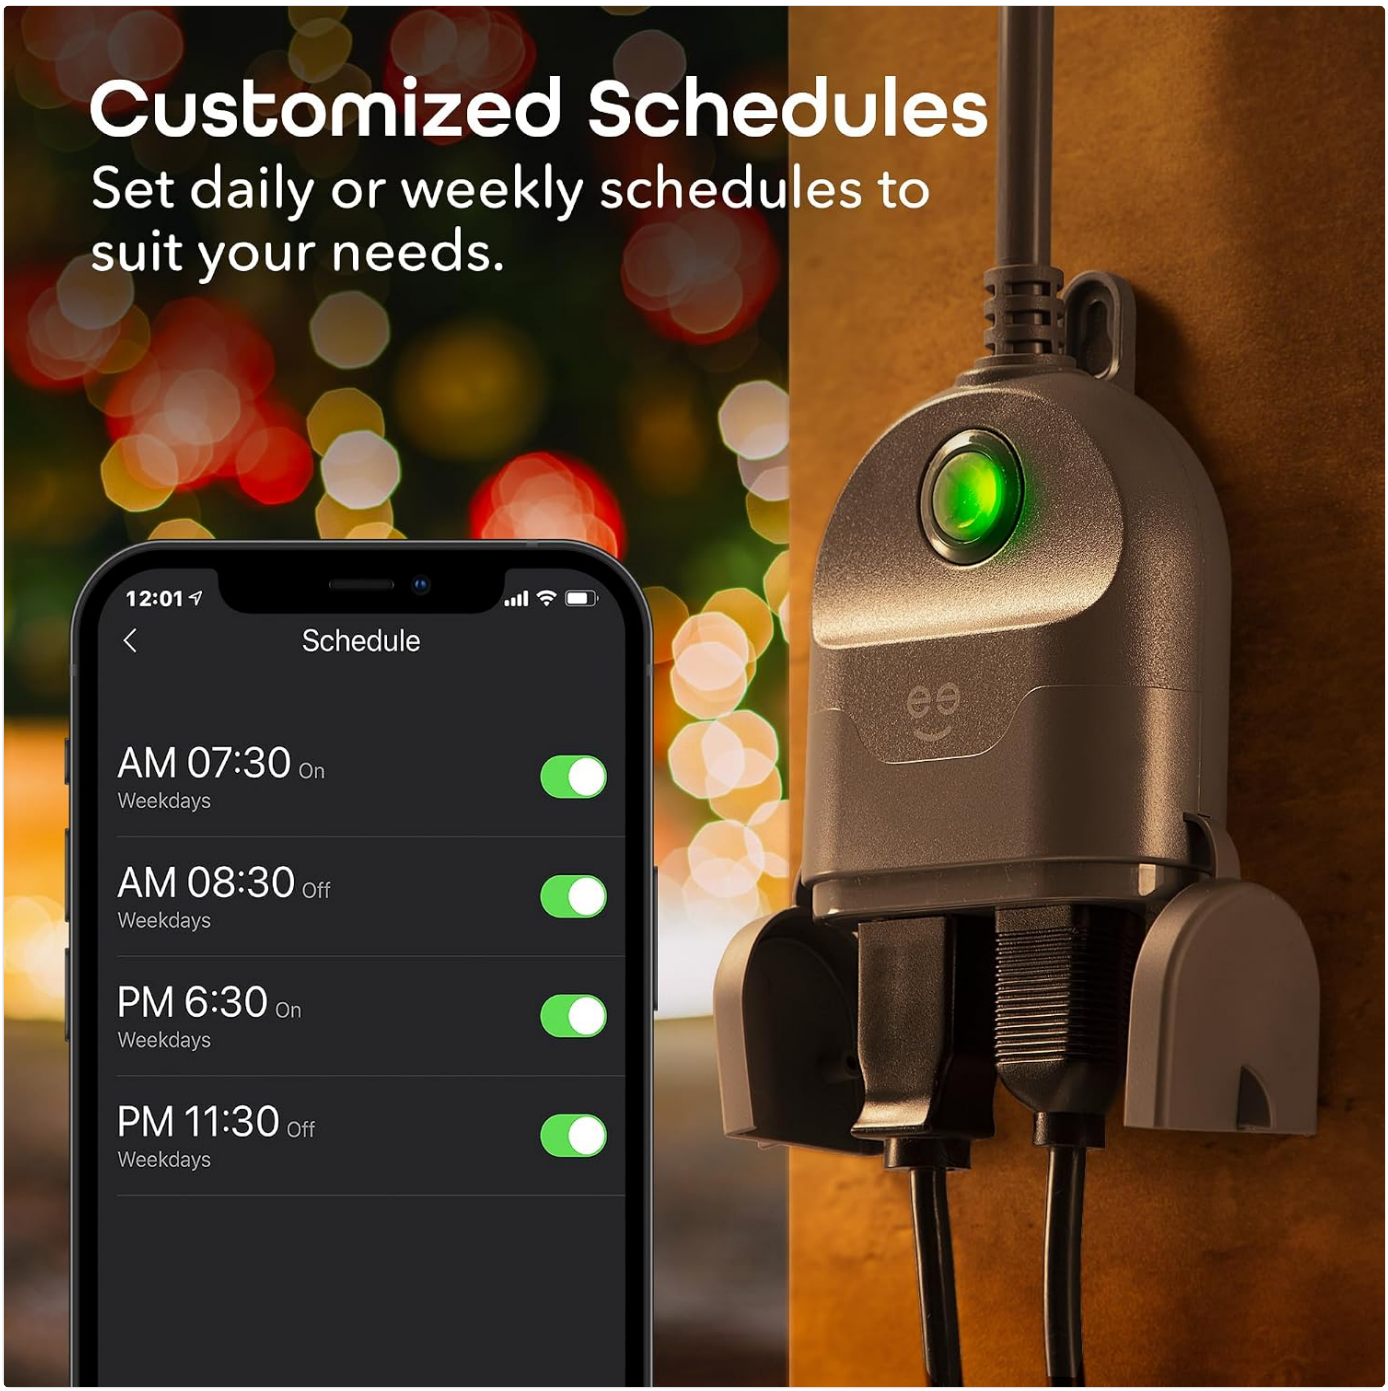


Image: The Geeni app's scheduling interface, allowing users to set specific on and off times for the smart plug on different days of the week.

Voice Control

Integrate your Geeni Smart Plug with Amazon Alexa or Google Home for convenient voice commands. Simply say, for example, "Alexa, turn on the backyard lights" to control your connected devices hands-free.



Image: Demonstrates voice control functionality with an Amazon Echo, allowing users to activate devices connected to the Geeni smart plug using simple commands.

Independent Outlet Control

The Geeni Outdoor Duo Smart Plug features two independent outlets. Each outlet can be controlled separately through the app, allowing for flexible management of different devices.

Maintenance

To ensure the longevity and optimal performance of your Geeni Outdoor Duo Wi-Fi Smart Plug, follow these maintenance tips:

- Regularly inspect the plug and its covers for any signs of wear or damage.
- Keep the outlet covers securely closed when not in use to maintain weather resistance.
- Clean the device with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Ensure the plug is not submerged in water or exposed to extreme temperatures outside its operating range (14°F to 104°F).

Troubleshooting

If you encounter issues with your Geeni Outdoor Duo Wi-Fi Smart Plug, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not connecting to Wi-Fi	Incorrect Wi-Fi password, 5GHz network, weak signal	Ensure correct 2.4GHz Wi-Fi password. Move plug closer to router. Restart router and plug.
Device unresponsive in app	Loss of Wi-Fi connection, app glitch	Check Wi-Fi connection. Restart the Geeni app. Unplug and replug the smart plug.
Voice control not working	Incorrect device name, voice assistant not linked	Verify device name in Geeni app. Relink Geeni skill/service in Alexa/Google Home app.
Outlets not controlling independently	App settings issue	Ensure you are selecting the correct individual outlet control within the Geeni app.

Technical Specifications

Specification	Value
Model Number	GN-OW
Operation Mode	ON-OFF
Current Rating	15 Amps
Operating Voltage	125 Volts
Wattage	1875 watts
Connectivity Protocol	Wi-Fi (2.4GHz)
Controller Type	Google Assistant, Amazon Alexa, iOS
International Protection Rating	IP54
Temperature Rating	14°F to 104°F
Product Dimensions (L x W x H)	3.54 x 1.5 x 4.72 inches
Item Weight	8.8 ounces

Warranty Information

Geeni products typically come with a manufacturer's warranty covering defects in materials and workmanship. Please refer to the specific warranty terms provided with your product packaging or visit the official Geeni website for detailed information regarding warranty duration and claims process.

Customer Support

For further assistance, technical support, or inquiries about your Geeni Outdoor Duo Wi-Fi Smart Plug, please visit the

official Geeni Store on Amazon or their dedicated support website. You can find helpful FAQs, troubleshooting guides, and contact information for direct support.

Visit the Geeni Store for more products and support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question