chiphy SF213-107A

Chiphy Dimmable 39-inch Tall Standing Floor Lamp

Model: SF213-107A

Introduction

This manual provides essential information for the safe and efficient use of your Chiphy Dimmable 39-inch Tall Standing Floor Lamp. This lamp is designed to offer soft, warm ambient lighting with adjustable brightness levels, suitable for various indoor environments. Please read these instructions thoroughly before assembly and operation.



Image: Chiphy Floor Lamp illuminating a living room with soft, warm light.

Important Safety Instructions

To reduce the risk of fire, electric shock, or injury, please follow these guidelines:

- Ensure the power supply voltage matches the lamp's requirements (110 Volts).
- This product is intended for indoor use only. Do not expose to water or high humidity.
- Always unplug the lamp from the electrical outlet before cleaning or changing bulbs.
- Do not operate the lamp with a damaged cord or plug.
- Keep the lamp away from heat sources and flammable materials.
- Do not attempt to modify or repair the lamp yourself. Contact qualified service personnel.

Package Contents

Verify that all components are present before beginning assembly:

- Lampshade (Dupont Tyvek)
- Metal Poles (Alloy Steel)
- LED Bulbs (2x 12W, E26 base)
- Power Cord with Foot Switch
- Assembly Hardware (screws, washers, etc.)
- Installation Manual

Your browser does not support the video tag.

Video: An unboxing and overview of the Chiphy Floor Lamp components, demonstrating how items are packaged.

Assembly Instructions

Follow these steps to assemble your Chiphy Floor Lamp:

1. **Unpack Components:** Carefully remove all items from the packaging. Lay them out on a clean, flat surface.
2. **Connect Metal Poles:** Assemble the metal poles by screwing them together. Ensure each connection is smooth and tight to form a sturdy central column.
3. **Install Light Bulbs:** Screw the two provided LED bulbs into the sockets on the assembled pole.
4. **Position Lampshade:** Gently slide the Dupont Tyvek lampshade over the assembled pole from the top side. The lampshade is designed to stretch and smooth out as it is properly positioned.
5. **Secure Base:** Connect the bottom of the lampshade to the base structure using the provided screws. Ensure the screws are correctly placed and tightened for stability.
6. **Secure Top:** Connect the top of the lampshade to the upper frame, applying gentle pressure to ensure the fabric is taut and wrinkle-free.
7. **Final Check:** Verify that all connections are secure and the lamp stands straight and stable.

Your browser does not support the video tag.

Video: A step-by-step guide demonstrating the assembly process of the Chiphy Floor Lamp.



Image: This image illustrates the smooth and tight fit of the lampshade fabric when correctly assembled, contrasting it with a wrinkled appearance from improper assembly.

Operating Instructions

Brightness Adjustment

The Chiphy Floor Lamp features 3 levels of adjustable brightness. Use the foot switch or remote control to cycle through the settings:

- **First Press:** Full brightness (100%)
- **Second Press:** Medium brightness (50%)
- **Third Press:** Low brightness (10%)
- **Fourth Press:** Off

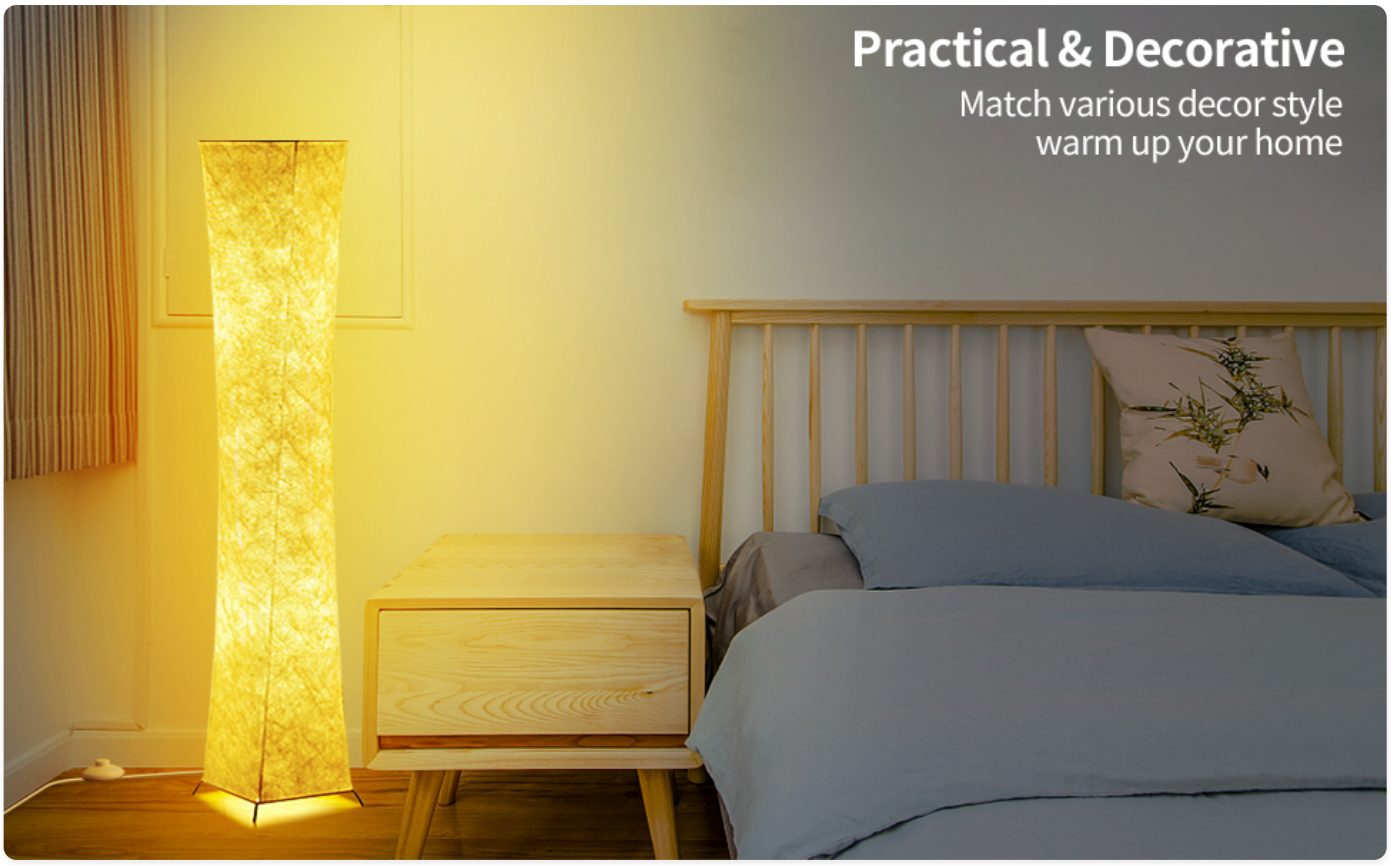


Image: Visual representation of the three distinct brightness levels (100%, 50%, 10%) of the Chiphy Floor Lamp.

Foot Switch Operation

The integrated foot switch allows for convenient control. Simply tap the switch with your foot to turn the lamp on/off and cycle through the brightness levels.



Image: A detailed view of the foot switch, highlighting its design and placement on the power cord.

Remote Control (If Included/Compatible)

If your model includes a remote control or is compatible with one, refer to the remote's specific instructions for pairing and advanced features such as color changing (if applicable) and timer settings.

Your browser does not support the video tag.

Video: Demonstrates the dimmable features and various lighting options of the Chiphy Floor Lamp with a white lampshade.

Smart Plug Compatibility

The lamp is compatible with smart plugs (not included). Using a smart plug allows for control via a mobile application or voice commands, integrating the lamp into your smart home system.

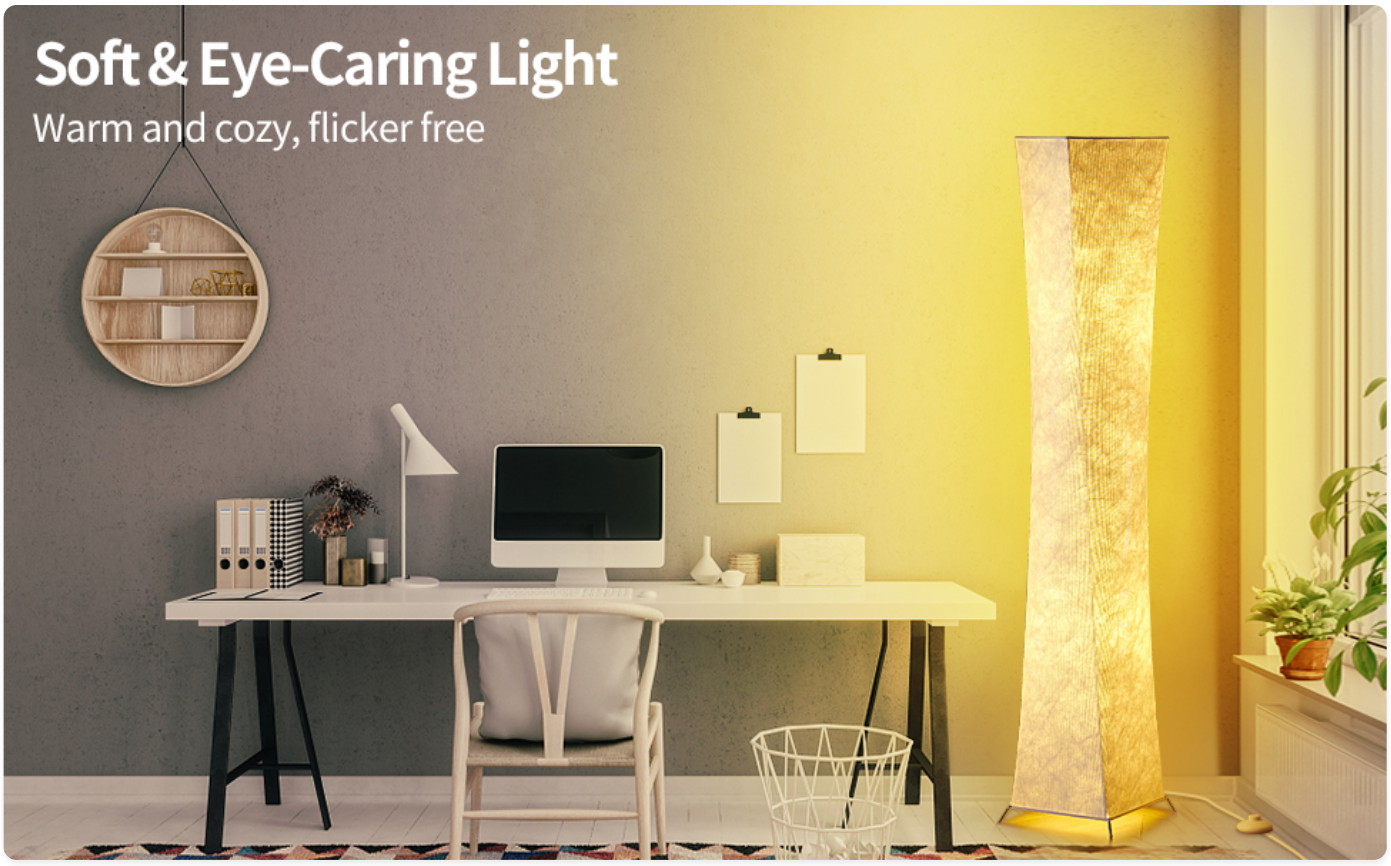


Image: The Chiphy Floor Lamp shown with an icon of a smart plug, illustrating its compatibility for smart home integration.

Maintenance

To ensure the longevity and appearance of your Chiphy Floor Lamp:

- **Cleaning:** The Dupont Tyvek lampshade is lightweight, waterproof, and stain-proof. Wipe it gently with a soft, damp cloth to clean. Avoid harsh chemicals or abrasive cleaners.
- **Bulb Replacement:** Use E26 base LED bulbs. Ensure the lamp is unplugged before replacing bulbs.
- **Storage:** If disassembling for storage, carefully follow the reverse of the assembly instructions. The lampshade can be folded for compact storage.

Troubleshooting

Refer to the table below for common issues and their solutions:

Problem	Possible Cause	Solution
Lamp does not turn on	Power cord not plugged in; Bulb loose or faulty; No power at outlet.	Check power connection; Tighten or replace bulb; Test outlet with another device.
Lampshade appears wrinkled	Improper assembly; Lampshade not fully stretched.	Ensure all poles are securely connected and the lampshade is tautly stretched over the frame.
Brightness levels not changing	Foot switch or remote control malfunction.	Ensure foot switch is fully pressed; Replace remote batteries or re-pair remote.

Specifications

Feature	Detail
Model Number	SF213-107A
Dimensions	7.9"D x 7.9"W x 39"H
Item Weight	1.6 Pounds
Lampshade Material	Dupont Tyvek, Stainless Steel
Base Material	Alloy Steel
Light Source Type	LED
Number of Light Sources	2
Bulb Base	E26
Wattage	24 watts (12W x 2 LED bulbs)
Brightness	2400 Lumens (equivalent to 100W incandescent)
Color Temperature	2700 Kelvin (Warm White)
Special Features	3-way switching, Dimmable, Foot Switch
Control Method	Foot Switch, Remote (if included/compatible)
Power Source	Corded Electric
Indoor/Outdoor Usage	Indoor
UPC	790404754554



Image: This image displays the range of Chiphy floor lamp sizes, including the 39-inch (XS) model, for visual comparison.

Warranty and Support

Chiphy Lighting products typically come with a standard warranty. For specific warranty details, product registration, or technical support, please refer to the documentation included in your product packaging or visit the official Chiphy Lighting website. You may also contact customer service through your retailer.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question