Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

vidaXL 50785

vidaXL Ceramic Hob User Manual

Model: 50785
Brand: vidaXL

1. Introduction

This manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your vidaXL Ceramic Hob with 4 plates and touch control. Please read this manual thoroughly before using the appliance and keep it for future reference.



Figure 1: Overview of the vidaXL Ceramic Hob.

2. Safety Instructions

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance.

- **Electrical Connection:** We recommend using the product with a separately bundled fuse/meter cabinet. Ensure the power supply (220–240 V~, 50/60 Hz) matches the appliance requirements.
- **Heat and Burns:** The hob surface becomes very hot during operation and remains hot due to residual heat. Avoid touching hot surfaces. Use oven mitts or pot holders.
- **Child Safety:** This appliance is equipped with a child safety lock. Activate it to prevent accidental operation by children.
- **Overheating Protection:** The hob has built-in overheating protection that automatically switches off the appliance if it becomes too hot.
- **Overflow Protection:** The hob is designed with overflow protection to prevent damage from spills.
- **Automatic Shut-off:** The hob features an automatic shut-off function for safety if left unattended for an extended period.
- **Ventilation:** Ensure adequate ventilation around the appliance during installation and operation.
- **Cleaning:** Disconnect the appliance from the power supply before cleaning. Allow it to cool completely.

3. Product Features

The vidaXL Ceramic Hob is designed for ease of use and safety, featuring:

- **Heat-Resistant Glass Surface:** Durable and safe ceramic glass surface.
- **Four Burners:** Includes 4 cooking zones that can be used individually or simultaneously.
- **Touch Control:** Intuitive sensor touch controls for precise temperature adjustment.
- **9 Power Levels:** Offers a wide range of heat settings for various cooking needs.
- **Individual Timer:** Each cooking zone has an individual timer (up to 99 minutes) with an audible signal and automatic shut-off.
- **Pause Function:** Allows you to temporarily pause cooking and resume with the same settings.
- **Residual Heat Indicator:** Warns when a cooking zone is still hot after use.
- **Child Safety Lock:** Prevents accidental activation or adjustment of controls.
- **Safety Shut-off:** Automatic shut-off for overheating and unattended operation.
- **Double and Oval Zones:** Features a double zone and an oval zone for larger cookware.



Figure 2: Cooking zone power ratings.

4. Setup and Installation

The vidaXL Ceramic Hob is designed for built-in installation. Professional installation is recommended.

4.1 Dimensions

- **Overall Dimensions (W x D x H):** 590 x 520 x 52 mm
- **Built-in Dimensions (W x D):** 560 x 500 mm

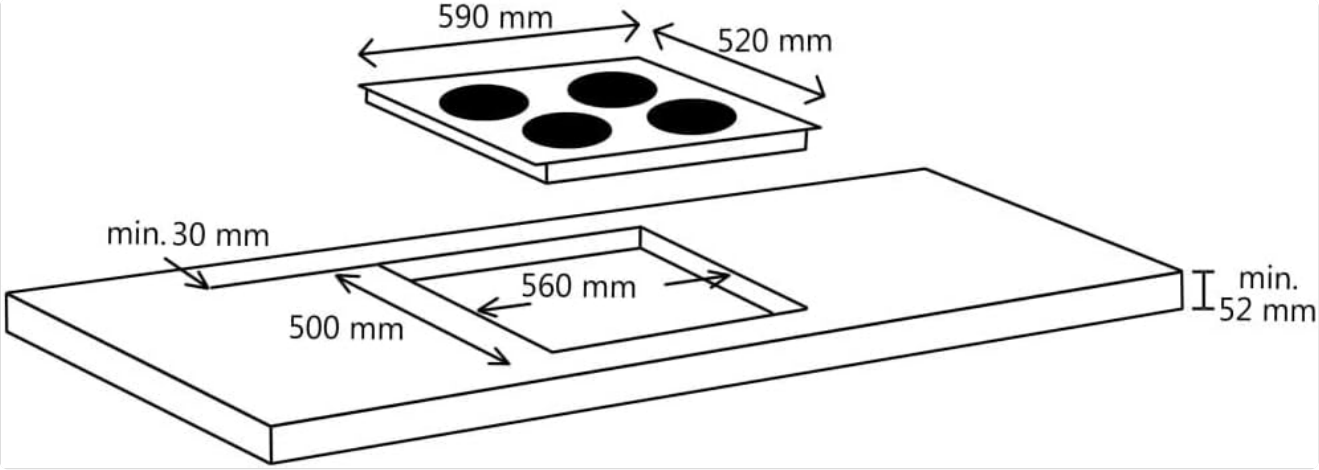


Figure 3: Installation dimensions and clearances.

4.2 Installation Guidelines

1. Ensure the countertop material is heat-resistant and stable.
2. Cut an opening in the countertop according to the specified built-in dimensions (560 x 500 mm).
3. Ensure minimum clearances are maintained as shown in Figure 3 (e.g., minimum 30mm from back wall, minimum 52mm depth).
4. Connect the hob to a dedicated electrical circuit with a separately bundled fuse/meter cabinet, ensuring it matches the 220-240V~, 50/60Hz power supply.
5. Secure the hob in the cutout using the provided mounting clips or brackets.
6. Verify that the appliance is level and stable.

5. Operating Instructions

The hob is operated via intuitive touch controls located on the front panel.

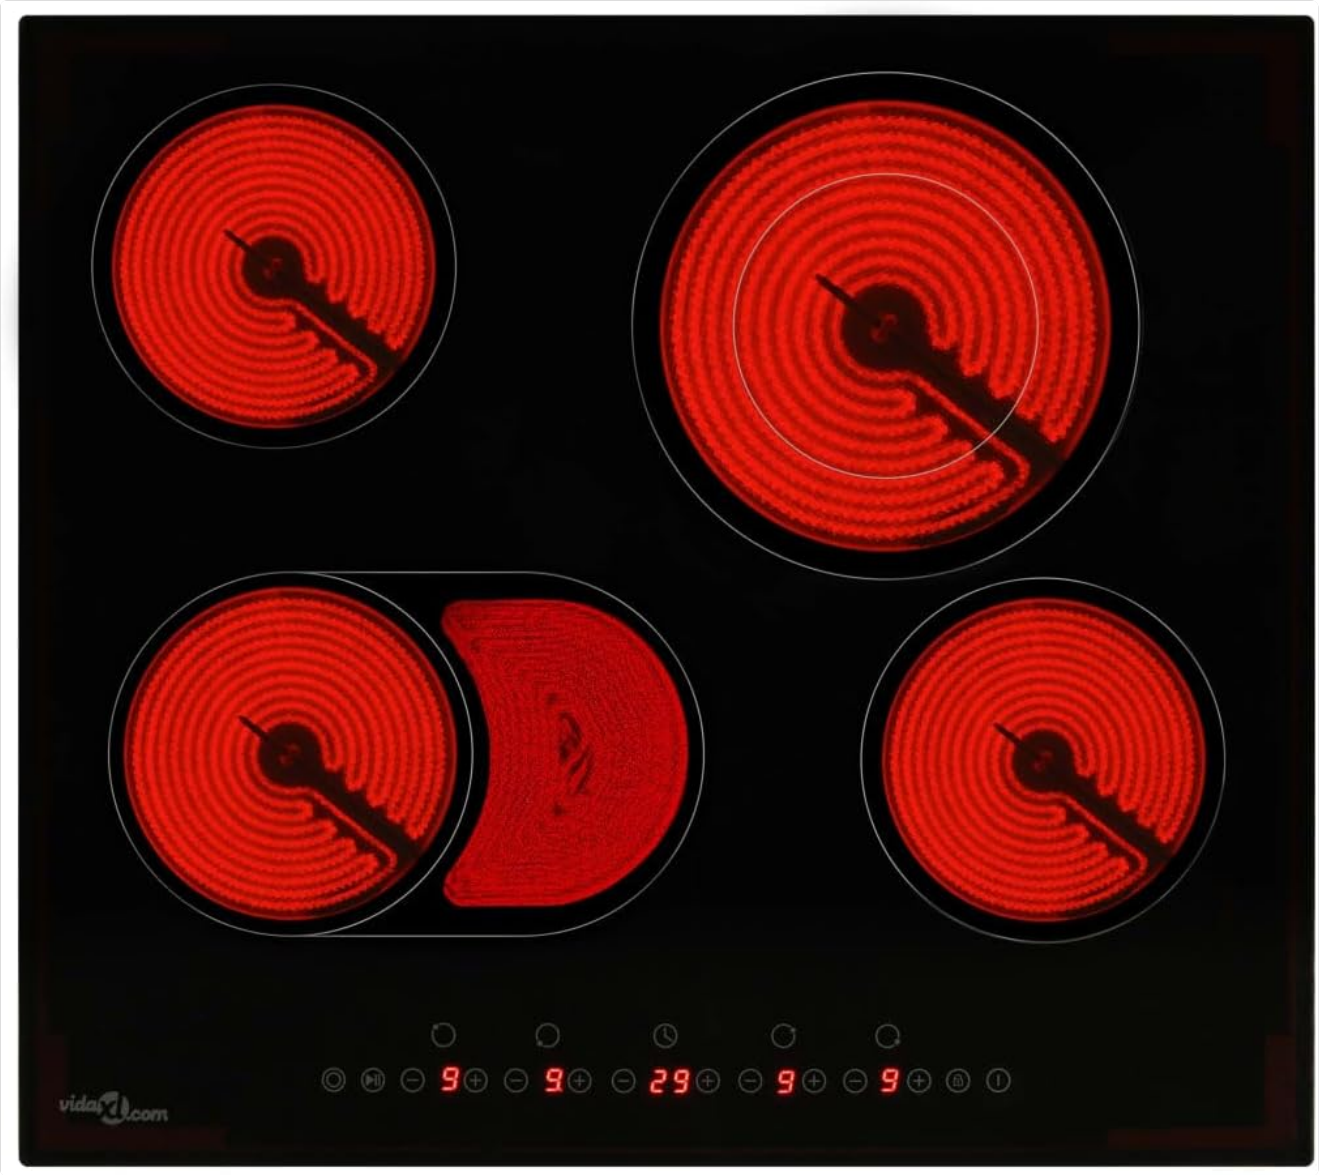


Figure 4: Touch Control Panel.

5.1 Powering On/Off

- Touch the **Power** symbol (circle with vertical line) to turn the hob on.
- Touch and hold the **Power** symbol to turn the hob off.

5.2 Selecting a Cooking Zone and Adjusting Power

1. After powering on, select the desired cooking zone by touching its corresponding zone selection button.
2. Use the **"+"** and **"-"** symbols to adjust the power level from 1 to 9.
3. For double or oval zones, touch the zone selection button again to activate the extended heating area.

5.3 Using the Timer

- Select the cooking zone for which you want to set a timer.
- Touch the **Timer** symbol (clock icon).
- Use the **"+"** and **"-"** symbols to set the desired cooking time (up to 99 minutes).
- The hob will emit an audible signal and automatically switch off the zone when the time expires.

5.4 Pause Function

- Touch the **Pause** symbol (two vertical lines) to temporarily pause all active cooking zones.

- Touch the **Pause** symbol again to resume cooking with the previous settings.

5.5 Child Safety Lock

- To activate the child safety lock, touch the **Lock** symbol (padlock icon). The controls will be locked.
- To deactivate, touch and hold the **Lock** symbol until the controls unlock.

5.6 Residual Heat Indicator

After a cooking zone is turned off, an "H" will appear on the display if the surface is still hot. Do not touch the surface until the "H" disappears.

6. Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your hob.

- **Before Cleaning:** Always ensure the hob is turned off and has completely cooled down. Disconnect from the power supply if possible.
- **Daily Cleaning:** For light spills and everyday cleaning, wipe the ceramic glass surface with a soft cloth and warm soapy water. Rinse thoroughly and dry with a clean cloth to prevent water spots.
- **Stubborn Stains:** For burnt-on food or stubborn stains, use a specialized ceramic hob cleaner and a scraper designed for glass hobs. Follow the cleaner's instructions carefully.
- **Avoid Abrasives:** Do not use abrasive sponges, scouring pads, or harsh chemical cleaners, as these can scratch or damage the glass surface.
- **Control Panel:** Wipe the touch control panel with a soft, damp cloth. Ensure it is dry before operating the hob again. The child safety lock can be used to prevent accidental activation during cleaning.

7. Troubleshooting

If you encounter issues with your hob, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; child safety lock activated.	Check power connection and circuit breaker. Deactivate child safety lock.
Cooking zone not heating.	Incorrect power level selected; zone not activated.	Ensure the correct zone is selected and power level is set above 0.
Hob switches off automatically.	Overheating protection activated; timer expired; automatic shut-off.	Allow hob to cool down. Check timer settings. This is a safety feature.
Controls are unresponsive.	Child safety lock activated; moisture on control panel.	Deactivate child safety lock. Wipe control panel dry.
"H" displayed on zone.	Residual heat indicator.	This is normal. The zone is still hot. Do not touch.

If the problem persists after attempting these solutions, please contact vidaXL customer support or a qualified technician.

8. Specifications

Feature	Detail
Brand	vidaXL
Model	50785
Installation Type	Built-in
Form Factor	Drop in
Number of Heating Elements	4
Total Power	6600 W
Power Supply	220–240 V~, 50/60 Hz
Power Levels	9
Control Type	Sensor Touch Control
Burner Type	Ceramic
Material	Heat-resistant Ceramic and Glass
Overall Dimensions (W x D x H)	590 x 520 x 52 mm
Built-in Dimensions (W x D)	560 x 500 mm
Weight	10.07 kg
Special Features	Individual Timer (99 min), Pause Function, Residual Heat Warning, Child Safety Lock, Overheating Protection, Overflow Protection, Automatic Shut-off

9. Warranty and Support

For warranty information and customer support, please refer to the documentation provided with your purchase or contact vidaXL directly through their official website or customer service channels. Keep your proof of purchase for any warranty claims.

vidaXL Contact Information:

- **Website:** www.vidaxl.com
- Refer to the website for regional contact details and support options.

© 2024 vidaXL. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07SR98BGD

More documents and user manuals: **https://manuals.plus/**