WAROOM B07T4Z8QMG

WAROOM Patio Couch PE Rattan 3-Seat Outdoor Sofa Instruction Manual

Brand: WAROOM | **Model:** B07T4Z8QMG

1. Introduction

Thank you for choosing the WAROOM Patio Couch PE Rattan 3-Seat Outdoor Sofa. This manual provides essential information for the safe assembly, operation, maintenance, and care of your new outdoor furniture. Please read all instructions carefully before assembly and retain this manual for future reference.

2. Safety Information

- Keep away from open flames or high heat sources to prevent damage to materials.
- Allow cushions to fully expand to their final size before use.
- Supervise children and pets around the sofa to ensure their safety.
- Ensure all bolts are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight limit of 750 pounds.

3. Package Contents

Your WAROOM Patio Couch package includes the following items:

- 3-Seat Sofa Frame Components (disassembled)
- 6 Seat Cushions (4 inches thick, high resilience sponge, non-slip silicone points)
- 3 Back Cushions
- 2 Accent Pillows
- 1 Furniture Cover (water-repellent)
- All necessary hardware and assembly tools (Allen wrench, bolts, etc.)

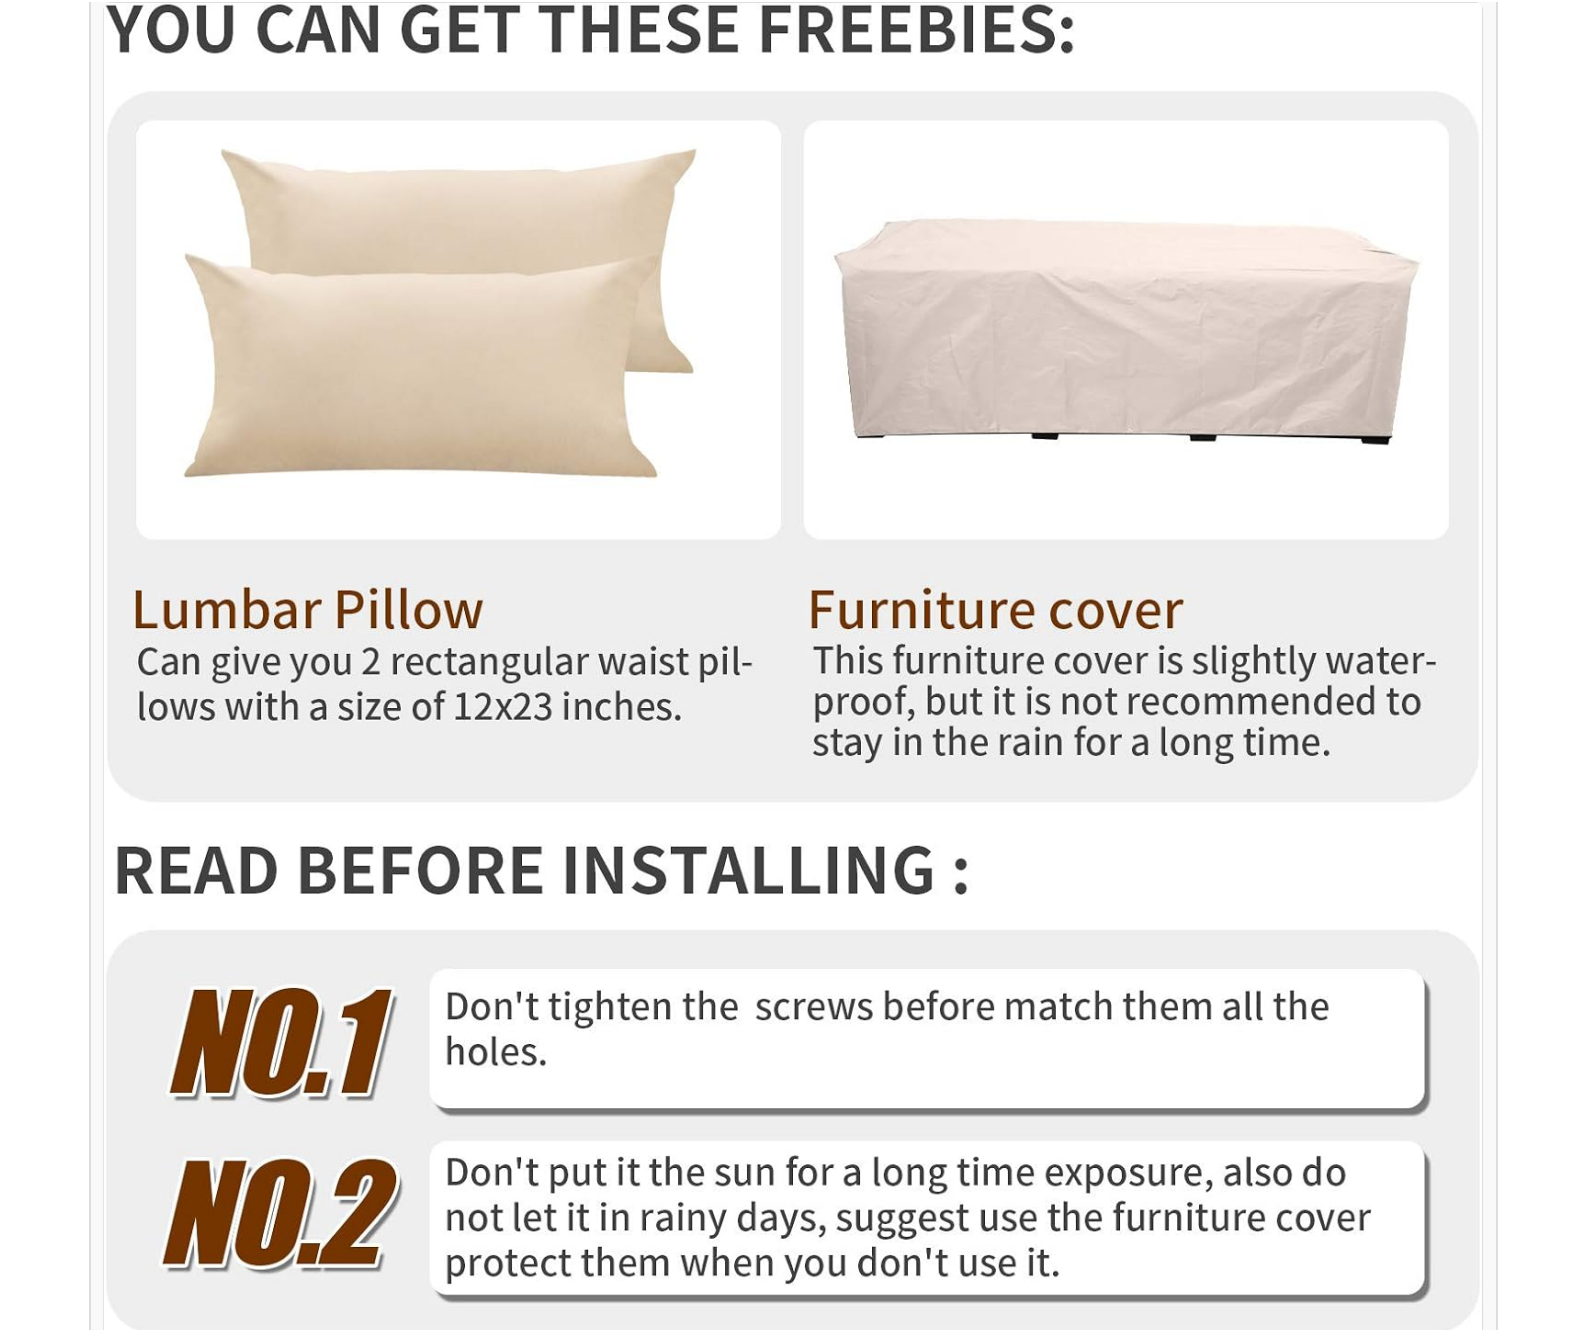


Image: Included accessories such as two lumbar pillows and a furniture cover.

4. Setup and Assembly

Assembly is required for this product. Please follow the step-by-step instructions below. Each component is clearly labeled to match the assembly tags. It is recommended to tighten screws gradually to ensure proper alignment before fully securing them. Assembly can typically be completed by one person.

Assembly Video Guide

Your browser does not support the video tag.

Video: A detailed assembly guide for the WAROOM 3-seater patio couch. This video demonstrates the step-by-step process of putting together the sofa frame and attaching the components.

Key Assembly Tips:

- Do not tighten the screws before matching them all to the holes.
- Use the provided ratchet tool for easier tightening.
- The sofa consists of three separate interlocking pieces for the base, allowing for flexible arrangement.



Images: Adjustable sofa feet for stability on uneven surfaces and a close-up of the durable PE Rattan weaving.

5. Operating Instructions

The WAROOM Patio Couch is designed for comfortable outdoor seating. Simply place the cushions on the assembled frame. The seat cushions feature silicone anti-slip points on the bottom to keep them securely in place during use.



Image: Detailed view of the cushion features, including the breathable cover with zipper and the anti-skid silicone points on the underside.

6. Maintenance and Care

Proper care will extend the life and appearance of your patio couch:

- **Cushion Covers:** The breathable cushion covers with zippers are removable and machine washable. For best results, hand wash or use a gentle machine cycle. Do not bleach.
- **Cushion Drying:** When cushions are wet, open cushion zippers and prop them up to dry to maintain quality and prevent mildew.
- **Frame:** Wipe the rattan frame with a damp cloth and mild soap. Rinse thoroughly and dry completely.
- **Storage:** Store cushions indoors or use the provided furniture cover when not in use, especially during prolonged periods of rain, harsh weather, or direct sun exposure. Do not leave the furniture cover on for extended periods in heavy rain.
- **Sun Exposure:** Avoid prolonged direct sun exposure to prevent fading of cushions and rattan.



Image: Water beading on the water-repellent cushion fabric, demonstrating its protective qualities.

7. Troubleshooting

If you encounter any issues with your WAROOM Patio Couch, please refer to the following common solutions:

Problem	Possible Cause	Solution
Sofa feels wobbly after assembly.	Loose bolts or uneven surface.	Ensure all bolts are fully tightened. Adjust the sofa feet to level the frame on uneven surfaces.
Cushions slide off the frame.	Cushions not properly aligned or anti-slip points not engaged.	Ensure cushions are placed with the silicone anti-slip points facing down on the frame.
Water stains on cushions after rain.	Prolonged exposure to heavy rain or cover not used.	Clean cushion covers as per maintenance instructions. Use the furniture cover during rain or store cushions indoors.

8. Specifications

Feature	Detail
Brand	WAROOM
Model Number	B07T4Z8QMG
UPC	745695572950
Product Dimensions (D x W x H)	30"D x 79"W x 29"H
Seating Capacity	3

Feature	Detail

Weight Limit	750 Pounds
Frame Material	Alloy Steel (rust-resistant), PE Rattan
Cushion Material	Polyester Fabric (water-repellent, UV-resistant), Foam and Cotton Fill
Cushion Thickness	4 inches (seat cushions)
Color	Brown (Rattan), Beige (Cushions)
Assembly Required	Yes
Included Components	Sofa, Cushions, 2 Accent Pillows, Furniture Cover, Hardware, Tools



Image: Detailed product dimensions including depth, width, and height.

9. Warranty and Support

This WAROOM Patio Couch comes with a**90-day limited manufacturer's warranty**. For warranty claims, product support, or any questions not covered in this manual, please contact WAROOM customer service through your original purchase platform or visit the official WAROOM store online.

WAROOM Store: Visit the WAROOM Store

© 2026 WAROOM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question