Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

iJoy B07T94J9Q1

iJoy Bluetooth Wireless Sport Earbuds User Manual

Brand: iJoy | Model: B07T94J9Q1

Introduction

Thank you for choosing the iJoy Bluetooth Wireless Sport Earbuds. These earbuds are designed to provide a high-quality audio experience with the convenience of wireless connectivity, perfect for workouts, running, gym activities, and general use. This manual will guide you through the setup, operation, and maintenance of your new earbuds.

Product Overview

Key Features

- **Water Protection:** IPX4 sweatproof rating to withstand sweat or light rain, suitable for various activities.
- **Compatibility:** Compatible with all Bluetooth-enabled devices including iPhone, iPad, Samsung, Motorola, Google, notebooks, and Android devices.
- **Long Lasting Battery:** High-quality 80mAh battery offering up to 2 hours of playtime and a quick 2-hour charge time.
- **Extended Range:** Enjoy music up to 10 meters (33 feet) away from your device.
- **Magnetic Attraction:** Earbuds attach to each other like a necklace, preventing tangling and securing them from falling off.
- **Comfortable Fit:** Unique silicone ear tips designed for comfort and to minimize falling out during activity.
- **Tangle-Free Cable:** Designed to prevent tangling.
- **Easy-to-Use Controls:** Integrated buttons for play/pause, call answer/hang-up, track skip, and volume adjustment.


Visual Guide




Front view of the iJoy Bluetooth Wireless Sport Earbuds, showcasing the inline control module and the earbuds themselves.



The iJoy earbuds with their magnetic backs connected, forming a loop for secure wear around the neck when not in use.

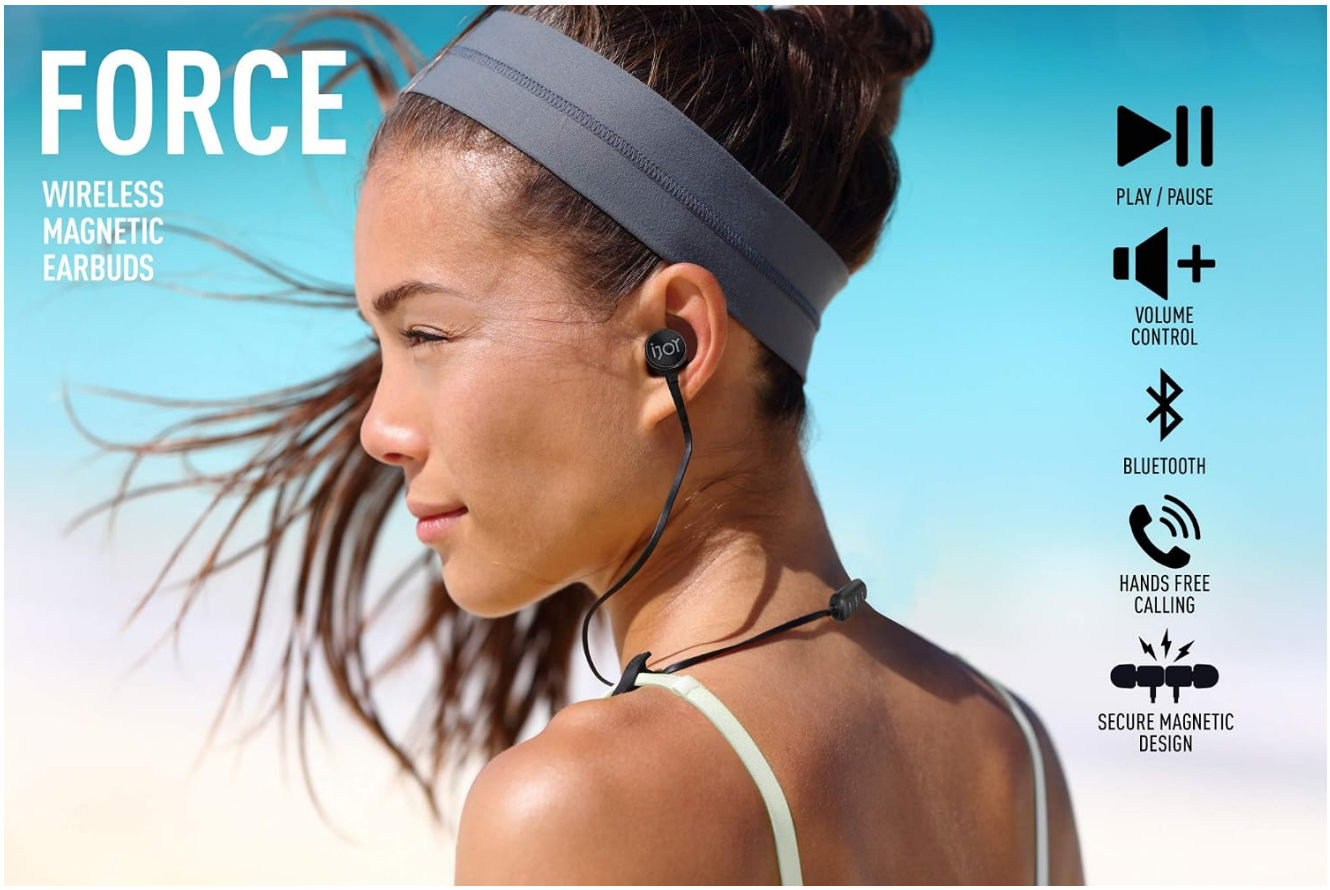

A user wearing the iJoy Force Wireless Magnetic Earbuds, highlighting features such as Play/Pause, Volume Control, Bluetooth connectivity, Hands-Free Calling, and Secure Magnetic Design.

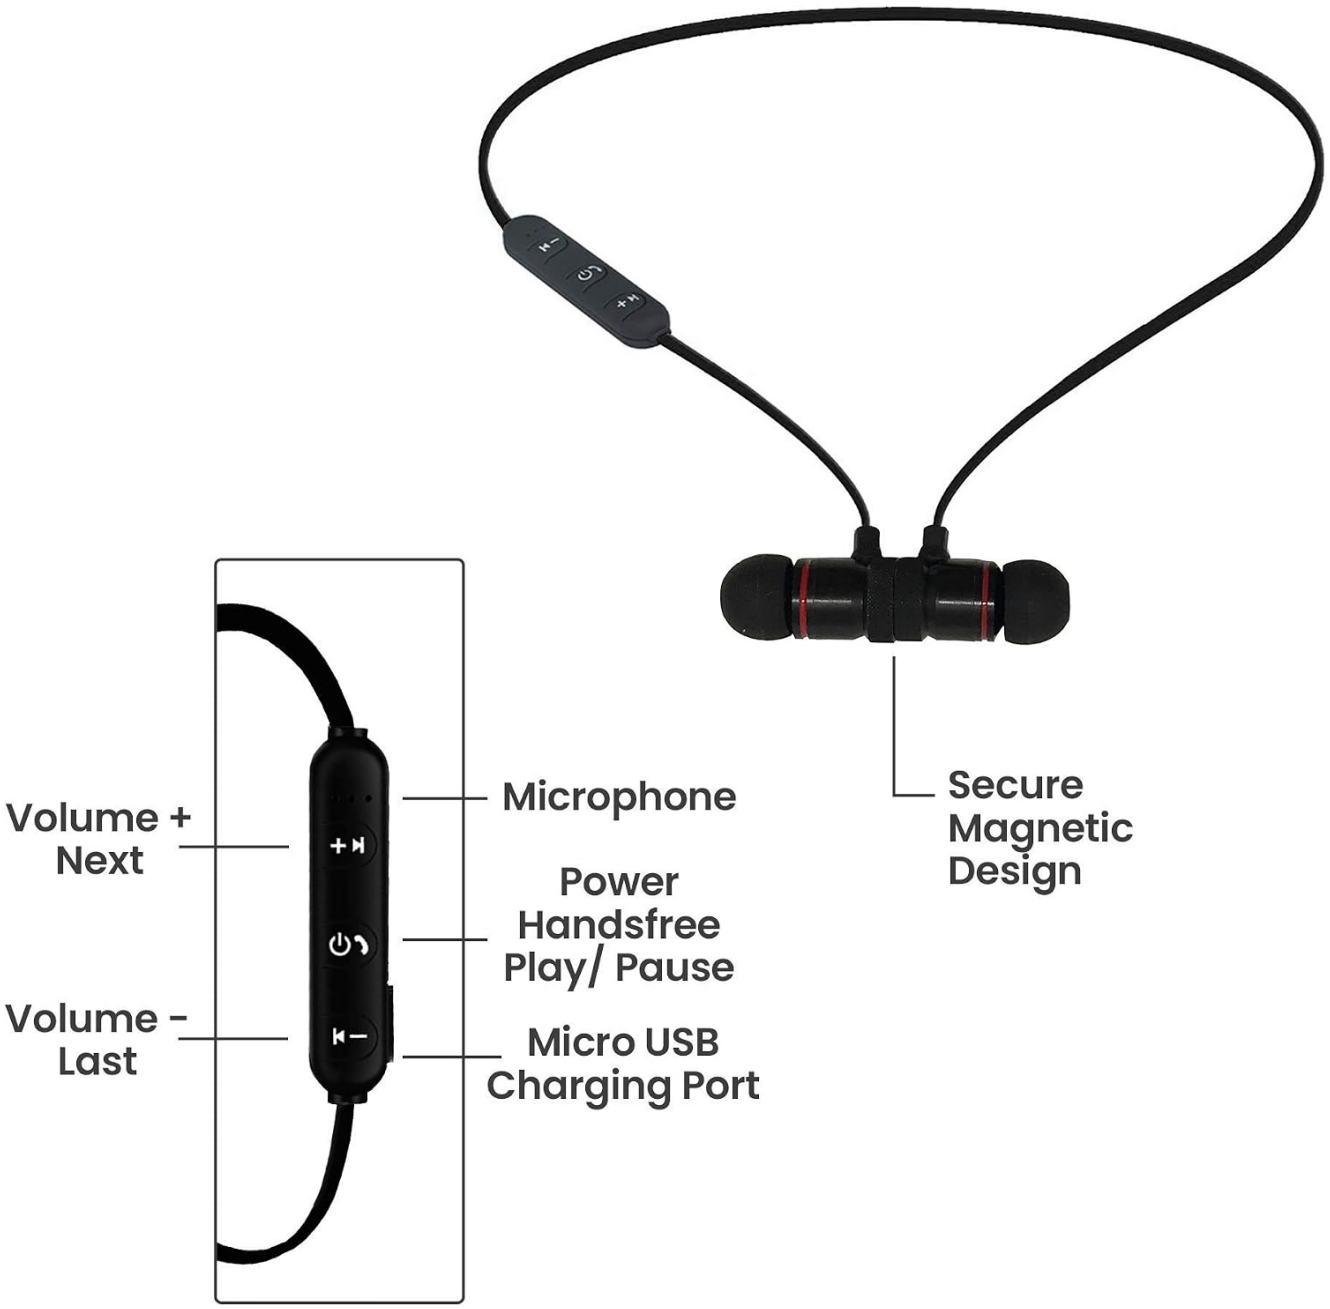

Detailed diagram illustrating the functions of the inline control buttons (Volume +, Next, Power/Handsfree/Play/Pause, Volume -, Last) and the Micro USB Charging Port, along with the Secure Magnetic Design of the earbuds.



Lightweight & ergonomic design, sit perfectly in your ears for a comfortable listening experience

A man stretching on a running track, demonstrating the comfortable and secure fit of the iJoy earbuds during physical activity.

For additional visual demonstrations, please refer to official product videos available from the manufacturer or authorized sellers.

Setup Guide

1. Charging Your Earbuds

1. Locate the Micro USB charging port on the inline control module.
2. Connect the provided USB charging cable to the earbuds and plug the other end into a USB power source (e.g., computer USB port, wall adapter).
3. The LED indicator light will illuminate to show charging status.
4. A full charge takes approximately 2 hours. The LED indicator will change or turn off once charging is complete.

2. Bluetooth Pairing

1. Ensure the earbuds are fully charged and turned off.

2. Press and hold the multi-function button (usually the power button) on the inline control module until the LED indicator light flashes red and blue alternately. This indicates pairing mode.
3. On your Bluetooth-enabled device (smartphone, tablet, laptop), go to the Bluetooth settings.
4. Turn on Bluetooth and search for available devices.
5. Select "iJoy Force" or a similar name from the list of found devices.
6. Once connected, the LED indicator on the earbuds will typically flash blue slowly or turn solid blue. A voice prompt may also confirm the connection.
7. If prompted for a password, enter "0000".

Your earbuds are now paired and ready for use. They will automatically reconnect to the last paired device when turned on, if the device's Bluetooth is active and within range.

Operating Instructions

Button Controls

Button/Action	Function
Power Button (Multi-function)	Press and hold: Power On/Off Short press (Music): Play/Pause Short press (Call): Answer/End Call Long press (Call): Reject Call
Volume Up (+) / Next Track	Short press: Increase Volume Long press: Next Track
Volume Down (-) / Previous Track	Short press: Decrease Volume Long press: Previous Track

Music Playback

Once paired, open your music player application on your device. Use the inline controls to manage your audio:

- Press the Power button once to Play or Pause music.
- Short press the '+' button to increase volume.
- Short press the '-' button to decrease volume.
- Long press the '+' button to skip to the next track.
- Long press the '-' button to go to the previous track.

Making and Receiving Calls

The built-in microphone allows for hands-free calling:

- When a call comes in, press the Power button once to answer.
- To end a call, press the Power button once again.
- To reject an incoming call, press and hold the Power button for approximately 2 seconds.
- To redial the last number, double-press the Power button.

Maintenance

Cleaning

To maintain the performance and longevity of your earbuds:

- Wipe the earbuds and cable with a soft, dry, lint-free cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Gently remove any earwax or debris from the ear tips using a small brush or cotton swab.

Water Resistance (IPX4)

The iJoy Sport Earbuds feature an IPX4 water protection rating, meaning they are resistant to splashing water from any direction. This makes them suitable for use during workouts where sweat is present or in light rain. However, please note:

- Do not submerge the earbuds in water.
- Do not expose them to pressurized water or high-velocity water, such as from a shower or faucet.
- Do not use them in saunas or steam rooms.
- Ensure the charging port cover is securely closed when not charging to maintain water resistance.
- Dry the earbuds thoroughly before charging if they have been exposed to moisture.

Troubleshooting

Problem	Possible Solution
Earbuds won't turn on.	Ensure the earbuds are fully charged. Connect them to a power source and check the charging indicator.
Cannot pair with device.	Make sure the earbuds are in pairing mode (flashing red and blue). Ensure Bluetooth is enabled on your device. Move the earbuds closer to your device. Forget/delete "iJoy Force" from your device's Bluetooth list and try pairing again. Restart both the earbuds and your device.
No sound or low volume.	Increase the volume on both the earbuds and your connected device. Ensure the earbuds are properly connected to your device. Check if the audio output on your device is set to the earbuds. Try playing different audio files or apps.
Connection is unstable or drops frequently.	Ensure your device is within the 10-meter (33 feet) Bluetooth range. Avoid obstacles between the earbuds and your device (e.g., walls, large metal objects). Minimize interference from other wireless devices (Wi-Fi routers, other Bluetooth devices). Try re-pairing the earbuds.
Microphone not working.	Ensure the earbuds are properly connected for calls. Check microphone settings on your device. Test the microphone in a quiet environment.

Specifications

Feature	Detail
Brand	iJoy
Model	B07T94J9Q1
Color	Black
Ear Placement	In Ear
Form Factor	In Ear
Noise Control	None
Battery Capacity	80mAh
Playtime	Up to 2 hours
Charge Time	Approx. 2 hours
Wireless Range	Up to 10 meters (33 feet)
Water Resistance Rating	IPX4 (Sweatproof/Splash resistant)

Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official iJoy website. If you encounter any issues not covered in this manual, please contact iJoy customer service for assistance.
You can often find support resources, FAQs, and contact information on the brand's official website or through the retailer where the product was purchased.

© 2024 iJoy. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07T94J9Q1

More documents and user manuals: **https://manuals.plus/**