Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Noma B07TH94QYC

Noma Power Bar with Surge Protection User Manual

Model: B07TH94QYC

Introduction

This manual provides essential information for the safe and efficient operation of your Noma Power Bar with Surge Protection. Please read this manual thoroughly before using the product and retain it for future reference.
The Noma Power Bar is designed to provide multiple grounded outlets and USB charging ports, along with surge protection, to safeguard your electronic devices from power fluctuations.

Safety Information

Always follow basic safety precautions when using electrical products to reduce the risk of fire, electric shock, and injury to persons.

- Do not exceed the electrical ratings of the power bar.
- Do not use in wet environments or near water.
- Do not open or modify the power bar. There are no user-serviceable parts inside.
- Keep out of reach of children.
- Ensure the power bar is properly grounded.
- Avoid running the cord under carpets or in high-traffic areas where it could be a tripping hazard.

Product Features

Your Noma Power Bar comes equipped with the following features:

- Six (6) grounded AC outlets for connecting multiple devices.
- Two (2) Fast Charge Dual USB outlets (1A) for recharging electronic devices like cell phones and tablets.
- 900 joules of surge protection to protect connected electronics from power surges.
- A 4-foot (1.2 m) cord length for flexible placement.
- Right-angle plug design for fitting behind furniture and in tight spaces.

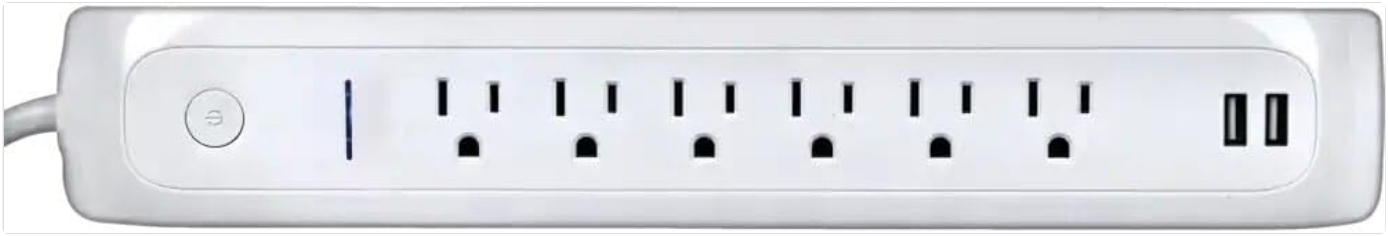


Image: Top-down view of the Noma Power Bar, highlighting the six grounded AC outlets and two USB charging ports.

Setup

Follow these steps to set up your Noma Power Bar:

1. Unpack the power bar from its packaging.
2. Locate a standard 120V AC wall outlet.
3. Plug the power bar's cord into the wall outlet. The right-angle plug is designed for convenience in tight spaces.
4. Ensure the power bar is placed on a stable, dry surface, away from heat sources or direct sunlight.
5. The power indicator light (if present) on the power bar should illuminate, indicating it is receiving power and surge protection is active.

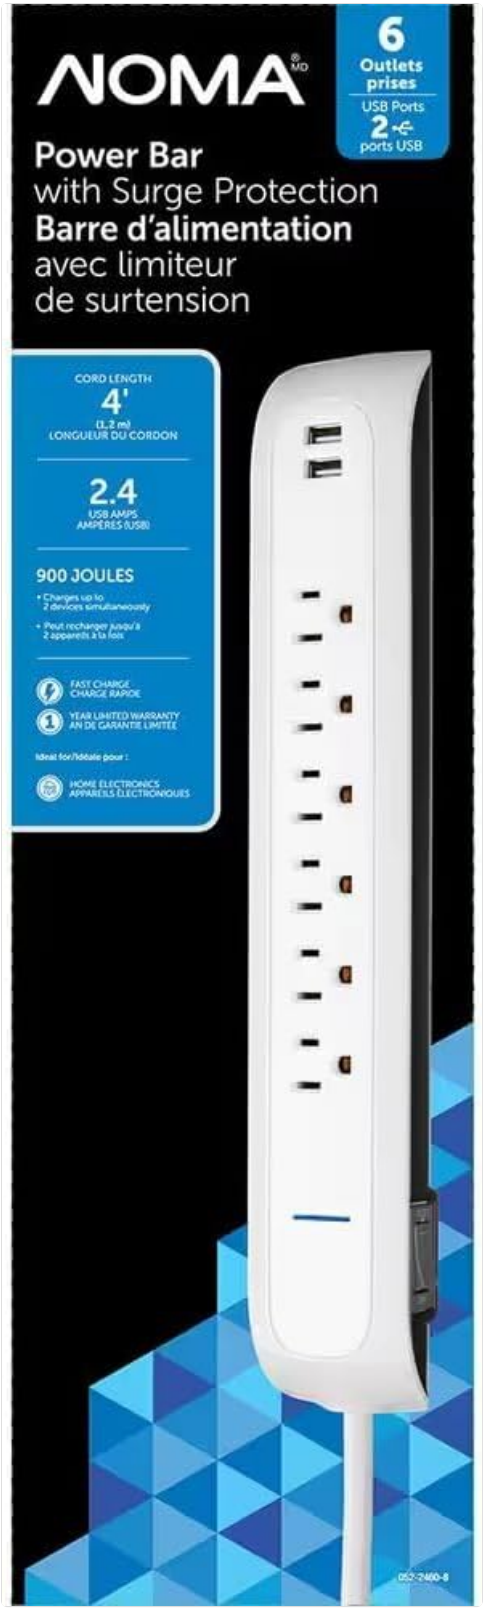


Image: The Noma Power Bar shown in its retail packaging, illustrating its compact design and features.

Operating Instructions

Using your Noma Power Bar is straightforward:

- **Connecting Devices:** Plug your electronic devices into any of the six grounded AC outlets.
- **USB Charging:** Connect your USB-powered devices (e.g., smartphones, tablets) to the two USB ports using their respective charging cables. The USB ports provide 2.4 AMPS for fast charging.
- **Power Indicator:** A light on the power bar indicates that it is powered on and providing surge protection. If this light

is off, check the connection to the wall outlet or if the circuit breaker has tripped.

- **Overload Protection:** The power bar is equipped with an overload protection feature. If the total power draw of connected devices exceeds the power bar's maximum capacity, the circuit breaker may trip, cutting power to the outlets. To reset, unplug some devices, then press the reset button (if available, typically a small button near the cord).



Image: The Noma Power Bar in use, demonstrating how devices are plugged into both AC outlets and USB ports.

Maintenance

Proper maintenance ensures the longevity and safe operation of your power bar:

- **Cleaning:** Disconnect the power bar from the wall outlet before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or aerosols.
- **Inspection:** Periodically inspect the power cord and the power bar for any signs of damage, such as frayed wires, cracks, or loose connections. If damage is found, discontinue use immediately.
- **Storage:** When not in use for extended periods, store the power bar in a cool, dry place, away from direct sunlight and moisture.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
No power to outlets/USB ports.	Power bar not plugged in; wall outlet has no power; circuit breaker tripped.	Ensure power bar is securely plugged into a live wall outlet. Check your home's circuit breaker. If the power bar has a reset button, press it after unplugging some devices.
Devices not charging via USB.	USB cable faulty; device not compatible; insufficient power.	Try a different USB cable. Ensure your device is compatible with USB charging. Reduce the number of devices connected to the power bar.
Surge protection indicator light is off.	Surge protection has been compromised or power bar is not receiving power.	If the power bar is plugged in and receiving power but the light is off, the surge protection may have absorbed a significant surge and is no longer active. Replace the power bar.

Specifications

Attribute	Detail
Brand	Noma
Manufacturer	NOMA
Compatible Devices	Smartphone, Tablet, Laptop, and other electronics
Special features	Fast charging
Voltage	240 Volts *(Note: Typically 120V for North American power bars, 240V might be a typo in source data or for international models. User should verify local voltage.)*
Power source type	corded-electric
Number of Ports	6 (AC outlets)
Total USB Ports	2
Material Type	Plastic
Cord Length	4' (1.2 m)
Surge Protection	900 Joules
Colour	Black
ASIN	B07TH94QYC

Warranty and Support

Noma products are manufactured to high-quality standards. For information regarding warranty coverage, technical support, or replacement parts, please contact Noma customer service.
Please have your product model number (B07TH94QYC) and purchase date available when contacting support.
Contact information for Noma can typically be found on their official website or on the product packaging.

© 2024 Noma. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07TH94QYC

More documents and user manuals: **https://manuals.plus/**