Anker AK-A2503013

Anker 313 Wireless Charger (Pad) Instruction Manual

Model: AK-A2503013 | Brand: Anker

Product Overview

The Anker 313 Wireless Charger (Pad) is a Qi-Certified device designed for convenient and fast wireless charging of compatible smartphones and earbuds. It offers a maximum output of 10W for Samsung devices and 7.5W for iPhones, along with 5W for other Qi-enabled phones and wireless earbuds.

Key Features:

- **The Anker Advantage:** Enjoyed by over 50 million users worldwide, our leading technology will change the way you charge.
- **Complete Charging Convenience:** Instantly charge your phone or earbuds simply by placing them in the center of PowerWave Pad. Never fuss around with plugging and unplugging cables again, just set down and power up.
- **Universal Compatibility:** PowerWave Pad provides 10W output for Samsung Galaxy, 7.5W for iPhone, and 5W for other phones or wireless earbuds (including AirPods).
- **Through-Case Charging:** Don't fumble with your phone case. PowerWave charges directly through protective cases up to 5 mm thick (not including cases with magnetic or metal attachments).
- **What You Get:** PowerWave Pad, 4 ft Micro USB Cable, welcome guide, worry-free 18-month warranty, and friendly customer service.

Setup Guide

What's in the Box:

- Anker 313 Wireless Charger (Pad)
- 4 ft Micro USB Cable
- Welcome Guide

Connecting to Power:

Connect the provided 4 ft Micro USB Cable to the Micro USB port on the Anker 313 Wireless Charger. Plug the USB-A end of the cable into a compatible wall adapter. For optimal fast charging, use a Quick Charge 2.0/3.0 adapter (not included). Avoid using standard 5V/1A Apple wall adapters as they may not provide sufficient power for fast charging.



Image: Anker 313 Wireless Charger Pad with included Micro USB cable.



Image: Guide for choosing the best power adapter for optimal charging.

Operating Instructions

Placing Your Device:

To begin charging, simply place your Qi-enabled smartphone or earbuds in the center of the PowerWave Pad. The charger is designed for effortless use, eliminating the need to plug and unplug cables.



Image: Simply place your device on the pad to begin charging.

Charging Indicators:

The PowerWave Pad features a subtle LED indicator to communicate its status:

- **Solid Blue Light:** Indicates normal charging is in progress.
- **Flashing Blue Light:** Foreign metal object detected. Remove any metal objects from the charging pad.
- **Flashing Green Light:** Incompatible adapter or cable connected. Ensure you are using a compatible Quick Charge 2.0/3.0 adapter.
- **Solid Blue (3 seconds), then Off:** Connected to power and ready.



Image: Sleep-friendly LED indicator for charging status.

Through-Case Charging:

The PowerWave Pad can charge directly through most protective phone cases up to 5 mm thick. However, cases with magnetic or metal attachments (e.g., PopSockets, metal plates, credit cards) may interfere with charging and should be removed.



Image: Information on through-case charging capabilities and limitations.

Compatibility

The Anker 313 Wireless Charger offers universal compatibility with a wide range of Qi-enabled devices:

- **10W Fast Charge Mode:** For Samsung Galaxy devices (e.g., S20, S10+, S9, Note 10, Note 8). Requires a Quick Charge 2.0/3.0 charger.
- **7.5W Fast Charge Mode:** For iPhone devices (e.g., iPhone 16 Plus/15 Plus/14 Plus/12, iPhone 11, iPhone XS, iPhone X, iPhone 8). Requires a Quick Charge 2.0/3.0 charger.
- **5W Standard Charge Mode:** For other Qi-enabled phones (e.g., LG V50/V40/V30+, Sony Xperia XZ3) and wireless earbuds (e.g., AirPods, Galaxy Buds, Pixel Buds).



Image: Universal compatibility chart for different devices and charging speeds.

Safety Features

The Anker 313 Wireless Charger incorporates Anker's MultiProtect safety system, ensuring a safe charging experience. Key safety features include:

- Cell Phone Battery Safety
- Radiation Shielding
- Foreign Object Detection
- Temperature Control
- Short-Circuit Protection

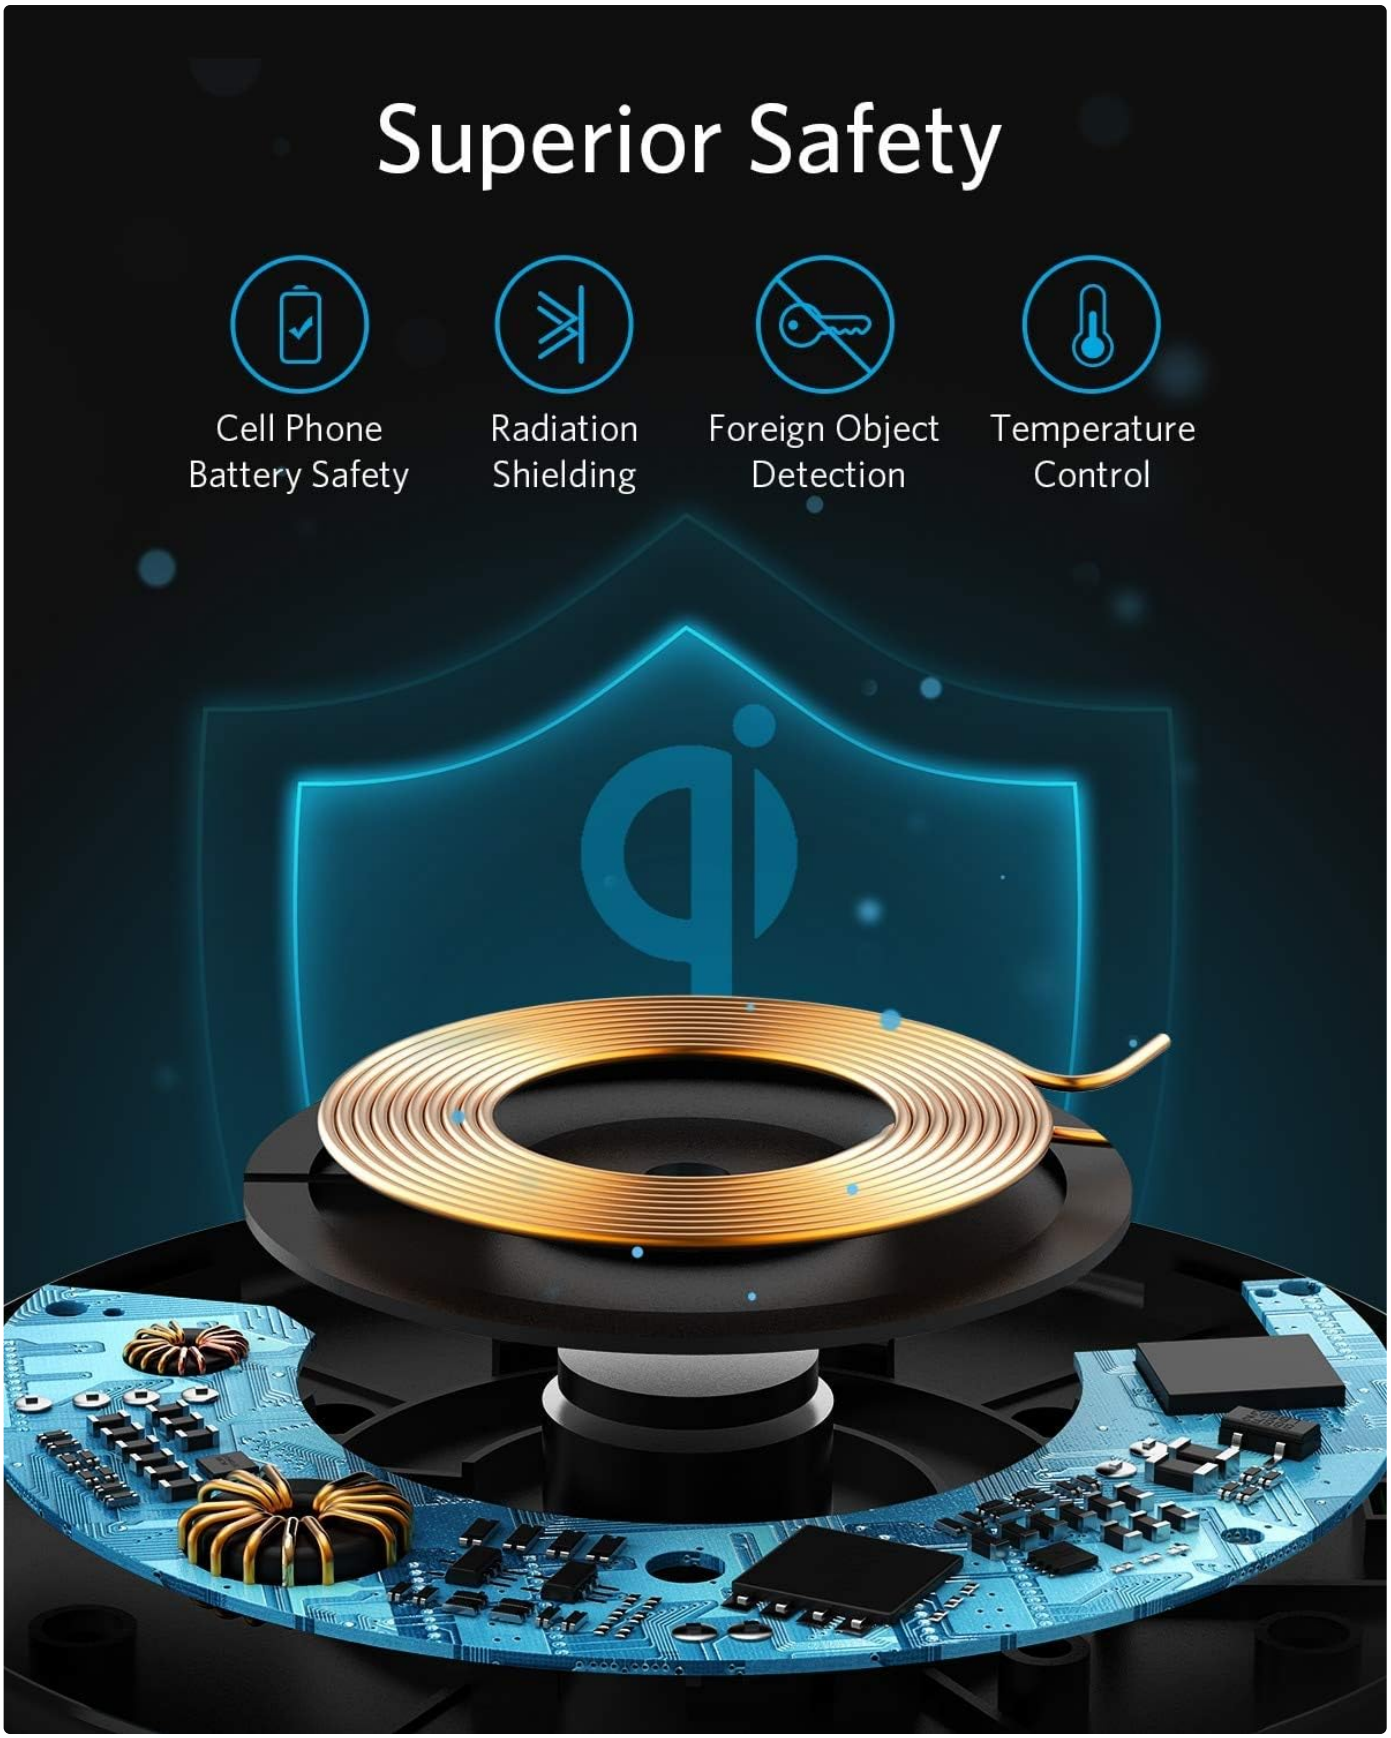


Image: Overview of the superior safety features built into the charger.

Maintenance

To ensure the longevity and optimal performance of your Anker 313 Wireless Charger, follow these simple maintenance guidelines:

- Keep the charging pad clean and free of dust and debris. Use a soft, dry cloth for cleaning.
- Avoid exposing the device to extreme temperatures, direct sunlight, or moisture.
- Do not attempt to disassemble or repair the charger yourself. Contact customer service for assistance.

Troubleshooting

Device Not Charging:

- Ensure the charging pad is properly connected to a compatible power adapter (Quick Charge 2.0/3.0 recommended).
- Verify that your device is Qi-enabled and placed directly in the center of the charging pad.
- Remove any phone cases thicker than 5 mm or cases with metal/magnetic attachments.
- Check for any foreign metal objects on the charging pad that might be interfering with charging (indicated by flashing blue light).

Slow Charging:

- Confirm that you are using a Quick Charge 2.0/3.0 wall adapter. Standard 5V/1A adapters may result in slower charging speeds.
- Ensure your device is properly aligned on the center of the pad.
- Remove any thick or incompatible phone cases.

For more detailed troubleshooting, refer to theTroubleshooting Guide (PDF).

Specifications

Feature	Detail
Product Dimensions	3.94 x 3.94 x 0.39 inches
Item Weight	2.4 ounces
ASIN	B07THHQMHM
Item Model Number	AK-A2503013
Batteries	1 Lithium Polymer batteries required.
Date First Available	June 25, 2019

Feature	Detail
Manufacturer	Anker
Country of Origin	China
Brand	Anker
Connectivity Technology	Wireless
Connector Type	Micro USB
Compatible Devices	iPhone 15 / 15 Pro / 14 / 14 Plus / 14 Pro / 14 Pro Max / 13 mini / 13 / 13 Pro / 13 Pro Max / 12 mini / 12 / 12 Pro / 12 Pro Max / SE (2nd Gen) and more.
Compatible Phone Models	iPhone 15 / 15 Pro / 14 / 14 Plus / 14 Pro / 14 Pro Max / 13 mini / 13 / 13 Pro / 13 Pro Max / 12 mini / 12 / 12 Pro / 12 Pro Max / SE (2nd Gen) and more.
Included Components	1 (PowerWave Pad)
Special Feature	Fast Charging, Charging Indicator
Color	Black
Input Voltage	240 Volts (AC)
Mounting Type	Tabletop Mount

Warranty & Support

The Anker 313 Wireless Charger comes with a worry-free 18-month warranty.

For any questions, technical support, or customer service inquiries, please refer to the official User Guide (PDF) or visit the Anker Store on Amazon.

© 2024 Anker Innovations Limited. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question