PURPLE LEAF 3-Seat Deluxe Outdoor Patio Porch Swing 74.4"(W) X 50.3"(D)

PURPLE LEAF 3-Seat Deluxe Outdoor Patio Porch Swing Instruction Manual

Model: 74.4"(W) X 50.3"(D)

1. Introduction

Thank you for choosing the PURPLE LEAF 3-Seat Deluxe Outdoor Patio Porch Swing. This manual provides essential information for the safe assembly, operation, and maintenance of your new porch swing. Please read these instructions carefully before assembly and retain them for future reference.



Image 1: The PURPLE LEAF 3-Seat Deluxe Outdoor Patio Porch Swing, showcasing its design and adjustable canopy.

2. Safety Information

- Ensure all bolts and nuts are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight capacity of 750 lbs (approximately 3 people).
- Keep children under supervision when near or using the swing.
- Avoid standing on the swing or using it for purposes other than its intended design.
- In strong winds or adverse weather conditions, secure the canopy or remove it to prevent damage.
- Place the swing on a level, stable surface to prevent tipping.

3. Package Contents

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer service.

- Main Frame Components (legs, crossbars)
- Swing Seat Frame
- Adjustable Canopy Fabric and Frame
- Seat Cushions and Lumbar Pillow
- Suspension Springs
- Foldable Side Tables (2)
- Solar Lights (if included with your model)
- Hardware Pack (bolts, nuts, washers, caps, wrenches)

4. Assembly Instructions

Assembly typically requires two people. Follow these steps carefully. Do not fully tighten any bolts until instructed.

Step 1: Assemble the Main Frame

1. Connect the main frame components using the provided bolts and nuts. Keep all connections loose at this stage.
2. Attach the back support bar (F) to the frame. These bolts can be tightened at this point.
3. Attach the side panels (D) to the main frame. It may be easier to install the top bolt on one side, then the bottom bolt on the other side, before inserting all four bolts. Ensure all four bolts are in place before tightening.
4. Once all frame components are loosely assembled, gradually tighten all bolts, starting from the bottom and working upwards. Install the M8 caps (Z) on the top frame bolts.



Image 2: Illustration of the upgraded aluminum pole construction, highlighting its stability and load-bearing capacity.

Step 2: Prepare the Swing Seat

- Ensure the flat part of the back frame faces the seat.
- Use the eight plastic spacers (K) on the J and J1 side arm supports, placing them between the side arms and the back/seat.
- **Do not attach the swing seat to the main frame yet.** This will make canopy installation easier.



Image 3: Detail of the robust compound spring, designed for smooth and durable swinging motion.

Step 3: Install the Canopy

1. Attach one side of the canopy fabric to its frame.
2. It may be helpful to upend the swing frame with the attached canopy side at the top. Step down on the canopy frame (now on the ground) and lift the main swing frame to slide the canopy into position on the plastic gears.
3. Upright the swing and install and tighten the two large knobs, ensuring the canopy angle is matched on both sides.

Step 4: Attach the Swing Seat

1. Identify the shorter (E) and longer (E1) swing supports. The shorter supports go at the front, and the longer ones at the back.
2. Attach the swing supports to the bench seat on the front and back hooks.
3. Attach the suspension springs to the other end of the swing supports.
4. Lift the side of the swing by the spring and attach the spring to the main frame. Repeat for the other side.

Step 5: Final Touches

- Place the seat cushions and lumbar pillow onto the swing. The cushions feature a Velcro paste design to keep them securely in place.
- Unfold the two side tables. Ensure the two support bars underneath each table fold out and clip onto the bar below to secure them.
- If your model includes solar lights, mount them as desired. Note that clips for attachment may not be included and the solar panel needs to be positioned for optimal sun exposure. Ensure the solar box switch is set to "on" for charging and operation.
- Install any remaining bolt covers for a finished appearance.



Image 4: The Velcro paste design on the cushions, ensuring they remain securely in position on the swing seat.

5. Operating Instructions

Adjusting the Canopy

The canopy features an adjustable tilt mechanism, allowing you to position it for optimal shade throughout the day. Loosen the knobs on either side of the canopy frame, adjust to the desired angle, and then re-tighten the knobs to secure it.



Image 5: Visual representation of the canopy's adjustable tilt feature, adapting to sunlight from various directions.

Using the Foldable Side Tables

Each side of the swing is equipped with a foldable tray. To use, simply pull the tray upwards until it locks into place. Ensure the support bars underneath are properly clipped to the main frame for stability. These tables are suitable for holding drinks, small books, or personal devices. Avoid placing heavy items on them.

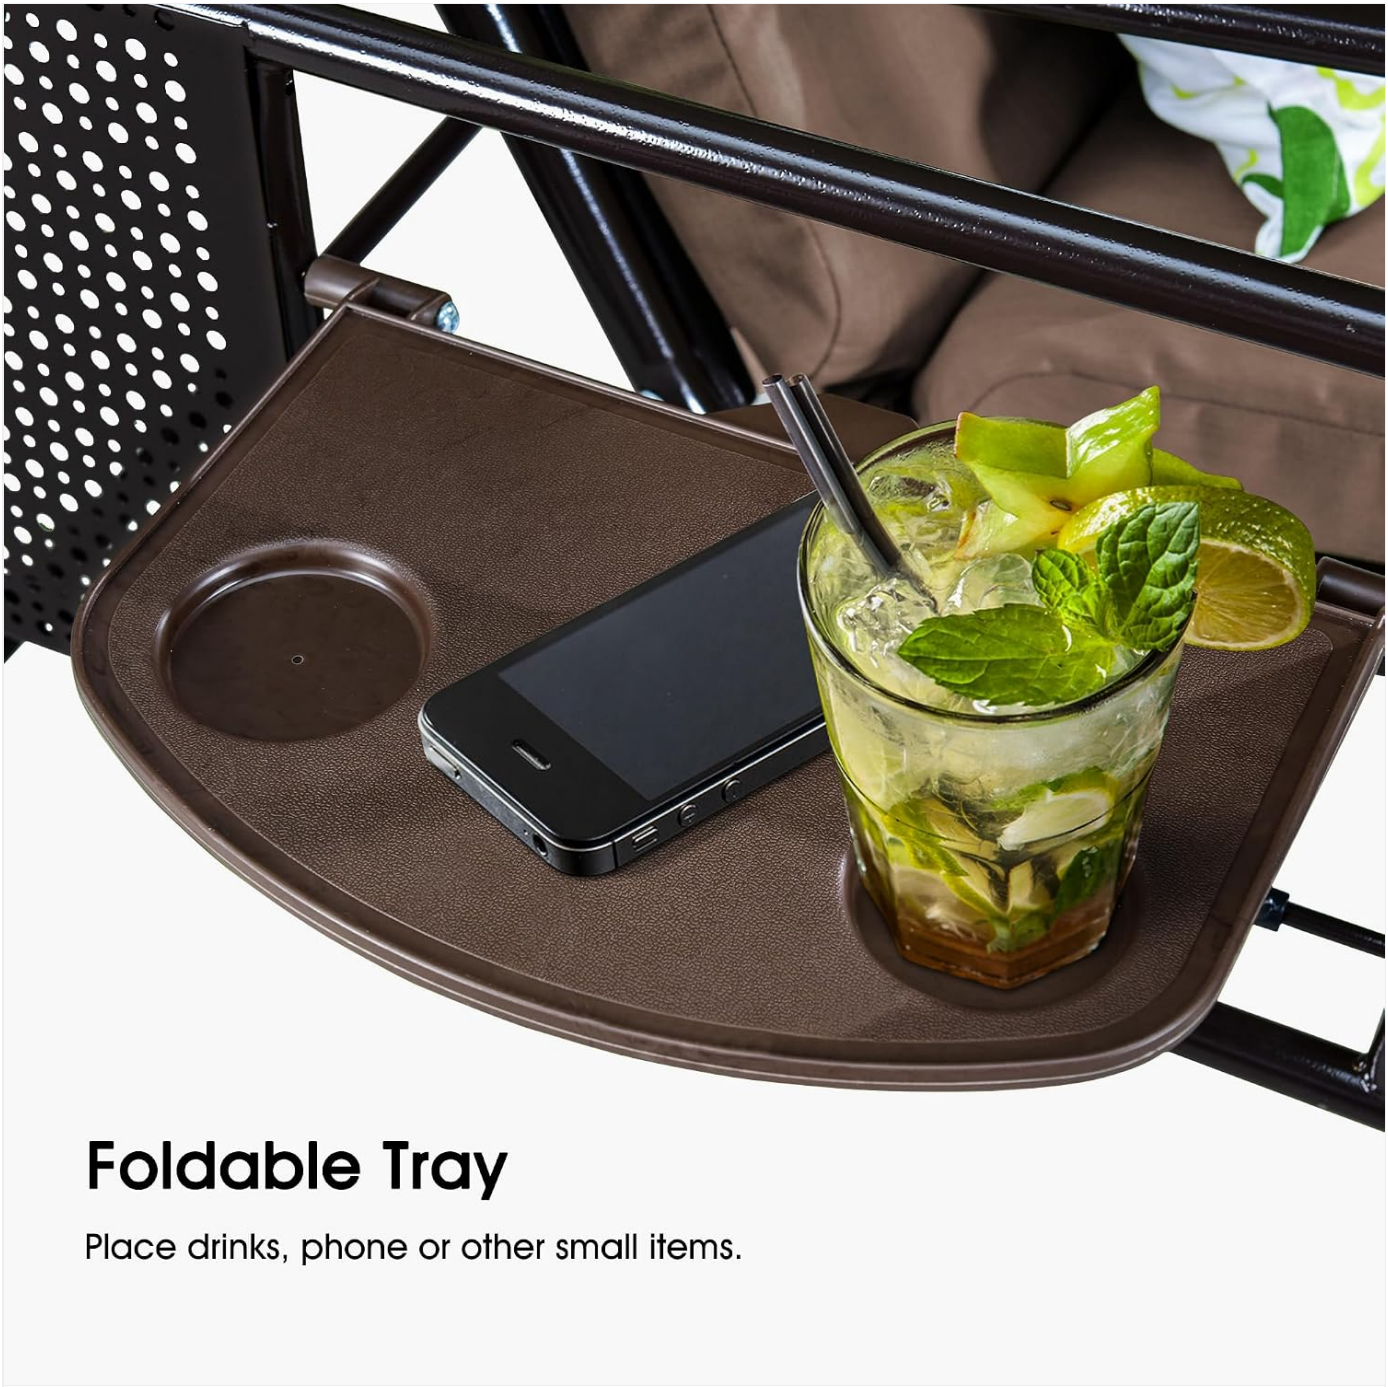


Image 6: The convenient foldable side tray, designed to hold beverages, phones, or other small items.

Solar Lights (if applicable)

If your swing includes solar lights, ensure the solar panel is exposed to direct sunlight for charging. The solar box typically has an "ON/OFF" switch; set it to "ON" for the lights to charge during the day and illuminate at night. The lights may offer different blinking patterns, selectable via a button on the solar box.

6. Maintenance and Care

- **Cleaning:** Wipe the steel frame with a damp cloth and mild soap. Rinse thoroughly and dry. The fabric canopy and cushions are made from weather-resistant material; spot clean with mild soap and water. Allow to air dry completely.
- **Weather Protection:** While the swing is designed to be weather-resistant, prolonged exposure to harsh weather conditions (heavy rain, snow, strong UV) can reduce its lifespan. Consider using an outdoor furniture cover during off-seasons or extreme weather.
- **Cushion Care:** The cushions are water-repellent and UV resistant. For extended durability, store cushions indoors during prolonged periods of non-use or inclement weather.

- **Frame Inspection:** Periodically check all bolts, nuts, and connections for tightness. Re-tighten as needed to maintain stability and safety. Inspect the frame for any signs of rust or damage and address promptly.



Image 7: Detail of the 240G yarn-dyed fabric, emphasizing its water-repellent, UV protection, and premium colorfast qualities for durability.

7. Troubleshooting

Problem	Possible Cause	Solution
Swing feels wobbly or unstable.	Loose bolts; uneven ground.	Ensure all assembly bolts are fully tightened. Move the swing to a level surface.
Side tables are not stable.	Support bars not clipped correctly; screws not tight enough.	Ensure the two support bars underneath each table are fully extended and clipped onto the main frame. Check the tightness of the screws holding the tables.

Problem	Possible Cause	Solution
Canopy is difficult to adjust or does not stay in place.	Knobs not tightened sufficiently; mechanism obstructed.	Ensure the adjustment knobs on both sides of the canopy are securely tightened after positioning. Check for any debris obstructing the mechanism.
Solar lights not working.	Solar panel not charging; switch off; battery issue.	Ensure the solar panel is in direct sunlight for several hours. Check that the "ON/OFF" switch on the solar box is set to "ON". Verify batteries are correctly installed and functional.

8. Specifications

Brand:	PURPLE LEAF
Model:	3-Seat Deluxe Outdoor Patio Porch Swing
Product Dimensions:	74.4" (W) x 50.3" (D) x 68.5" (H)
Frame Material:	Alloy Steel with Powder Coated Finish
Fabric Material:	240G Yarn-Dyed Polyester (UV resistant, water-repellent, fade resistant)
Weight Capacity:	Up to 750 lbs
Assembly Required:	Yes
Item Weight:	85.4 pounds
UPC:	611550863832
ASIN:	B07THWKT5H



Image 8: Detailed product dimensions for the 3-seat porch swing, including width, depth, and height.

9. Warranty and Support

For warranty information, missing parts, or technical support, please contact PURPLE LEAF customer service. Refer to your purchase documentation for specific warranty terms and contact details. You can also visit the official PURPLE LEAF store on Amazon for support resources.

Customer Service Link: Visit the PURPLE LEAF Store on Amazon

© 2025 PURPLE LEAF. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question