Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

vhbw VHBW4062692058390

vhbw Replacement Shaver Foil and Cutter Block Instruction Manual

For Braun Series XP Models: 5441, 5442, 5485, 5612, 5613, 5614, 5615, 5663 (Type 31B)

1. Product Overview

This vhbw replacement shaver foil and cutter block is designed to restore optimal shaving performance to your compatible Braun electric shaver. Manufactured from high-quality nickel, this silver-colored assembly provides a reliable and precise cut, ensuring a comfortable and efficient shave. The double foil system covers the blades, offering additional protection for your skin.



Image 1: An assembled side view of the vhbw replacement shaver foil and cutter block, demonstrating its compact and integrated design ready for installation onto a compatible electric shaver.

2. Important Safety Information

- Always turn off and unplug your electric shaver before attempting to replace any parts.
- Handle the new foil and cutter block with care, as the blades are sharp.
- Keep the product out of reach of children.
- Use this replacement part only with the specified compatible Braun shaver models.
- Do not use if the foil is damaged or bent, as this may cause skin irritation or injury.

3. Package Contents

- 1 x vhbw Double Shaver Foil with Frame and Cutter Block

4. Compatibility

This vhbw replacement shaver foil and cutter block is compatible with the following Braun electric shaver models and replacement types:

- **Braun XP Series:** 5441, 5442, 5485, 5612, 5613, 5614, 5615, 5663
- **Replaces Braun Types:** 31B, SB505, 31S

5. Installation Instructions

5.1. Removing the Old Shaver Head

1. Ensure your electric shaver is turned off and unplugged from any power source.
2. Depending on your shaver model, either press the release buttons on the sides of the shaver head or gently pull the old foil and cutter block assembly upwards to detach it from the shaver body.
3. Carefully dispose of the old shaver head.

5.2. Installing the New Shaver Head

1. Unpack the new vhbw replacement shaver foil and cutter block. Avoid touching the foil surface directly to prevent damage.
2. Align the new shaver head with the shaver body. Ensure the orientation is correct (the foil should face the front of the shaver).
3. Gently press the new shaver head down until it clicks securely into place. Do not force it.
4. Once installed, you may turn on your shaver to ensure it operates correctly.

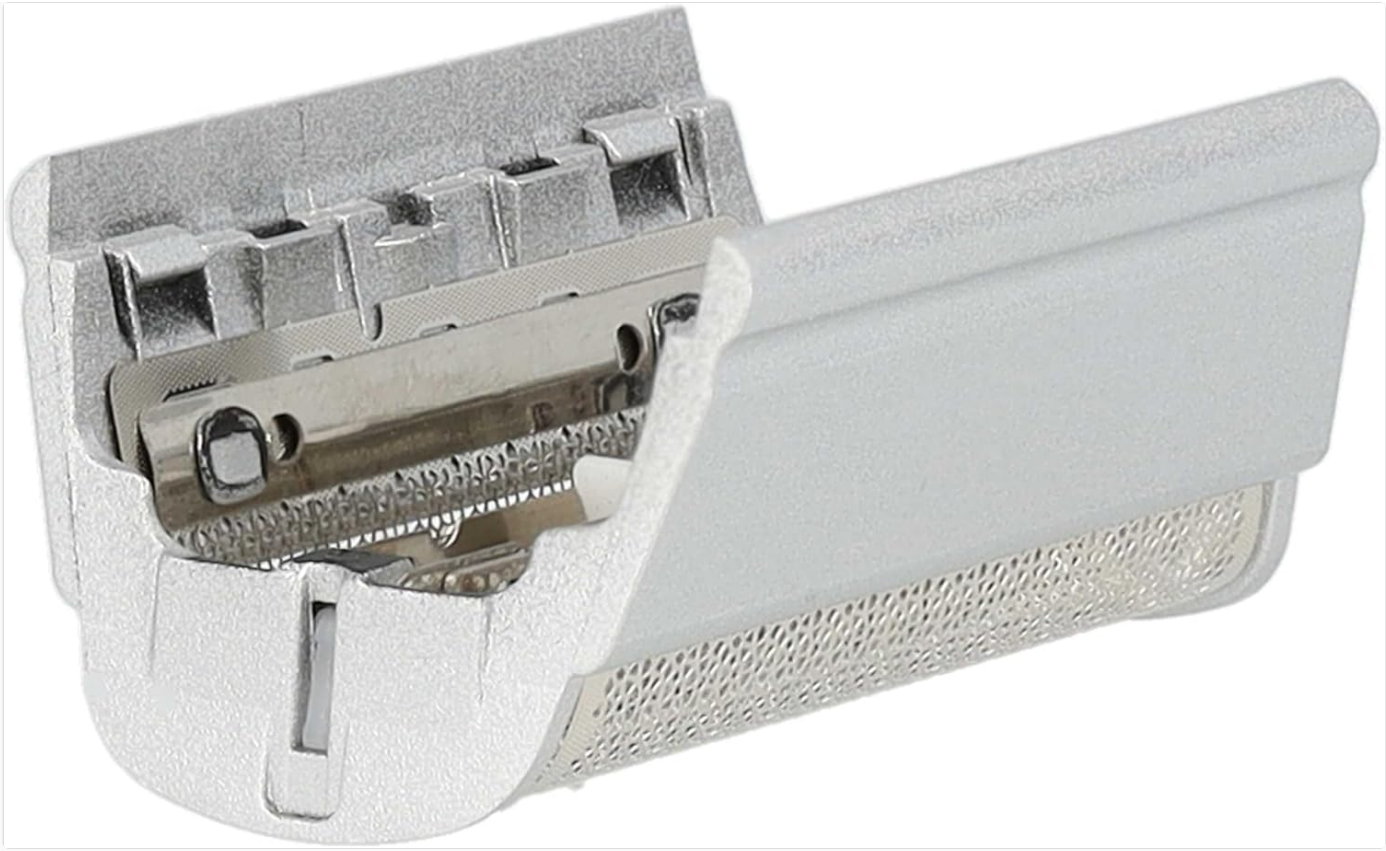


Image 2: This image displays a side view of the vhbw replacement shaver head, with the outer foil partially lifted to reveal the intricate cutting blades and oscillating mechanism of the cutter block. It illustrates the components that work together to provide a close shave.

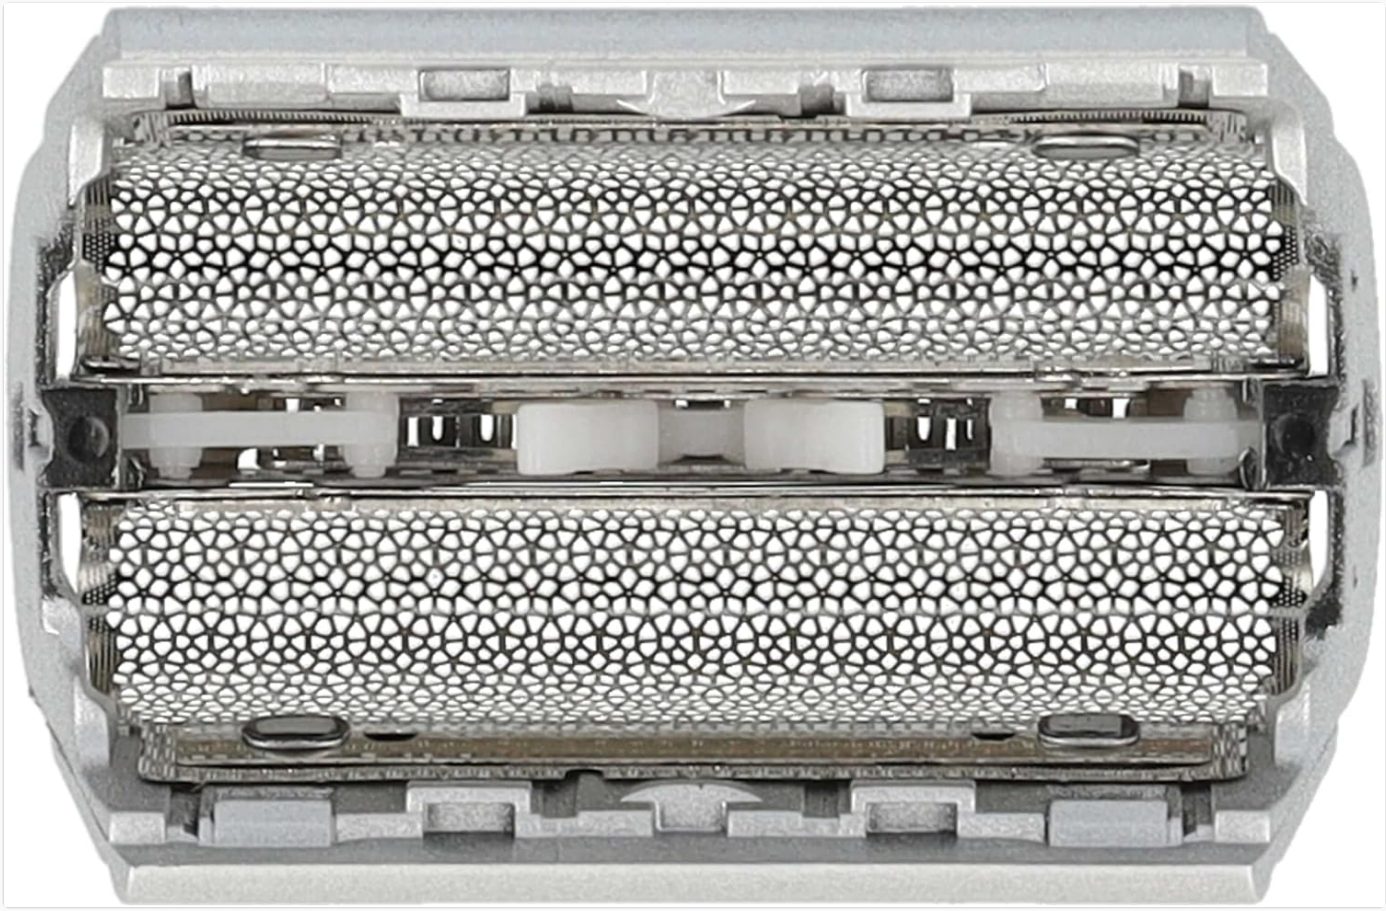


Image 3: This image shows the underside of the vhbw replacement shaver head, detailing the clips and grooves used to securely attach the foil and cutter block assembly to the main body of the electric shaver.

6. Operating Your Shaver with the New Head

For optimal shaving results with your new vhbw replacement head:

- Ensure your skin is clean and dry before shaving.
- Hold the shaver at a right angle (90 degrees) to your skin.
- Stretch your skin with your free hand to make the hairs stand upright.
- Shave against the direction of hair growth using short, gentle strokes.
- Avoid pressing too hard, as this can cause skin irritation and wear out the foil faster.



Image 4: A top-down view of the vhbw replacement shaver foil, showcasing the fine mesh pattern designed to capture hairs for an efficient shave. The central trimmer bar is also visible between the two foil sections.

7. Maintenance and Care

7.1. Cleaning

Regular cleaning is essential to maintain the performance and longevity of your shaver head:

- After each shave, turn off and unplug the shaver.
- Remove the shaver head assembly.
- Rinse the shaver head under warm running water until all hair clippings are removed. You may use a mild soap if necessary.
- Do not press on the foil surface or use abrasive cleaning agents, as this can damage the delicate mesh.
- Allow the shaver head to air dry completely before reattaching it to the shaver body or storing it.
- For a more thorough cleaning, you can use a small brush (not included) to gently remove stubborn hair particles from the cutter block.

7.2. Replacement Frequency

For continued optimal shaving performance and hygiene, it is recommended to replace the shaver foil and cutter block

every 12 to 18 months, or sooner if you notice a decrease in shaving efficiency or increased skin irritation.

8. Troubleshooting

If you encounter issues with your vhbw replacement shaver head, refer to the table below:

Problem	Possible Cause	Solution
Poor shaving performance	Worn out foil/cutter, improper cleaning, incorrect installation.	Ensure head is correctly installed. Clean thoroughly. If performance does not improve, replace the shaver head.
Skin irritation	Damaged foil, pressing too hard, worn out parts.	Check foil for damage; replace if necessary. Apply less pressure during shaving. Ensure proper cleaning.
Increased noise during operation	Improper installation, debris in cutter block.	Re-install the shaver head to ensure it is seated correctly. Clean the cutter block thoroughly.

9. Product Specifications

Feature	Detail
Brand	vhbw
Model Number	VHBW4062692058390
Material	Nickel
Color	Silver
Dimensions (approx.)	5 x 3.4 x 2.5 cm
Weight (approx.)	4 Grams
Special Feature	Waterproof (when installed on a waterproof shaver)

10. Warranty and Support

For any questions regarding the installation, operation, or maintenance of your vhbw replacement shaver foil and cutter block, please refer to the original manufacturer's manual for your electric shaver or contact vhbw customer support for assistance. Please retain your proof of purchase for any warranty claims.

© 2023 vhbw. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07TMCYHMD

More documents and user manuals: **https://manuals.plus/**