RYOBI P2109

RYOBI ONE+ 18-Volt Cordless Leaf Blower (Model P2109) User Manual

Model: P2109

1. Introduction and Safety Information

This manual provides important instructions for the safe operation and maintenance of your RYOBI ONE+ 18-Volt Cordless Leaf Blower, Model P2109. Please read this manual thoroughly before operating the tool to ensure safe and effective use. Keep these instructions for future reference.

General Safety Warnings

- Always wear eye protection when operating the leaf blower.
- Do not operate the blower in wet conditions or near water.
- Keep children and bystanders away from the operating area.
- Ensure the blower tube is securely attached before use.
- Use only RYOBI ONE+ 18-Volt batteries and chargers with this tool.
- Do not point the blower nozzle at people or animals.
- Store the tool indoors in a dry, secure location when not in use.

2. Package Contents


Your RYOBI ONE+ 18-Volt Cordless Leaf Blower (Model P2109) package includes the following components:

- RYOBI ONE+ 18-Volt Cordless Leaf Blower (Bare Tool)
- Blower Tube

Note: Battery and charger are not included with this bare tool and must be purchased separately.



This image indicates that the product is bulk packaged and does not come in retail packaging.

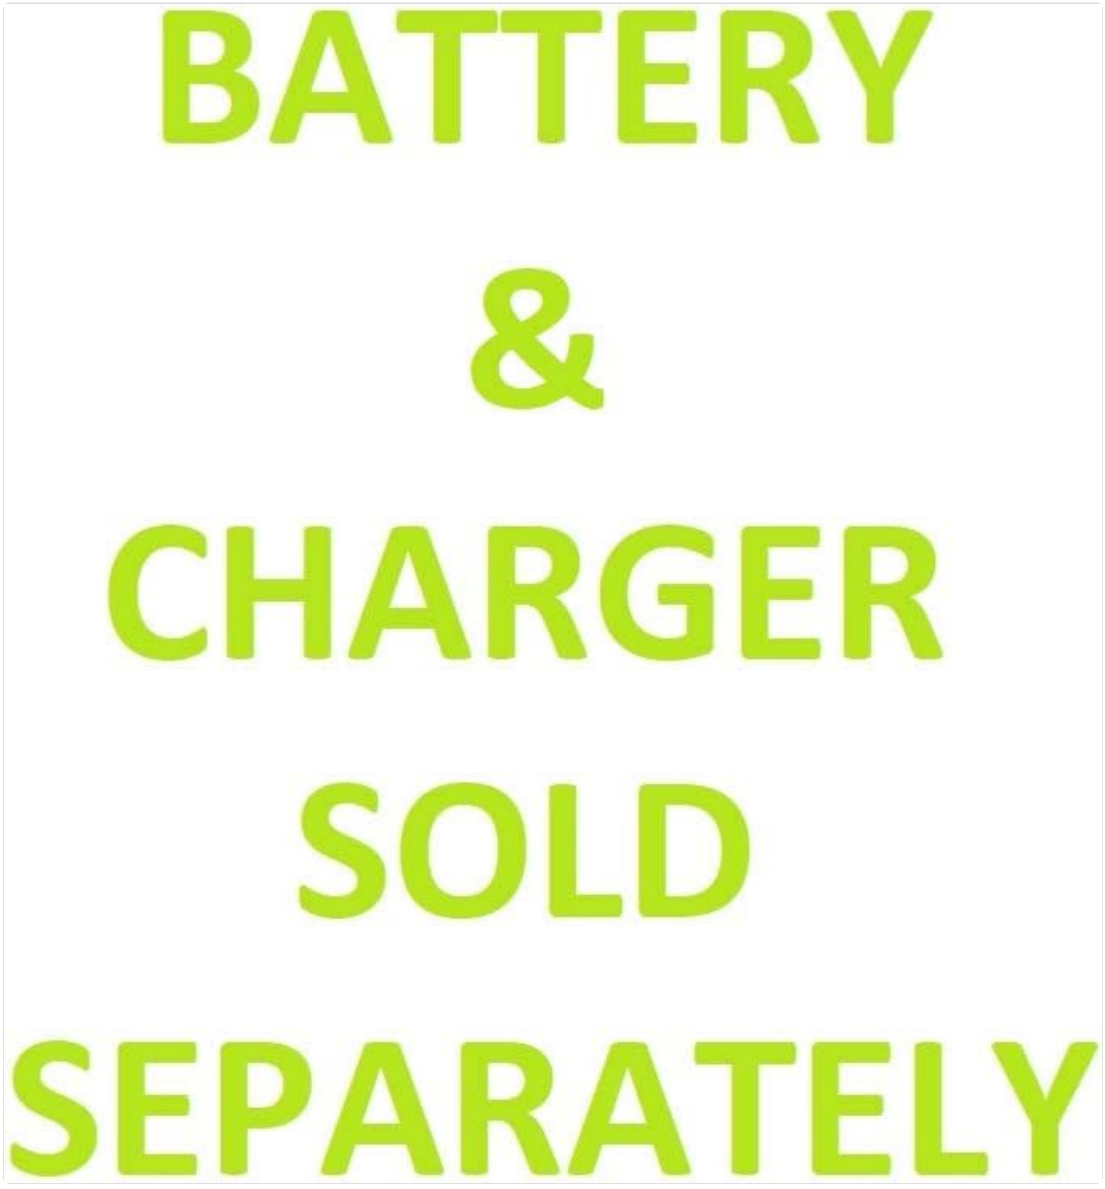

This image clarifies that the battery and charger for the leaf blower are sold separately.

3. Setup

Attaching the Blower Tube

1. Align the blower tube with the outlet on the front of the blower housing.
2. Push the tube firmly onto the housing until it clicks into place, ensuring it is securely fastened.



This image displays the main body of the leaf blower alongside its detachable tube, illustrating how the two components connect during assembly.

Inserting and Removing the Battery

This leaf blower is designed for use with RYOBI ONE+ 18-Volt Lithium-Ion batteries.

- **To Insert:** Align the battery pack with the battery port on the blower. Slide the battery into the port until it locks securely into place.
- **To Remove:** Press the battery release latch (usually located on the battery itself) and slide the battery out of the port.



This image provides a side view of the Ryobi leaf blower, highlighting the design and the location where the battery would be inserted.

4. Operating Instructions

Starting and Stopping the Blower

- **To Start:** Ensure a charged battery is installed. Press and hold the trigger switch located on the handle.
- **To Stop:** Release the trigger switch.

Using the Leaf Blower

This blower is designed for clearing leaves and debris from hard surfaces like driveways, patios, and sidewalks. It delivers up to 200 CFM (Cubic Feet Per Minute) of air volume and 90 MPH (Miles Per Hour) of air speed.

- Hold the blower firmly with one hand, directing the nozzle towards the debris.
- Sweep the blower from side to side, moving debris into piles.
- Avoid blowing debris towards people, animals, or open windows.
- For optimal performance, use the blower on dry debris.



This image shows the Ryobi leaf blower from a side angle, demonstrating its ergonomic design for handheld operation.

5. Maintenance

Cleaning

- Disconnect the battery before performing any cleaning or maintenance.
- Wipe the exterior of the blower with a clean, damp cloth. Do not use strong detergents or solvents.
- Ensure air vents are clear of debris to prevent overheating.

Storage

- Store the blower in a dry, well-ventilated area, out of reach of children.
- Remove the battery from the blower before storing for extended periods.
- Store batteries in a cool, dry place, away from direct sunlight and extreme temperatures.

6. Troubleshooting

Problem	Possible Cause	Solution
Blower does not start.	Battery not inserted correctly. Battery is discharged. Tool malfunction.	Ensure battery is fully seated. Charge the battery. Contact customer support if problem persists.
Reduced air flow.	Blower tube partially blocked. Battery is low.	Clear any obstructions from the blower tube. Charge the battery.

Problem	Possible Cause	Solution
Blower stops during operation.	Battery is depleted. Overheating.	Recharge the battery. Allow the tool to cool down before resuming use.

7. Specifications

- **Model:** P2109
- **Brand:** RYOBI
- **Power Source:** Battery Powered
- **Voltage:** 18 Volts
- **Air Flow Capacity:** 200 Cubic Feet Per Minute (CFM)
- **Air Speed:** 90 Miles per Hour (MPH)
- **Form Factor:** Handheld
- **Weight:** Approximately 4.34 pounds (without battery)
- **Material:** Plastic
- **Included Components:** Bare Tool (Blower and Blower Tube)

8. Warranty and Support

For warranty information, service, or technical support, please contact RYOBI customer service directly or visit their official website. Keep your purchase receipt as proof of purchase.
Online Resources: For additional information, FAQs, and product registration, visit the official RYOBI website.
Customer Service: Refer to the contact information provided with your product packaging or on the RYOBI official website.

© 2024 RYOBI. All rights reserved. This manual is for informational purposes only.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question