Vistefly V10 Pro

Vistefly V10 Pro Cordless Vacuum Cleaner User Manual

Model: V10 Pro

Introduction

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Vistefly V10 Pro Cordless Vacuum Cleaner. Please read this manual thoroughly before using the appliance and retain it for future reference.

Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store the appliance indoors. Put away after use to prevent accidents.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance.
- Use only the charger specified by the manufacturer to recharge. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

Package Contents

Carefully unpack your Vistefly V10 Pro and ensure all items are present and in good condition. If any items are missing or damaged, please contact customer support.



Image: All components of the Vistefly V10 Pro Cordless Vacuum Cleaner, including the main motor, conductive tube, various brushes, nozzles, battery, charger, and wall mount.

- Vistefly Vacuum Cleaner Main Unit
- Detachable Lithium-Ion Battery (7*2200 mAh)
- LED Electric Brush (Ground Brush)
- Floor Brush Roll (Soft velvet roller brush)
- Carpet Brush Roll (Flocking brush)
- Combination Nozzle (2-in-1 brush tip)
- Crevice Nozzle (Long flat tip)
- Wall Mount
- Charging Cable / Charger
- Mini Motorized Brush
- User Manual
- Guaranty Card
- Mounting Screws and Rubber Stoppers (2*nails + 2*rubber stopper)

Product Overview

Familiarize yourself with the main components of your Vistefly V10 Pro Cordless Vacuum Cleaner.

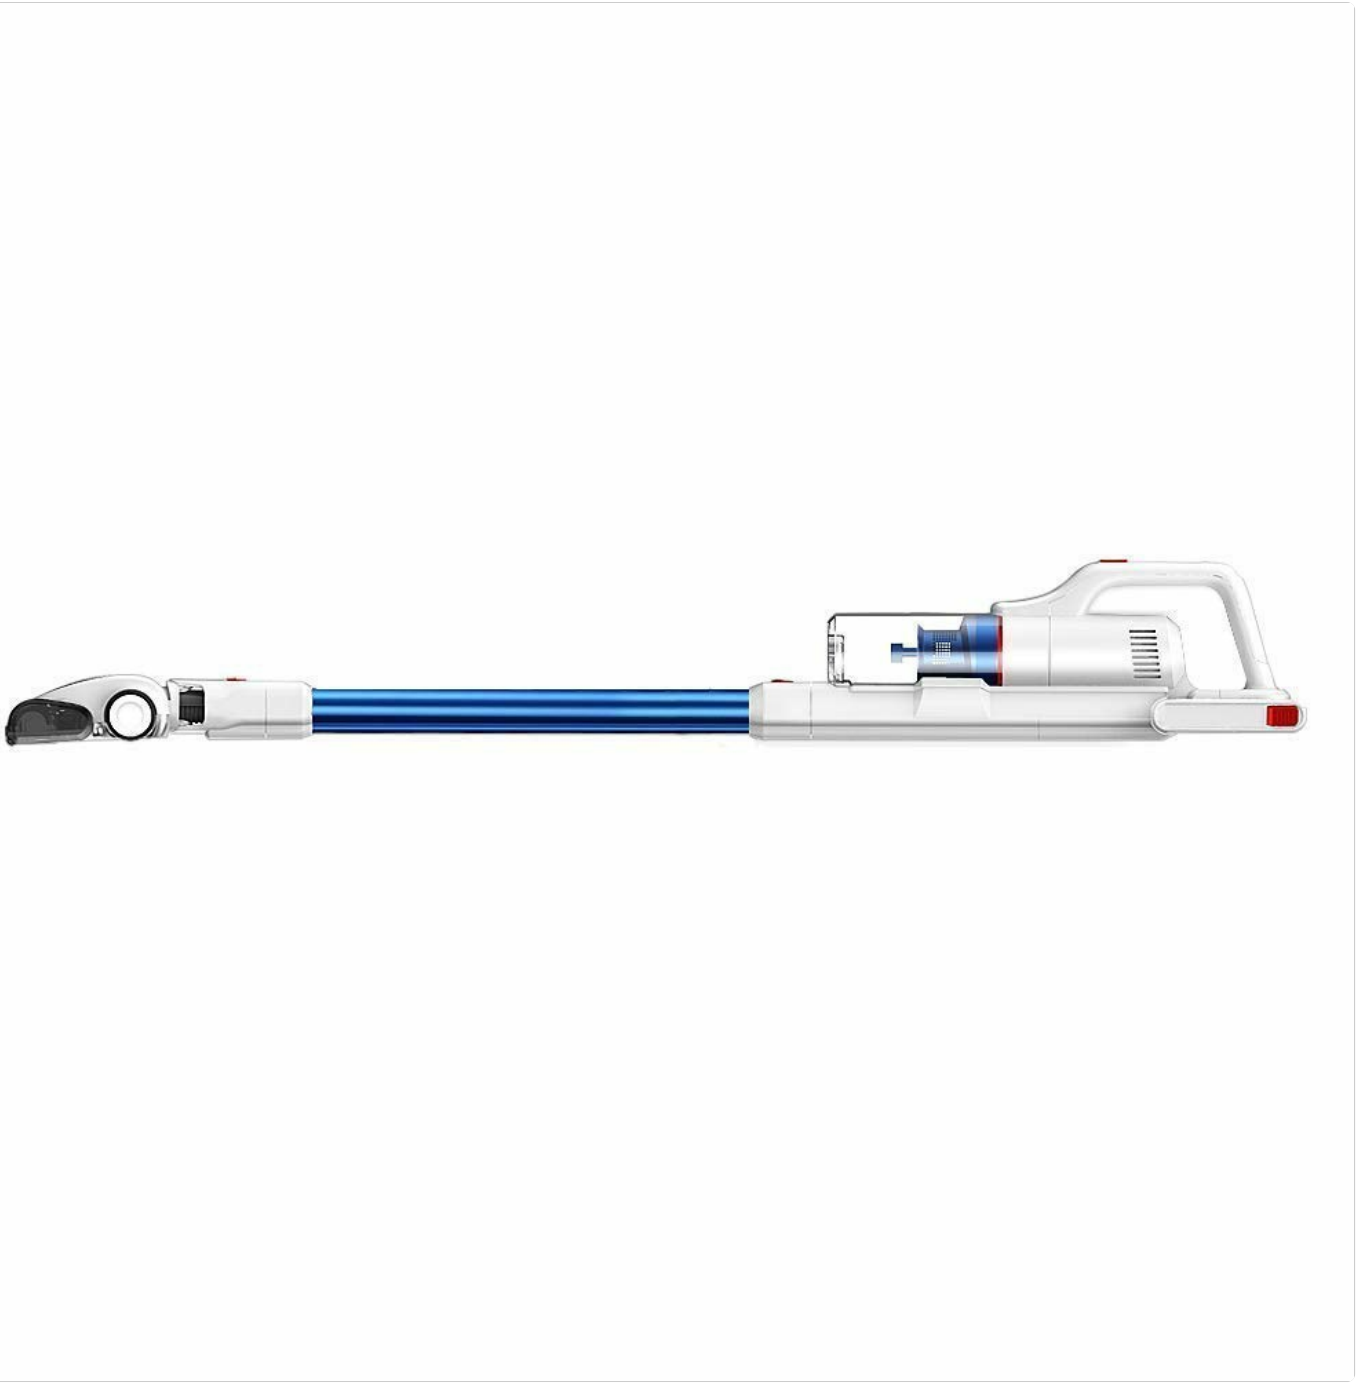


Image: Side view of the Vistefly V10 Pro Cordless Vacuum Cleaner, showing the main unit, extension tube, and floor brush.

Main Motor Unit: Contains the motor, dustbin, and control panel.

Conductive Tube: Connects the main unit to the floor brush or other attachments.

LED Electric Brush (Ground Brush): Main floor cleaning head with integrated LED lights.

Floor Brush Roll: Soft roller for hard floors.

Carpet Brush Roll: Bristle brush for carpets.

Combination Nozzle: Versatile tool for various surfaces.

Crevice Nozzle: For narrow gaps and corners.

Mini Motorized Brush: Ideal for upholstery and pet hair.

Detachable Battery: Provides power to the unit.

Assembly

Follow these steps to assemble your Vistefly V10 Pro Cordless Vacuum Cleaner:

1. **Attach the Conductive Tube:** Insert the conductive tube into the main motor unit until it clicks securely into place.
2. **Attach the Floor Brush:** Connect the LED Electric Brush (Ground Brush) to the other end of the conductive tube until it clicks.
3. **Install the Battery:** Slide the detachable battery into the slot on the main motor unit until it locks.
4. **Select Brush Roll:** Depending on your cleaning surface, insert either the Floor Brush Roll (for hard floors) or the Carpet Brush Roll (for carpets) into the LED Electric Brush head.
5. **Handheld Configuration:** For handheld use, detach the conductive tube and connect desired accessories (e.g., Crevice Nozzle, Combination Nozzle, Mini Motorized Brush) directly to the main motor unit.



Image: The Vistefly V10 Pro configured for different cleaning tasks, demonstrating its versatility as a stick vacuum and a handheld unit.

Charging the Battery

Before first use, fully charge the battery. The battery can be charged while attached to the vacuum or separately.

1. Connect the charging cable to the charging port on the battery or the main unit.
2. Plug the charger into a power outlet.
3. The charging indicator lights will illuminate to show charging status.
4. A full charge typically takes 4-5 hours. Once fully charged, the indicator lights will change or turn off.
5. For convenient storage and charging, install the wall mount in a suitable location and hang the vacuum.

Note: The battery is a detachable Lithium-Ion type, offering flexibility for charging and replacement.

Operating Instructions

Your Vistefly V10 Pro offers two suction modes for different cleaning needs.

1. **Power On/Off:** Press the power button on the main unit to turn the vacuum on or off.
2. **Select Suction Mode:**
    - **Eco Mode (15kPa):** Provides up to 40 minutes of runtime, suitable for light cleaning and everyday dust.
    - **Turbo Mode (22kPa):** Provides up to 15 minutes of runtime, ideal for deep cleaning and stubborn dirt.

    Press the mode selection button to switch between Eco and Turbo modes.
3. **Cleaning:** Guide the vacuum over the desired surface. The LED Electric Brush head features a 270° turn capability for easy maneuverability around furniture and into corners.
4. **Accessory Use:** Utilize the various nozzles and brushes for specific tasks:
    - **Crevice Nozzle:** For tight spaces, edges, and corners.
    - **Combination Nozzle:** For upholstery, car interiors, and delicate surfaces.
    - **Mini Motorized Brush:** Effective for pet hair removal from upholstery and stairs.



Image: The Vistefly V10 Pro in action, demonstrating its powerful suction on a carpeted surface.



Image: The Vistefly V10 Pro showcasing its versatility with different attachments for cleaning various areas such as hardwood floors, carpets, upholstery, car interiors, and curtains.

Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dustbin

The dustbin has a capacity of 0.8 liters and should be emptied regularly, ideally after each use or when the MAX fill line is reached.

1. Ensure the vacuum is turned off and disconnected from the charger.
2. Locate the dustbin release button/latch on the main unit.
3. Press the release button and twist to detach the dustbin from the main unit.
4. Hold the dustbin over a trash receptacle and open the bottom flap to empty the contents.

5. Reattach the dustbin to the main unit until it clicks securely.

Cleaning the Filters

The V10 Pro features a 4-stage fully-sealed washable filtration system, including an H12 class HEPA filter. Regular cleaning of filters is crucial for maintaining suction power.

1. Remove the dustbin as described above.
2. Carefully remove the filter components from the dustbin. This typically includes a metal mesh filter, a sponge filter, and the HEPA filter.
3. Tap off loose dirt from all filter components over a trash can.
4. Rinse the washable filter components (metal mesh, sponge filter, and HEPA filter) under cool running water until the water runs clear. Do not use detergents.
5. Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not use a hairdryer or other heating methods.
6. Once completely dry, reassemble the filters into the dustbin and reattach the dustbin to the main unit.

Note: Replace the HEPA filter every 3-6 months, depending on usage, to ensure optimal filtration.

Cleaning the Brush Rolls

Hair and debris can get tangled in the brush rolls, affecting cleaning performance.

1. Ensure the vacuum is off and the floor brush is detached.
2. Locate the brush roll release tab or latch on the side of the LED Electric Brush head.
3. Remove the brush roll.
4. Use scissors or a cleaning tool to cut and remove any tangled hair or fibers from the brush roll.
5. Wipe the brush roll and the brush housing with a damp cloth.
6. Reinsert the clean brush roll until it clicks into place.

Troubleshooting

If you encounter issues with your Vistefly V10 Pro, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely inserted.
Low suction power.	Dustbin is full; Filters are clogged; Blockage in nozzle/tube/brush roll.	Empty dustbin; Clean or replace filters; Check for and remove any blockages.
Brush roll not spinning.	Hair or debris tangled in brush roll; Brush roll motor malfunction.	Clean brush roll of tangled debris; If problem persists, contact customer support.
Battery not charging.	Charger not properly connected; Faulty charger or battery.	Ensure charger is securely plugged into outlet and vacuum; Try charging the battery separately if detachable; Contact customer support if issue persists.

Problem	Possible Cause	Solution
Unusual noise during operation.	Blockage in air path; Damaged component.	Check for and remove any blockages; Inspect components for damage; Contact customer support.

Specifications

Brand	Vistefly
Model Name	V10 Pro (cordless vacuum cleaner)
Item Model Number	7f824656-723a-44de-8c24-1da50b71cbcd
Motor Type	Brushless Motor
Wattage	250 Watts
Suction Power (Eco Mode)	15 kPa
Suction Power (Turbo Mode)	22 kPa
Noise Level	65 Decibels
Battery Type	Lithium-Ion (7*2200 mAh)
Charging Time	4-5 Hours
Battery Life (Eco Mode)	Up to 40 Minutes
Battery Life (Turbo Mode)	Up to 15 Minutes
Dustbin Capacity	0.8 Litres
Filter Type	4-Stage Fully-sealed Washable Filtration System (H12 HEPA)
Form Factor	Handheld, Stick
Product Dimensions (LxWxH)	70 x 29.97 x 13.21 cm
Item Weight	1.5 kg (3.3 Pounds)
Recommended Uses	Carpeted floors, hardwood floors, upholstery, car interiors, stairs, pet hair removal

Warranty and Support

For warranty information and customer support, please refer to the Guaranty Card included in your package or contact Vistefly customer service through their official channels. Please have your model number (V10 Pro) and purchase details ready when contacting support.

© 2023 Vistefly. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question