Mueller MLR0020

Mueller Living Electric Kettle User Manual

Model: MLR0020



Image: The Mueller Living Electric Kettle, showcasing its clear glass body, black base, and handle, with water actively boiling and illuminated by a blue LED light.

Setup | Operation | Maintenance | Troubleshooting | Specifications | Warranty & Support

1. Setup

Before first use, please follow these steps to ensure proper function and safety of your Mueller Living Electric Kettle.

1.1 Unboxing and Initial Inspection

- Carefully remove all components from the packaging.
- Inspect the kettle and power base for any signs of damage. Do not use if any damage is observed.
- Ensure all included components are present: Mueller M99S Ultra Kettle, Heating Base with Power Cord, User Manual.

1.2 Placing the Kettle on the Power Base

The kettle is designed for cordless pouring, meaning the power cord is attached to the base, not the kettle itself. Place the power base on a stable, flat, heat-resistant surface near a power outlet.



Image: The kettle's convenient design, highlighting the cool-touch handle and the power cord management system under the base.

- Ensure the power cord is fully uncoiled from the base and plugged into a standard electrical outlet.
- Place the kettle securely onto the 360-degree rotatable power base.

1.3 First Use Cleaning

Before using the kettle for the first time, it is recommended to clean it to remove any manufacturing residues.

- Fill the kettle with clean water up to the MAX fill line (1.8L).
- Boil the water (refer to Section 2.2).
- Discard the boiled water.
- Repeat this process 2-3 times to ensure thorough cleaning.

2. Operation

Operating your Mueller Living Electric Kettle is straightforward. Follow these steps for efficient water boiling.

2.1 Filling the Kettle



Image: A hand filling the kettle, demonstrating its wide opening for easy access.

- Press the lid release button to open the lid.
- Fill the kettle with the desired amount of fresh, cold water. Do not fill below the MIN (0.5L) mark or above the MAX (1.8L) mark. Overfilling may cause boiling water to spill out.
- Close the lid firmly until it clicks into place.

2.2 Boiling Water (SpeedBoil Technology)



Image: The kettle illustrating its rapid boiling capability, showing 3 cups boiling in 2 minutes and a full 12 cups in 6 minutes.

- Place the filled kettle onto the power base.
- Press the ON/OFF switch located on the handle downwards. The bright blue LED light will illuminate, indicating that the kettle is heating.
- The 1500W SpeedBoil technology ensures rapid heating.

2.3 Automatic Shut-off and Boil-Dry Protection



Image: The kettle highlighting its automatic shut-off feature and boil dry protection, ensuring safety.

- The kettle will automatically turn off once the water reaches a rolling boil, and the blue LED light will extinguish.
- The kettle is equipped with boil-dry protection. If the kettle is accidentally switched on without sufficient water, it will automatically turn off to prevent damage.

2.4 Cordless Pouring

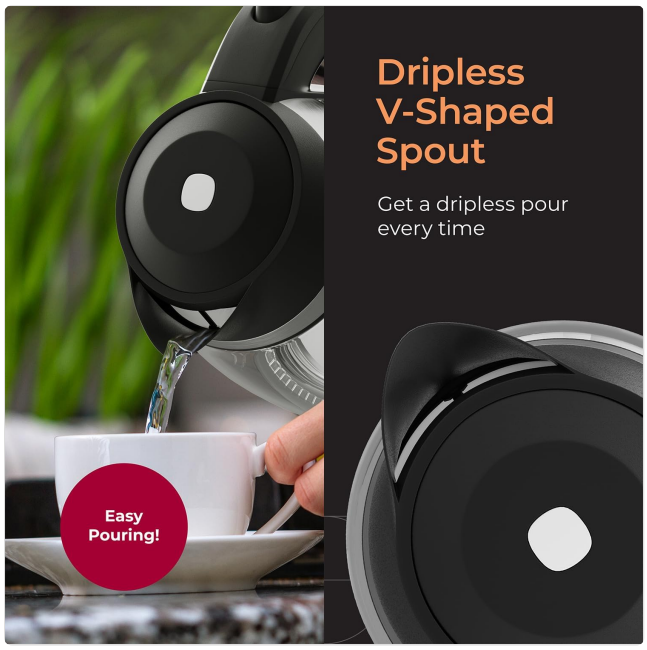


Image: The kettle demonstrating its dripless V-shaped spout, ensuring clean and easy pouring.

- Once the water has boiled, lift the kettle directly from its power base for convenient, cordless pouring.
- The V-shaped spout is designed for dripless pouring.

3. Maintenance

Regular cleaning and maintenance will prolong the life of your Mueller Living Electric Kettle and ensure optimal performance.

3.1 Exterior Cleaning

- Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.

- Wipe the exterior of the kettle and the power base with a soft, damp cloth.
- Do not use abrasive cleaners or scouring pads, as these can scratch the surface.
- Never immerse the kettle or power base in water or any other liquid.

3.2 Interior and Filter Cleaning



Image: The kettle highlighting its high-quality, BPA-free materials, including a robust glass body, stainless steel inner base, and a removable, washable filter.

- The kettle features a removable, washable filter to help keep water clean.
- To clean the interior, fill the kettle with water and a small amount of mild dish soap. Boil the mixture, then rinse thoroughly several times with clean water.
- Remove the filter and rinse it under running water. If necessary, use a soft brush to remove any deposits.
- Ensure the filter is securely re-inserted before next use.

3.3 Descaling

Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. This can affect performance and taste. Descale your kettle regularly.

- Fill the kettle with a solution of equal parts white vinegar and water (or use a commercial descaling solution according to its instructions).
- Let the solution soak for at least 30 minutes, or longer for heavy buildup. Do not boil the vinegar solution.
- Empty the kettle and rinse thoroughly several times with clean water.
- If a vinegar smell persists, boil fresh water in the kettle a few times and discard.

4. Troubleshooting

If you encounter issues with your Mueller Living Electric Kettle, refer to the following common problems and solutions.

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Kettle does not turn on or heat.	Kettle not properly seated on base. Power cord not plugged in. No power at outlet. Boil-dry protection activated.	Ensure kettle is correctly placed on the power base. Check if the power cord is securely plugged into a working outlet. Test the outlet with another appliance. Allow the kettle to cool down for 10-15 minutes, then try again.
Lid is difficult to open or gets stuck.	Mineral buildup around the lid mechanism. Lid release button not fully depressed or technique issue.	Clean around the lid and hinge area. Ensure the lid release button is fully pressed down while attempting to lift the lid. Some users find a slight upward pull while pressing helps.
Water takes too long to boil or does not reach full boil.	Excessive limescale buildup. Kettle overfilled.	Descale the kettle as described in Section 3.3. Ensure water level is between MIN and MAX marks.
Blue LED light does not illuminate.	Kettle is not heating. LED malfunction.	Check power connection and ensure the ON/OFF switch is engaged. If the kettle heats but the light does not work, contact customer support.

5. Specifications

Feature	Detail
Brand	Mueller
Model Name	M99S (MLR0020)
Capacity	1.8 Liters
Material	Borosilicate Glass, Stainless Steel
Color	Clear
Power	1500W (SpeedBoil)
Special Features	Automatic Shut-Off, Boil Dry Protection, LED Light, Cordless Pouring, Removable Filter, Rotatable Base, Water Level Indicator, Heat Resistant Handle
Product Dimensions	9.9"L x 7.9"W x 7.9"H
Item Weight	3 Pounds
UPC	810022374528
Manufacturer	Mueller Austria

6. Warranty & Support

Mueller products are manufactured with quality and durability in mind. For specific warranty information regarding your Mueller Living Electric Kettle, please refer to the documentation included with your purchase or visit the official Mueller website.

Additional protection plans may be available for purchase. Please check with your retailer for details on extended warranty options.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact Mueller customer service. Contact information can typically be found on the manufacturer's website or on the product packaging.

Manufacturer: **Mueller Austria**

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question