Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Victrola VTA-330B-ESP

Victrola Highland 4-in-1 Bluetooth Record Player (Model VTA-330B-ESP) Instruction Manual

Model: VTA-330B-ESP | Brand: Victrola

1. Introduction

The Victrola Highland 4-in-1 Bluetooth Record Player combines classic design with modern audio capabilities. This versatile system allows you to play vinyl records across three speeds (33 1/3, 45, and 78 rpm) on a belt-driven turntable, stream music wirelessly via Bluetooth, listen to FM radio, and connect external audio sources through its 3.5mm auxiliary input. It features integrated stereo speakers and RCA outputs for enhanced sound options.

2. Important Safety Instructions

Please read and understand all safety instructions before using this product. Keep these instructions for future reference.

- Do not expose this appliance to dripping or splashing liquids.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the appliance.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this appliance during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.

3. Package Contents

Verify that all items listed below are included in your package:

- Victrola Highland 4-in-1 Bluetooth Record Player
- Instruction Manual

- Power Adaptor
- RCA Line Output Cable

4. Product Overview

Familiarize yourself with the components of your record player.



Figure 1: Front view of the Victrola Highland Record Player with the lid open, revealing the turntable, tonearm, and control panel. The front features a speaker grille and a circular FM radio tuner with gold accents.

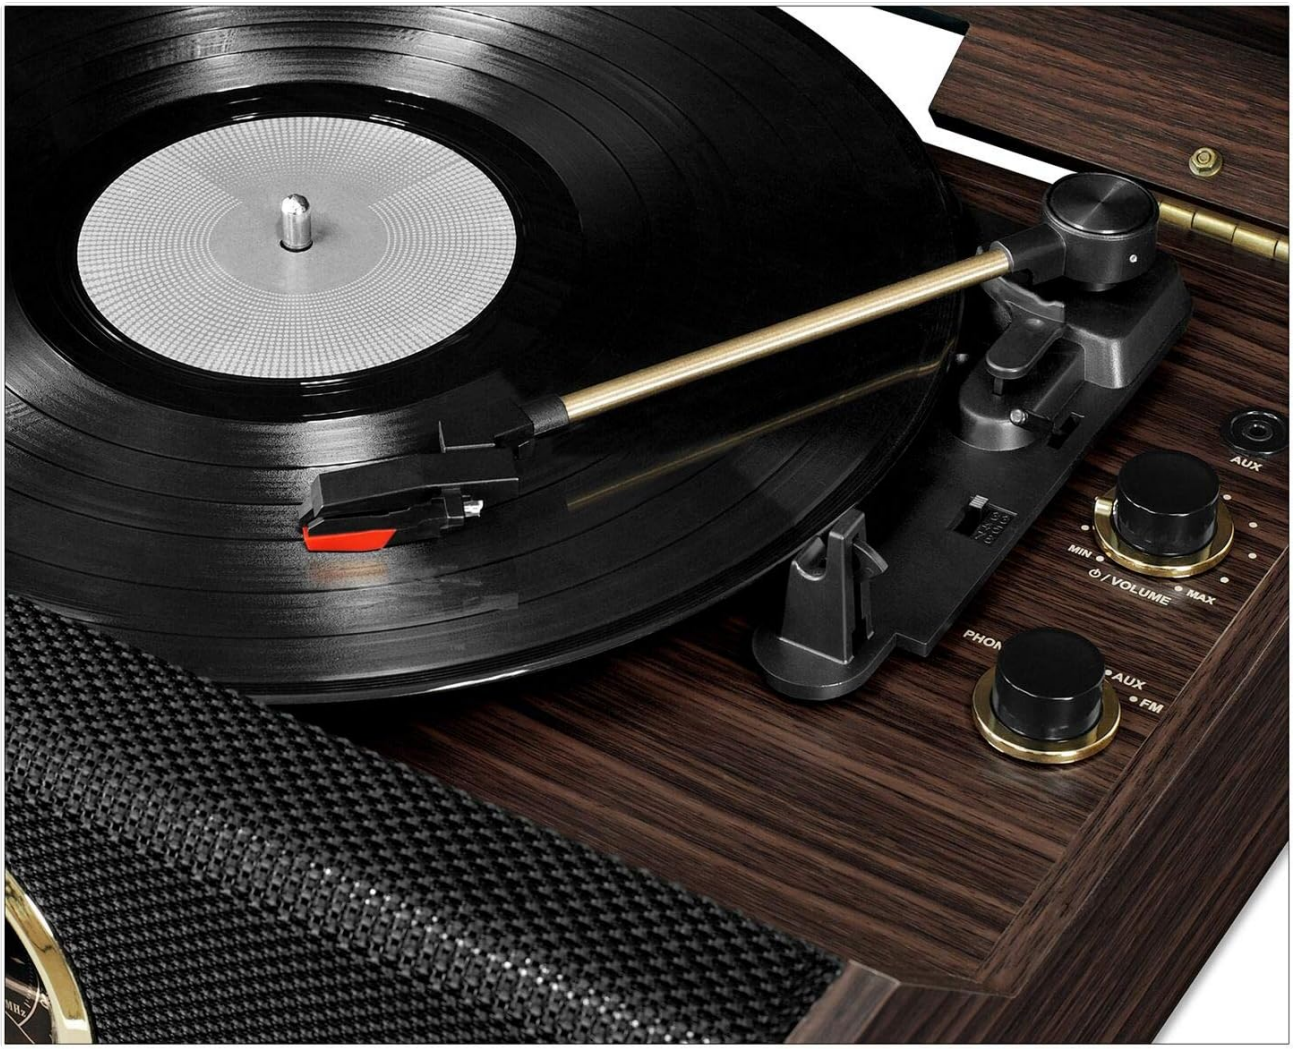


Figure 2: Detailed view of the turntable platter, tonearm with stylus, and control knobs. Visible controls include a volume knob, function selector (Phono, Aux, FM), and a speed selector switch.

Key Components:

- **Turntable Platter:** Supports the vinyl record.
- **Tonearm:** Holds the stylus (needle) for playing records.
- **Stylus:** Reads the grooves of the record.
- **Speed Selector Switch:** Adjusts playback speed (33 1/3, 45, 78 RPM).
- **Function Knob:** Selects input source (Phono, Bluetooth, FM, Aux).
- **Volume Knob:** Controls audio output level.
- **FM Tuner Dial:** For selecting FM radio stations.
- **Headphone Jack:** 3.5mm output for private listening.
- **RCA Line Outputs:** For connecting to external speakers or an amplifier.

5. Setup

5.1 Unpacking and Placement

1. Carefully remove the unit from its packaging.
2. Place the record player on a flat, stable surface away from direct sunlight, heat sources, and excessive dust or vibration.
3. Remove any protective materials from the turntable platter and tonearm.

5.2 Power Connection

1. Connect the provided power adaptor to the DC IN jack on the back of the unit.
2. Plug the power adaptor into a wall outlet.

5.3 Connecting External Speakers (Optional)

To enhance sound, you can connect the record player to external speakers or an amplifier using the RCA Line Outputs.

1. Connect the RCA cable (included) to the RCA Line Outputs on the back of the record player.
2. Connect the other end of the RCA cable to the corresponding audio input jacks on your external amplifier or powered speakers.

6. Operating Instructions

6.1 Powering On/Off

Rotate the Volume knob clockwise to turn the unit ON. Rotate it counter-clockwise until it clicks to turn the unit OFF.

6.2 Playing Records

1. Lift the dust cover.
2. Place a record on the turntable platter.
3. Select the appropriate speed (33 1/3, 45, or 78 RPM) using the Speed Selector Switch. For 45 RPM records, place the included 45 RPM adapter (if applicable) on the center spindle.
4. Set the Function knob to "PHONO".
5. Gently lift the tonearm using the cue lever and position it over the desired track of the record.
6. Lower the tonearm slowly onto the record using the cue lever. The record will begin to play.
7. Adjust the Volume knob to your desired listening level.
8. At the end of the record, the tonearm will automatically return to its rest position (auto-stop feature). Lift the tonearm, return it to the tonearm rest, and secure it with the clip when finished.

6.3 Bluetooth Streaming

1. Set the Function knob to "BLUETOOTH". The Bluetooth indicator light will flash.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Select "Victrola Highland" from the list of available devices.
4. Once paired, the Bluetooth indicator light will stop flashing and remain solid.
5. You can now play music from your device through the record player's speakers.

6.4 FM Radio Operation

1. Set the Function knob to "FM".
2. Rotate the FM Tuner Dial to select your desired radio station. The LED lighting around the dial will illuminate.
3. Adjust the Volume knob.

6.5 Auxiliary Input

Connect an external audio device (e.g., MP3 player, CD player) to the record player.

1. Connect a 3.5mm audio cable (not included) from your external device's headphone jack or line-out to the AUX IN jack on the record player.
2. Set the Function knob to "AUX".
3. Play audio from your external device.
4. Adjust the Volume knob on the record player and your external device.

6.6 Headphone Use

For private listening, plug 3.5mm headphones (not included) into the Headphone Jack on the front of the unit. The internal speakers will be muted.

7. Maintenance

7.1 Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use harsh chemicals or abrasive cleaners.
- Keep the dust cover closed when not in use to prevent dust accumulation on the turntable.

7.2 Stylus Care

- Handle the stylus carefully. Avoid touching the stylus tip with your fingers.
- Clean the stylus periodically with a soft brush, brushing from back to front.
- A worn stylus can damage records and degrade sound quality. Replace the stylus when sound quality deteriorates.

8. Troubleshooting

If you experience issues with your record player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not connected; outlet not active.	Ensure power adaptor is securely connected to the unit and a working wall outlet.
No sound from speakers	Volume too low; wrong function selected; headphones connected.	Increase volume; select correct function (PHONO, BLUETOOTH, FM, AUX); disconnect headphones.
Record skips or sounds distorted	Record is dirty or scratched; stylus is worn or dirty; unit is not on a stable surface.	Clean record; clean or replace stylus; place unit on a stable, level surface.
Bluetooth not pairing	Device too far; wrong function selected; Bluetooth not enabled on device.	Ensure device is within 33 feet; select BLUETOOTH function; enable Bluetooth on your device and select "Victrola Highland".
FM radio static	Poor signal reception.	Adjust the unit's position or location to improve reception.

9. Specifications

Brand	Victrola
Model Name	The Highland 4-in-1 Record Player
Item Model Number	VTA-330B-ESP
Product Dimensions	16.14 x 13.78 x 7.87 inches
Item Weight	12.42 pounds (5.65 Kilograms)
Maximum Rotational Speed	78 RPM (supports 33 1/3, 45, 78 RPM)
Connectivity	Bluetooth, FM Radio, 3.5mm Aux-in, RCA Line Outputs
Included Components	Manual, Power Adaptor, RCA Cable
Material	Plastic (cabinet likely wood/MDF with plastic components)
Manufacturer	Innovative Technology

10. Warranty and Support

Victrola products are designed for reliability and performance. For warranty information, please refer to the warranty card included with your product or visit the official Victrola website. If you require technical assistance or have questions regarding your Victrola Highland 4-in-1 Bluetooth Record Player, please contact Victrola customer support.
For the most up-to-date support information, please visit:www.victrola.com/support

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07TZSV8L8

More documents and user manuals: **https://manuals.plus/**