Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Safeguard Supply SS130

Safeguard Supply SS130 Wireless Door Open Chime Instruction Manual

Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your Safeguard Supply SS130 Wireless Door Open Chime. Please read this manual thoroughly before use to ensure proper functionality and to maximize the product's lifespan. This system is designed to alert you when a door or window is opened, providing an effective entry alert solution.

Package Contents

- Door Contact Transmitter (Sensor)
- Plug-In Receiver
- 1 x CR2 Battery (pre-installed in sensor)
- Instruction Manual

Product Overview



This image displays the complete Safeguard Supply SS130 Wireless Door Open Chime system, featuring the plug-in receiver unit and the two-piece magnetic contact sensor.


Receiver Features



A detailed diagram highlighting the features of the SS130 receiver, including the LED indicator, volume control, chime selection buttons, and high-quality speaker.

- **LED Light Indicator:** Flashes when an alert is triggered.
- **Volume Control:** Adjusts the sound level of the chime.
- **Chime Selection Buttons:** Allows cycling through 52 distinct melodies.
- **High-Quality Speaker:** Produces clear and loud audio alerts.
- **Integrated Power Plug:** For direct connection to a standard electrical outlet.

Sensor Features

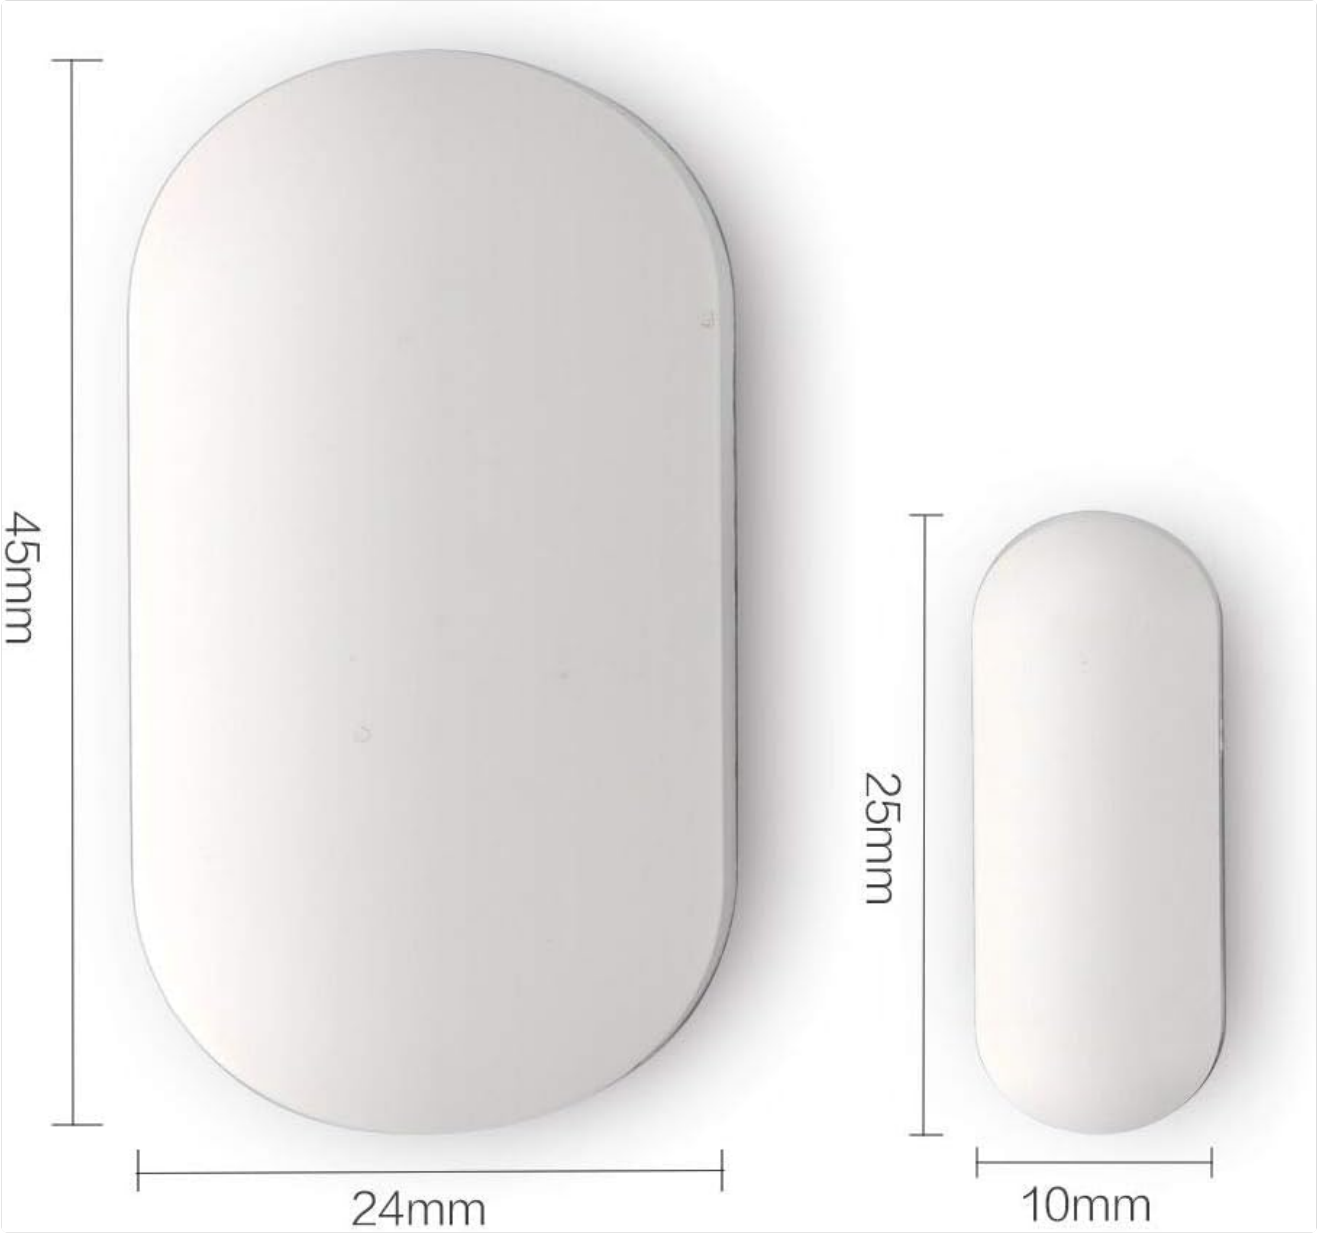

This image illustrates the dimensions of the magnetic door sensor components, showing the larger main sensor unit (45mm x 24mm) and the smaller magnetic contact (25mm x 10mm).

- **Two-Part Design:** Consists of a main transmitter unit and a smaller magnetic contact.
- **Magnetic Activation:** Triggers an alert when the magnetic contact is separated from the main unit.
- **Battery Powered:** Operates on a single CR2 battery (included).
- **Wireless Transmission:** Sends signals to the receiver over a long range.

Setup

1. Battery Installation (Sensor)

The sensor unit comes with a CR2 battery pre-installed. If replacement is needed, open the sensor casing carefully and insert a new CR2 battery, observing polarity.

2. Receiver Placement

1. Plug the receiver into any standard electrical outlet within range of the sensor.
2. Ensure the receiver is not obstructed by large metal objects or other electronic devices that could interfere

with the wireless signal.



The rear view of the SS130 receiver, detailing the integrated power plug, volume control button, and chime selection buttons (forward and backward).

3. Sensor Installation

1. Identify the desired door or window for monitoring.
2. Mount the larger sensor unit on the fixed frame of the door/window using adhesive tape or screws (not included).
3. Mount the smaller magnetic contact on the moving part of the door/window, aligning it with the main sensor unit. The gap between the two parts should be no more than 10mm when the door/window is closed.
4. Ensure both parts are securely attached and remain aligned when the door/window is closed.



A top-down view of the two magnetic sensor components, showing their rounded, white design.

4. Pairing (If necessary)

The sensor and receiver are typically pre-paired. If pairing is lost or you are adding new sensors:

1. Plug in the receiver.
2. Press and hold the volume button on the receiver for approximately 3-5 seconds until the LED indicator flashes rapidly. This indicates pairing mode.
3. Within 10 seconds, separate the two parts of the magnetic sensor (open the door/window). The receiver should chime, indicating successful pairing.
4. Test the sensor by opening and closing the door/window to confirm the chime sounds.

Operating Instructions

Volume Adjustment

Press the volume button on the side of the receiver to cycle through available volume levels. There are multiple levels, including a silent mode.

Chime Tone Selection

Use the 'Forward' and 'Backward' buttons on the side of the receiver to browse through the 52 available chime tones. The selected tone will play immediately. The receiver will remember your last selected tone.

Maintenance

Battery Replacement (Sensor)

When the sensor battery is low, the receiver may emit a specific low-battery alert or the sensor may stop transmitting signals reliably. To replace the battery:

1. Carefully open the sensor casing.
2. Remove the old CR2 battery.
3. Insert a new CR2 battery, ensuring correct polarity (+/-).
4. Close the sensor casing securely.
5. Test the sensor to ensure it is functioning correctly.

Cleaning

Wipe the receiver and sensor units with a soft, dry cloth. Do not use abrasive cleaners or immerse the units in water.

Troubleshooting

Problem	Possible Cause	Solution
Receiver does not chime when sensor is triggered.	Low or dead sensor battery. Sensor and receiver are not paired. Receiver is unplugged or has no power. Sensor and receiver are out of range or obstructed.	Replace sensor battery. Re-pair the sensor and receiver (refer to Pairing section). Ensure receiver is securely plugged into a working outlet. Move receiver closer to the sensor; remove obstructions.
Chime volume is too low or too high.	Volume setting needs adjustment.	Press the volume button on the receiver to adjust the level.
Cannot change chime tone.	Incorrect button usage.	Use the 'Forward' and 'Backward' buttons to cycle through tones.
False alarms or inconsistent alerts.	Sensor parts are too far apart. Sensor is not securely mounted.	Ensure the gap between sensor parts is less than 10mm when closed. Re-mount the sensor securely.

Specifications

Feature	Detail
Model Number	SS130

Feature	Detail
Power Source (Receiver)	AC Plug-in
Power Source (Sensor)	1 x CR2 Battery (included)
Battery Life (Sensor)	Approximately 1 year
Number of Chimes	52
Volume Levels	Adjustable (including silent)
Color	White
Special Features	UL Listed, Extra Loud
Item Weight	9.6 ounces

Warranty and Support

Safeguard Supply products are designed for reliability and performance. For warranty information, technical support, or any questions regarding your SS130 Wireless Door Open Chime, please contact Safeguard Supply directly through their official website or customer service channels. Keep your purchase receipt for warranty claims.
You can visit the Safeguard Supply store for more information:Safeguard Supply Store

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07VN7N32T

More documents and user manuals: **https://manuals.plus/**