auna KC14-V-14 DAB Black

User Manual: auna V14-DAB Vertical Stereo System

Model: KC14-V-14 DAB Black

Introduction

Thank you for purchasing the auna V14-DAB Vertical Stereo System. This compact and versatile audio system features a CD player, FM and DAB+ radio tuner, Bluetooth connectivity, AUX input, and a headphone jack. Its slim design allows for both freestanding and wall-mounted installation. This manual provides essential information for the safe and efficient operation of your device.



Image: The auna V14-DAB Vertical Stereo System, showcasing its sleek black design and integrated speakers.

Safety Instructions

Please read these safety instructions carefully before using the device and keep them for future reference. Incorrect use may result in personal injury or damage to the device.

- **Power Source:** Only connect the device to a power outlet with the specified voltage.
- **Ventilation:** Ensure adequate ventilation. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the device to rain, moisture, or dripping/splashing liquids. Do not place objects filled with liquids, such as vases, on the device.
- **Heat Sources:** Keep the device away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the device from the power outlet before cleaning. Use a soft, dry cloth only.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **CD Player:** Do not insert foreign objects into the CD slot. Handle CDs by their edges to avoid scratches.
- **Wall Mounting:** If wall mounting, ensure the wall structure can support the device's weight and follow all mounting instructions carefully.

Product Overview

Front Panel Controls and Display



Image: A detailed view of the auna V14-DAB's front panel, showing the clearly arranged display and control buttons.

1. **MODE Button:** Switches between different audio sources (CD, FM, DAB+, Bluetooth, AUX).
2. **EJECT Button:** Opens/closes the CD tray.
3. **INFO/MENU Button:** Displays information or accesses menu settings.
4. **Power/SELECT Button:** Turns the unit on/off, confirms selections.
5. **Play/Pause/Skip Buttons (TU+/-** / |<< / >>|**):**Controls playback, navigates radio stations.
6. **CD MODE Button:** Specific functions for CD playback.
7. **PROGRAM Button:** Programs radio stations or CD tracks.
8. **VOL+/- Buttons:** Adjusts volume level.
9. **Display:** Shows current mode, track information, radio frequency, etc.

Rear Connections



Image: A close-up of the rear panel of the auna V14-DAB, highlighting the AUX input and DC 5V power connection.

1. **AUX Input:** 3.5mm jack for connecting external audio devices.
2. **Headphone Jack:** 3.5mm jack for private listening.
3. **DC 5V Power Input:** For connecting the power adapter.
4. **FM/DAB+ Antenna:** Integrated or external antenna connection (if applicable).

Remote Control



Image: The auna V14-DAB stereo system shown with its included remote control, demonstrating convenient operation from a distance.

The included remote control allows for convenient operation of all functions from a distance. Ensure the battery is correctly inserted before use.

Setup

Unpacking

Carefully remove the stereo system and all accessories from the packaging. Retain the packaging materials for future transport or storage.

Placement

The auna V14-DAB can be placed on a flat, stable surface or mounted on a wall.

- **Freestanding:** Place the unit on a sturdy shelf, table, or desk. Ensure there is sufficient space around the unit for

ventilation.

- **Wall Mounting:** The unit is compatible with wall mounting. Use appropriate screws and wall plugs for your wall type. Ensure the mounting location is secure and can support the weight of the unit. Refer to the wall mounting template (if included) for precise drilling points.



Image: The auna V14-DAB stereo system with its dimensions indicated, useful for planning placement or wall mounting.

Power Connection

Connect the supplied power adapter to the DC 5V input on the rear of the unit, then plug the adapter into a suitable wall outlet.

Antenna Connection

For optimal FM and DAB+ radio reception, ensure the integrated antenna is fully extended or connect an external antenna if available and required.

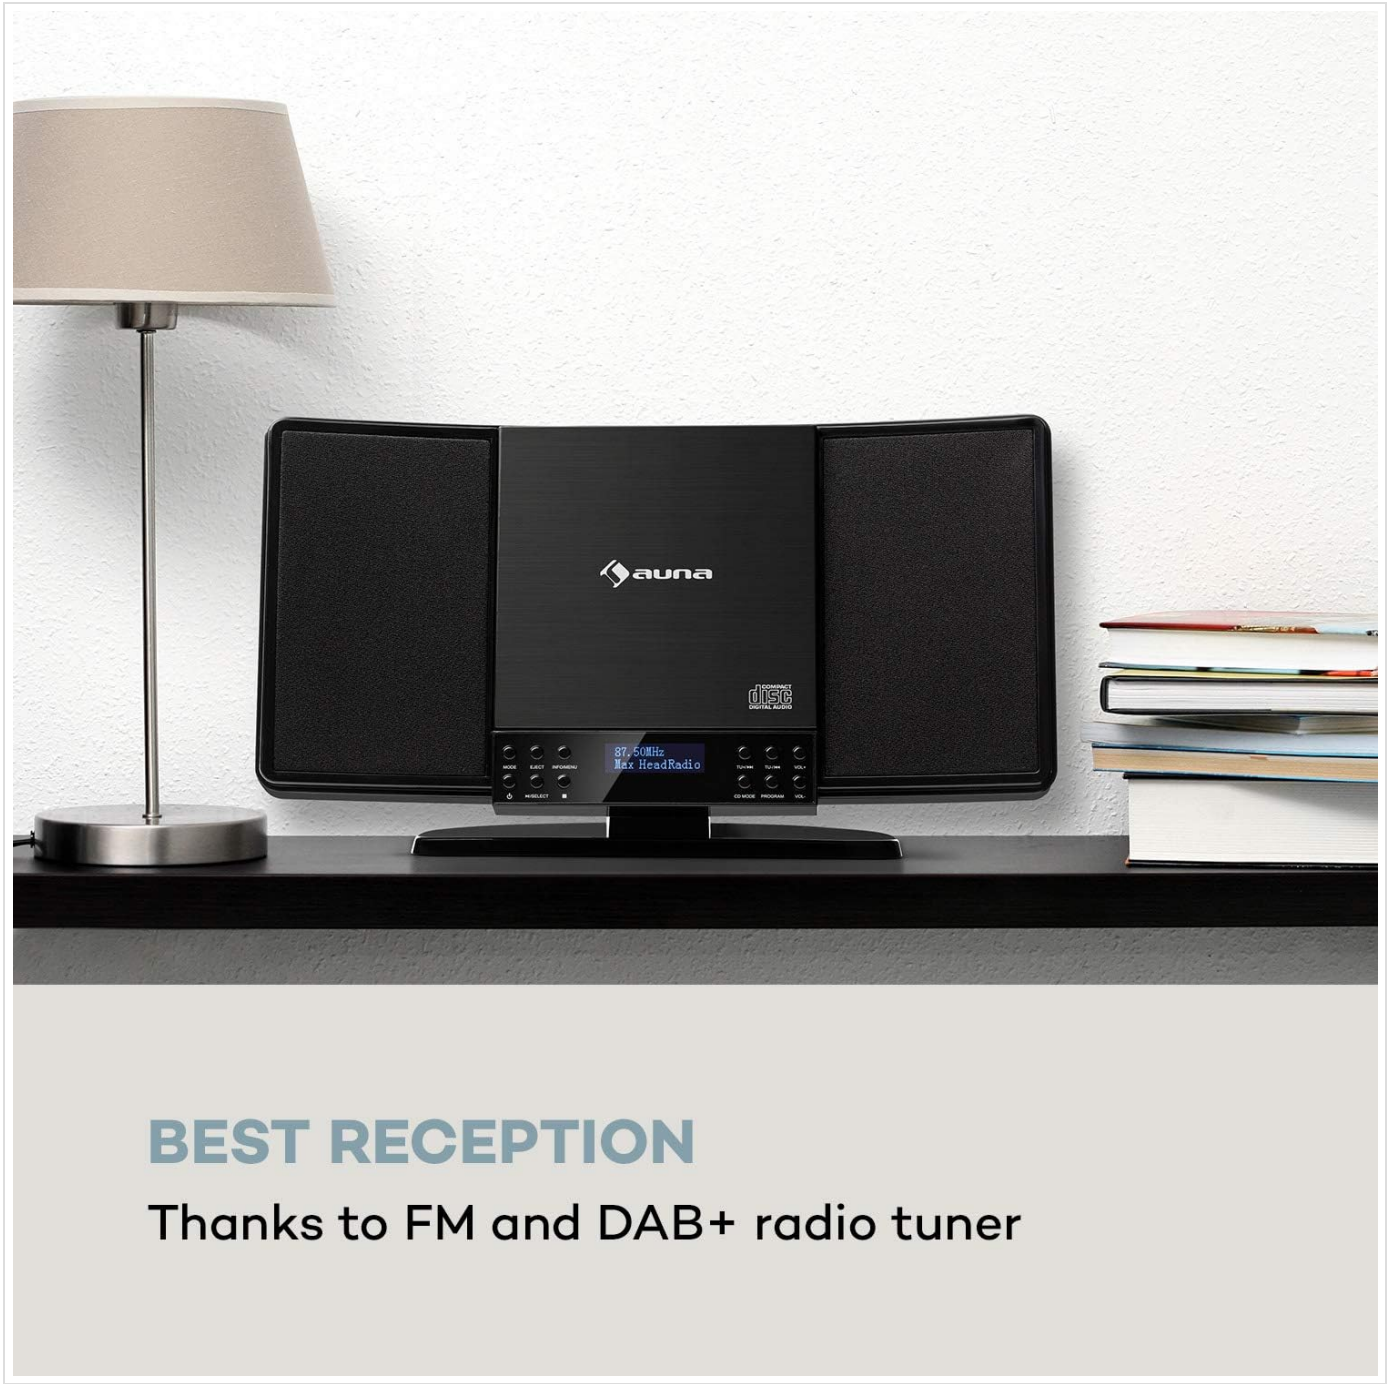


Image: The auna V14-DAB stereo system positioned on a shelf, illustrating its capability for best reception thanks to its FM and DAB+ radio tuner.

Operating Instructions

Power On/Off and Volume

- Press the **Power**/**SELECT** button on the unit or the **Power** button on the remote control to turn the unit on or off.
- Use the **VOL+/-** buttons on the unit or remote control to adjust the volume.

CD Player Operation

- Press the **MODE** button to select CD mode.
- Press the **EJECT** button to open the CD tray. Insert a CD with the label side facing forward. Press **EJECT** again to close the tray.
- The CD will begin playing automatically. Use the **Play**/**Pause** and **Skip** buttons to control playback.

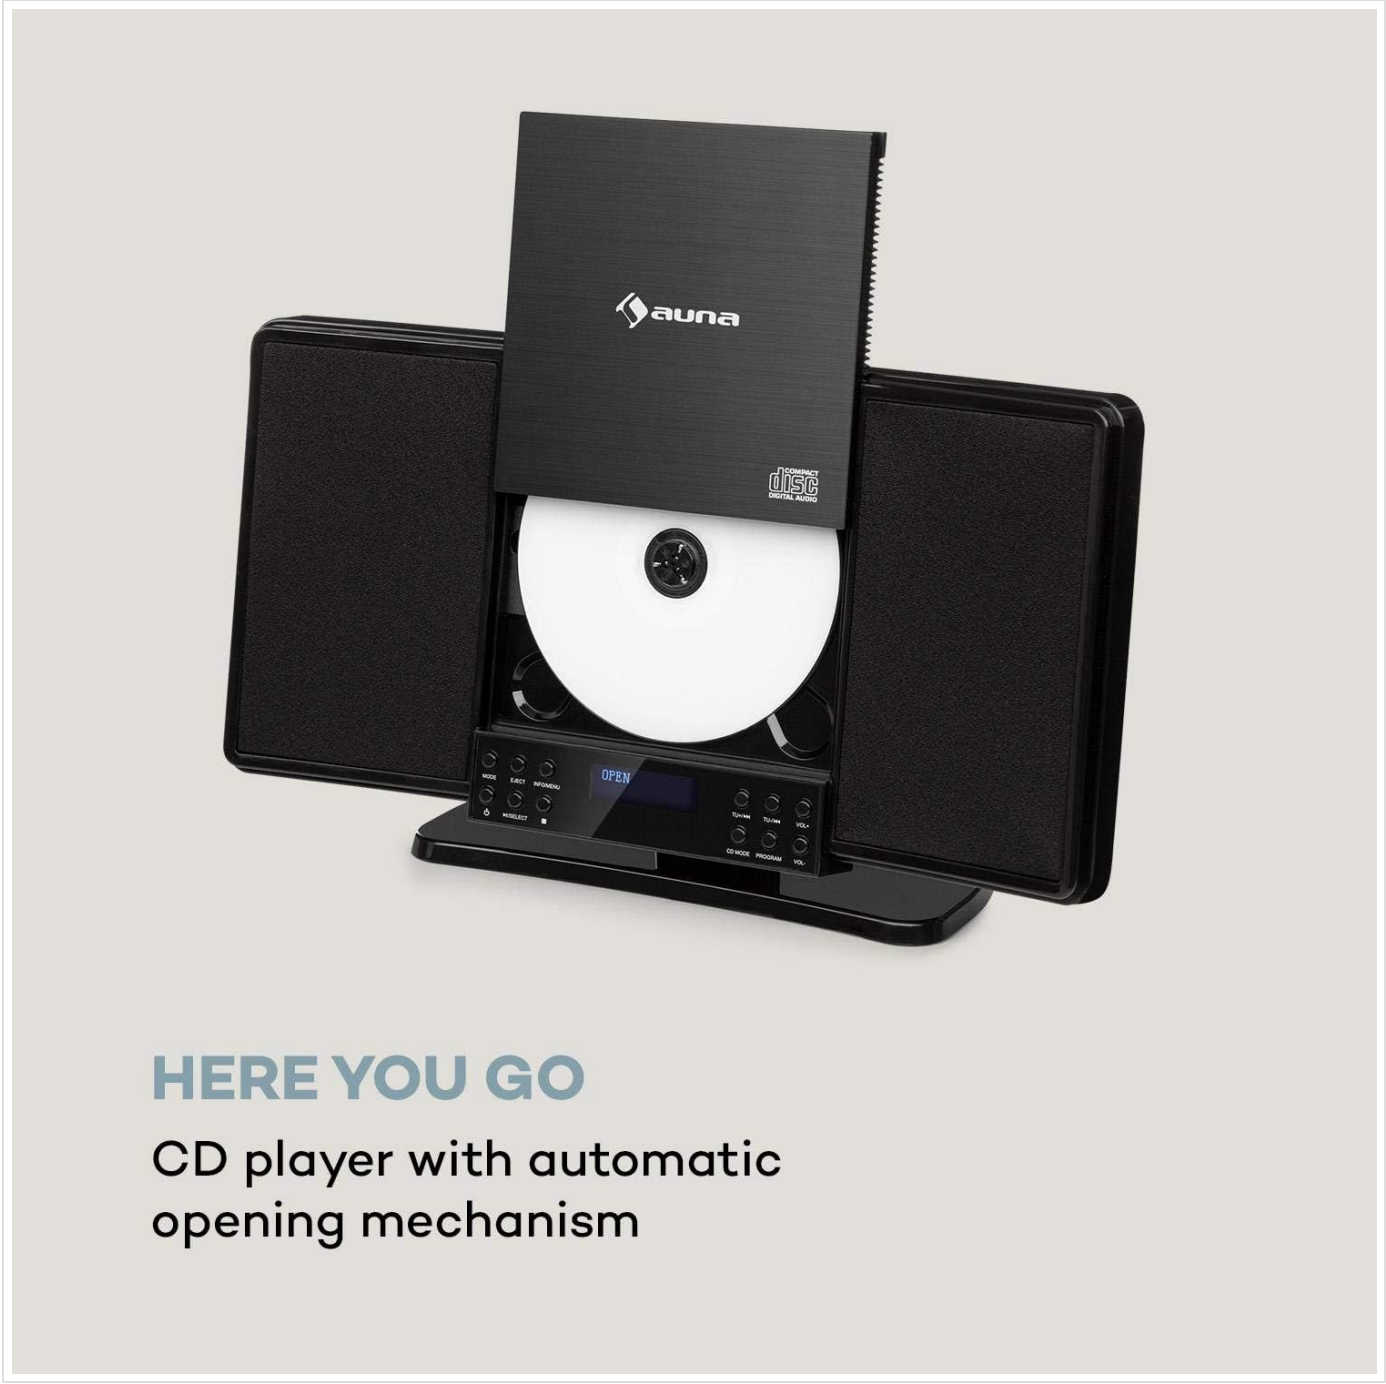


Image: The auna V14-DAB with its CD player mechanism open, demonstrating the automatic opening feature for disc insertion.

FM and DAB+ Radio Operation

- Press the **MODE** button to select FM or DAB+ radio mode.
- In DAB+ mode, the system will automatically scan for available stations upon first use.
- Use the **TU+/-** or **Skip** buttons to navigate between stations.
- To save a station, press the **PROGRAM** button, select a preset number, and press **SELECT** to confirm.

Bluetooth Function

- Press the **MODE** button to select Bluetooth mode. The display will show "Bluetooth Pairing" or similar.
- Enable Bluetooth on your external device (e.g., smartphone, tablet) and search for "auna V14-DAB".
- Select the device to pair. Once connected, you can stream audio wirelessly.



Image: The auna V14-DAB stereo system mounted on a wall, with a hand holding a smartphone nearby, illustrating easy wireless audio streaming via Bluetooth.

AUX Input Operation

- Connect an external audio device (e.g., MP3 player) to the**AUX Input** jack on the rear of the unit using a 3.5mm audio cable.
- Press the **MODE** button to select AUX mode.
- Control playback from your external device.

Headphone Output

- Connect headphones to the **Headphone Jack** on the rear of the unit for private listening. The internal speakers will be muted automatically.

Maintenance

Cleaning

Always unplug the device from the power outlet before cleaning. Use a soft, dry cloth to wipe the exterior surfaces. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

CD Care

Handle CDs by their edges. Keep them clean and free of scratches. Store CDs in their cases when not in use.

Troubleshooting

Problem	Possible Cause	Solution
No power	Power adapter not connected; power outlet faulty.	Check power adapter connection; try a different outlet.
No sound	Volume too low; wrong input mode; headphones connected.	Increase volume; select correct mode; disconnect headphones.
CD not playing	CD inserted incorrectly; CD scratched/dirty; wrong mode.	Reinsert CD correctly; clean CD; select CD mode.
Poor radio reception	Antenna not extended; weak signal.	Extend antenna fully; reposition unit for better signal.
Bluetooth not connecting	Device not in pairing mode; Bluetooth off on external device.	Ensure unit is in Bluetooth pairing mode; enable Bluetooth on external device.
Remote control not working	Battery depleted; line of sight blocked.	Replace battery; ensure no obstructions between remote and unit.

Specifications

Feature	Detail
Brand	auna
Model	KC14-V-14 DAB Black
Connectivity Technology	Bluetooth
Speaker Type	Stereo
Power Source	Corded Electric, Battery Powered (for remote)
Compatible Devices	Headphones, External Audio Devices (via AUX)
Dimensions (Packaging)	37.7 x 23.3 x 16.4 cm
Weight (Packaging)	1.73 Kilograms

Warranty and Support

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the

warranty card included with your product or contact auna customer support. For technical assistance or service inquiries, please visit the official auna website or contact their customer service department.

For further assistance, please visit: auna Official Store on Amazon

© 2025 auna. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question