Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

BOSCH HEI8056U

Bosch 800 Series HEI8056U 30-inch Slide-in Electric Range User Manual

Model: HEI8056U

1. Introduction

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Bosch 800 Series HEI8056U 30-inch Slide-in Electric Range. Please read all instructions carefully before using the appliance to ensure proper function and to prevent potential hazards. Keep this manual for future reference.



Figure 1.1: Front view of the Bosch 800 Series HEI8056U Electric Range.

2. Important Safety Information

WARNING: To reduce the risk of fire, electric shock, injury to persons, or damage when using the appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Ensure proper installation by a qualified technician in accordance with all local codes and ordinances.

- Do not store flammable materials in or near the oven.
- Never use the appliance for warming or heating the room.
- Keep children away from the appliance. Do not allow children to play with the range or its controls.
- Always use dry pot holders. Moist or damp pot holders on hot surfaces may result in burns from steam.
- Do not touch heating elements or interior surfaces of the oven during or immediately after use. They may be hot enough to cause burns.
- Never cover any slots or openings in the oven bottom or cover an entire rack with materials such as aluminum foil. Doing so blocks airflow through the oven and may cause carbon monoxide poisoning.

3. Setup and Installation

3.1 Product Dimensions and Clearances

The Bosch HEI8056U electric range measures approximately 28.87 x 31.5 x 36.5 inches (Depth x Width x Height). Proper clearances are crucial for safe operation and ventilation.

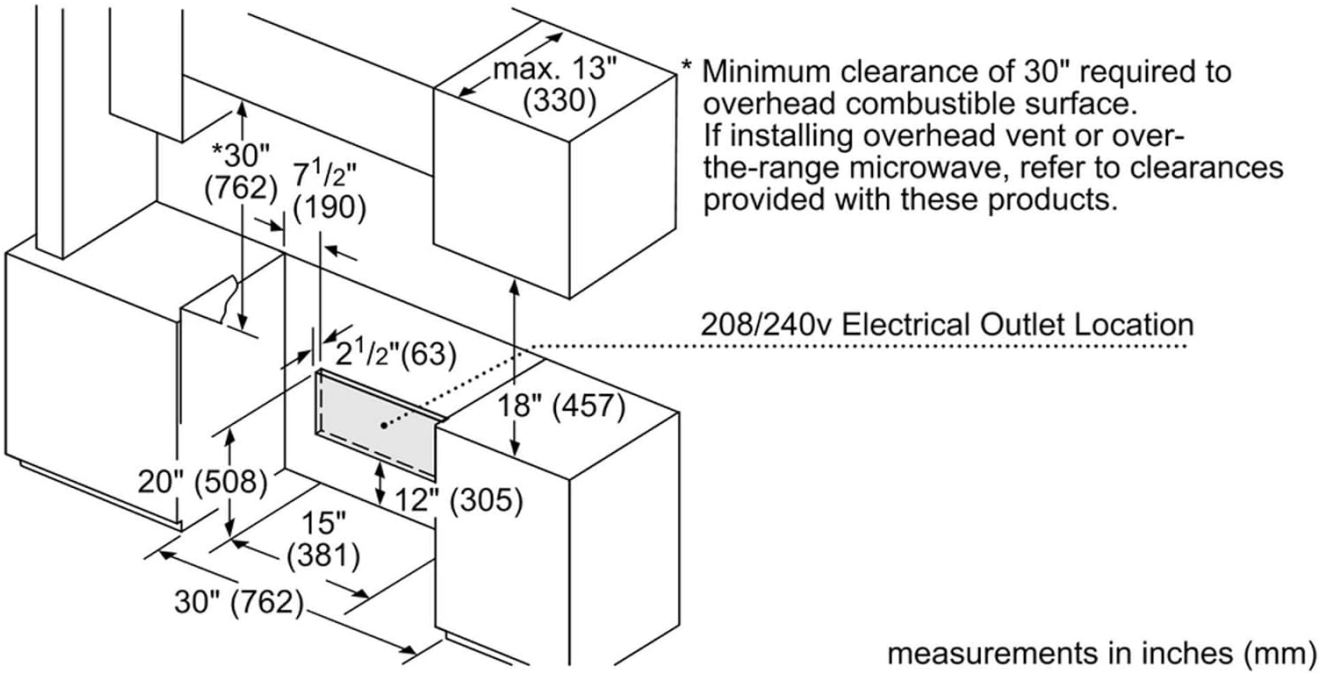


Figure 3.1: Electrical outlet location and minimum clearances. A minimum clearance of 30 inches (762 mm) is required to overhead combustible surfaces.

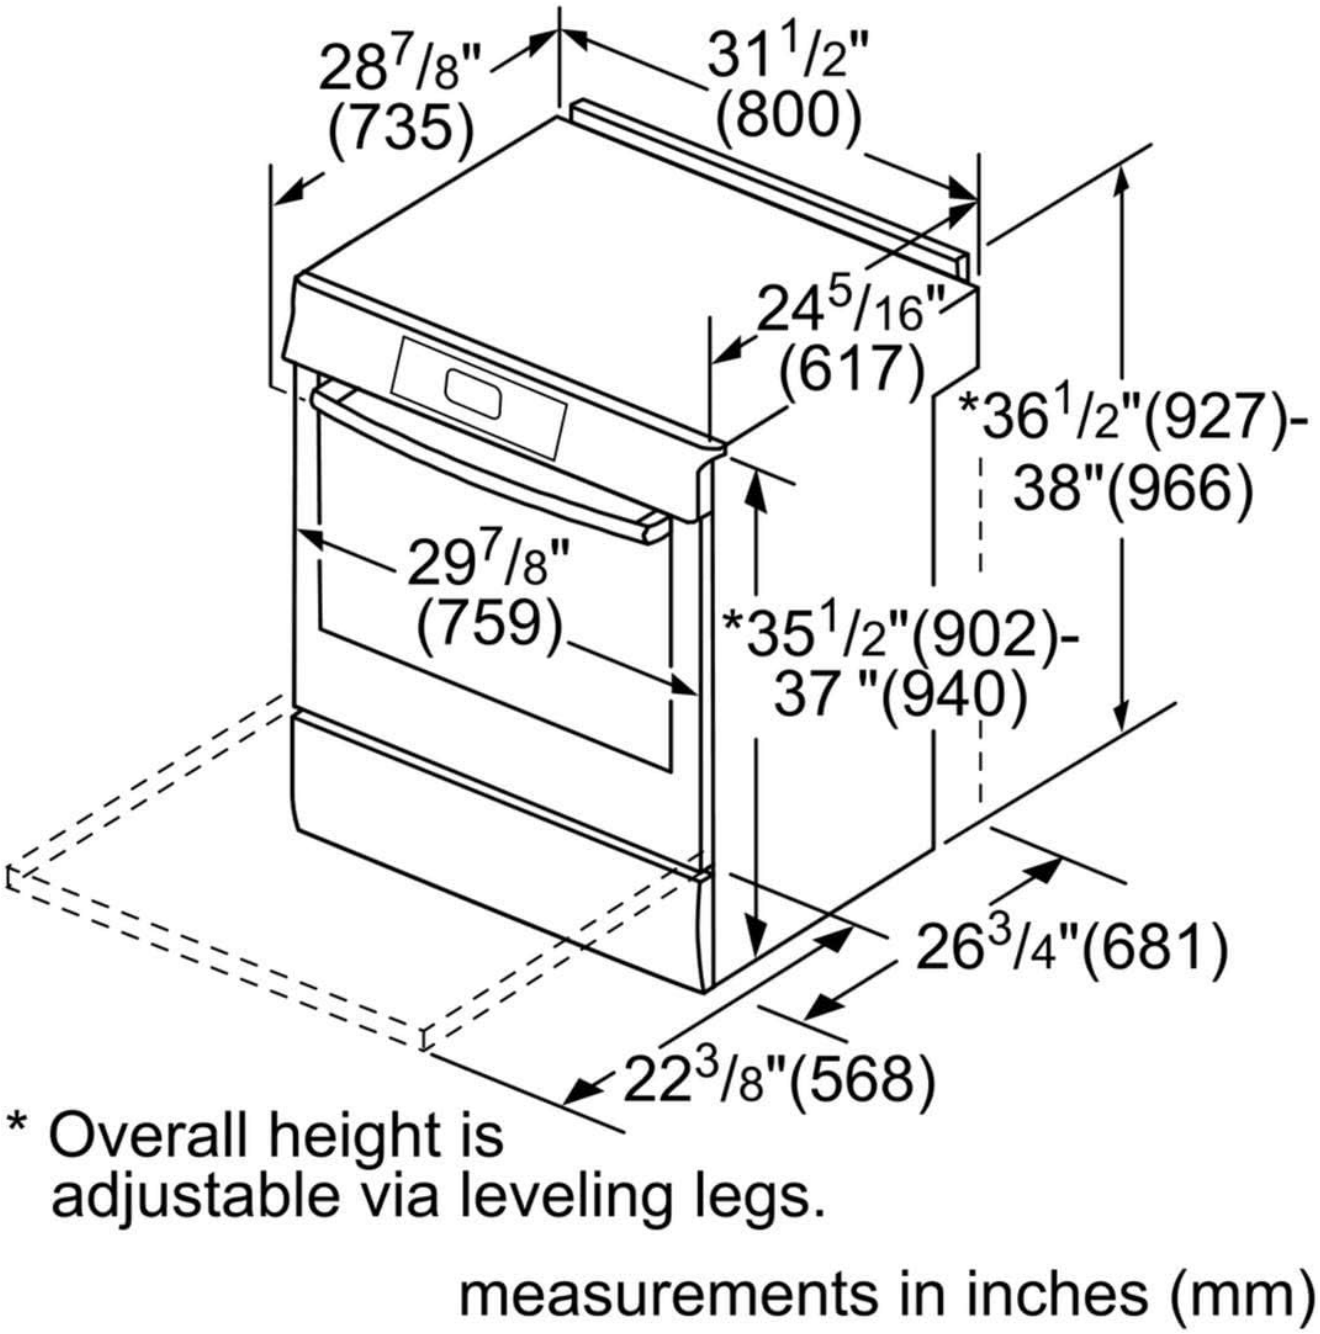


Figure 3.2: Overall dimensions of the Bosch HEI8056U electric range. Overall height is adjustable via leveling legs.

3.2 Electrical Requirements

This appliance requires a 208/240V electrical outlet. Consult a qualified electrician to ensure your home's electrical system meets the requirements for safe installation and operation.

3.3 Leveling the Range

The range is equipped with adjustable leveling legs. After positioning the range, adjust these legs to ensure the appliance is stable and level. This prevents spills and ensures even cooking.

4. Operating Instructions

4.1 Control Panel Overview

The range features a touch control panel for oven functions and push-to-turn knobs for cooktop elements. The digital display shows time and selected settings.



Figure 4.1: The touch control panel for oven settings and functions.

4.2 Cooktop Operation

The cooktop features five electric heating elements, including a warming zone. To activate a burner, push the corresponding knob inward and turn it to the desired heat setting (Lo to Hi). The push-to-turn design helps prevent accidental activation.



Figure 4.2: Top view of the cooktop with five heating elements.

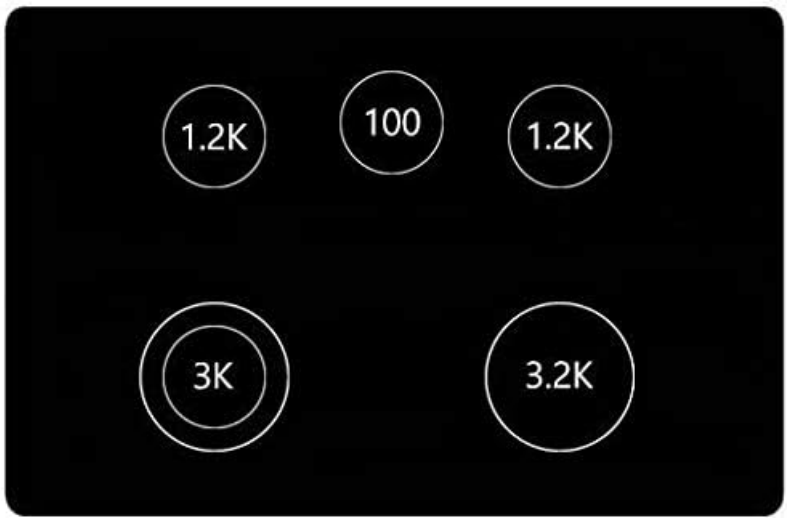


Figure 4.3: Cooktop elements with approximate power ratings.

4.3 Oven Functions

The oven offers a variety of cooking modes:

- **Bake:** For general baking.
- **Broil:** For searing and browning.
- **Convection Bake:** Uses a fan to circulate heat for even baking.
- **Convection Roast:** Ideal for roasting meats with a crispy exterior.
- **Warming Drawer:** Located below the oven, designed to keep food warm.
- **Self-Clean:** High-temperature cleaning cycle for the oven interior.
- **Fast Preheat:** Reduces preheating time.
- **Probe:** For precise temperature monitoring of food.



Figure 4.4: The convenient warming drawer for keeping dishes at serving temperature.

5. Maintenance and Cleaning

5.1 Cooktop Cleaning

The smooth glass cooktop surface is easy to clean. Allow the surface to cool completely before cleaning. Use a ceramic cooktop cleaner and a non-abrasive pad or cloth to remove spills and stains. Avoid harsh chemicals or abrasive scrubbers that can scratch the surface.

5.2 Oven Cleaning

The oven features a self-cleaning cycle. Refer to the detailed instructions in the full manual for proper use of this feature. For lighter cleaning, a 400°F steam cleaning method can be used by placing a heat-safe bowl of water in the oven and running it for a short period, then wiping down the interior once cooled.

5.3 Stainless Steel Care

Clean stainless steel surfaces with a soft cloth and a mild detergent or a specialized stainless steel cleaner. Always wipe in the direction of the grain to prevent streaking. Avoid abrasive cleaners or pads.

6. Troubleshooting

This section addresses common issues you might encounter with your Bosch HEI8056U electric range.

- **Oven displays E201 error:** This error indicates a potential issue with the oven's electronic board. Try resetting the appliance by turning off the circuit breaker for a few minutes, then turning it back on. If the error persists, contact Bosch customer service.
- **Cooktop not heating:** Ensure the burner knob is pushed in and turned to the desired setting. Check if the child lock feature is activated on the control panel.
- **Control panel unresponsive:** The touch panel is sensitive. Ensure your hands are clean and dry. If the panel is locked, unlock it as per the instructions on the display.
- **Uneven cooking:** Ensure the oven racks are positioned correctly and the range is level. Avoid overcrowding the oven, which can restrict airflow.

For issues not listed here or if problems persist, please contact Bosch customer support.

7. Specifications

Feature	Specification
Product Dimensions (D x W x H)	28.87 x 31.5 x 36.5 inches
Item Weight	5 pounds
Manufacturer	Bosch
Model Number	HEI8056U
ASIN	B07W62HGFZ
Electrical Requirement	208/240V
Cooktop Elements	5 (including warming zone)
Oven Type	True Convection, Self-Cleaning

8. Warranty and Support

Your Bosch 800 Series HEI8056U electric range comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical assistance, service requests, or to order parts, please contact Bosch customer support through their official website or the contact information provided in your warranty documentation.
For more information, visit the official Bosch Home Appliances store:Bosch Home Appliances Store

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07W62HGFZ

More documents and user manuals: **https://manuals.plus/**