JALL V18039

JALL Digital Alarm Clock V18039 User Manual

Model: V18039

1. Product Overview

The JALL Digital Alarm Clock V18039 is a multi-functional device featuring an LED time display, three independent alarm settings, and integrated sensors for humidity and temperature. Its design incorporates a wooden finish, making it suitable for various indoor environments.



Image 1.1: Front view of the JALL Digital Alarm Clock V18039, displaying time, humidity percentage, and temperature in Fahrenheit.

2. Package Contents

- JALL Digital Alarm Clock V18039
- USB to Barrel Power Cord
- User Manual (this document)

3. Setup

3.1 Power Connection

The JALL Digital Alarm Clock V18039 operates exclusively via the provided USB to barrel power cord. It is **not** battery operated for primary function. A backup battery (CR-2032, not included) may be used to retain settings

during power outages, but will not power the display.

1. Connect the small barrel plug of the power cord into the DC IN port on the back of the alarm clock.
2. Plug the USB end of the power cord into a compatible USB power adapter (not included) or a powered USB port.
3. The display will illuminate, indicating the clock is powered on.



Image 3.1: Illustration of the clock's power requirements, emphasizing USB power and the absence of battery operation for the main display.

4. Operating Instructions

4.1 Time and Date Settings

Refer to the buttons on the back of the unit for setting the time and date. Specific button functions are typically labeled (e.g., SET, UP, DOWN).

- **Time Format:** Toggle between 12-hour and 24-hour display modes. In 12-hour mode, 'AM' or 'PM' indicators will be visible.
- **Temperature Unit:** Switch between Fahrenheit (°F) and Celsius (°C) for temperature display.



Image 4.1: Examples of multiple display styles, including 24-hour/12-hour time and Celsius/Fahrenheit temperature.

4.2 Alarm Settings

The clock supports up to three independent alarms (Alarm 1, Alarm 2, Alarm 3).

1. Press the 'ALARM' button to cycle through Alarm 1, Alarm 2, and Alarm 3 settings.
2. Use the 'UP' and 'DOWN' buttons to adjust the desired alarm time.
3. Confirm the alarm time by pressing 'ALARM' again or waiting for the setting to auto-save.
4. **Alarm Modes:** The clock offers Daily, Weekday (Monday-Friday), and Weekend modes for each alarm. Select the desired mode during alarm setup.

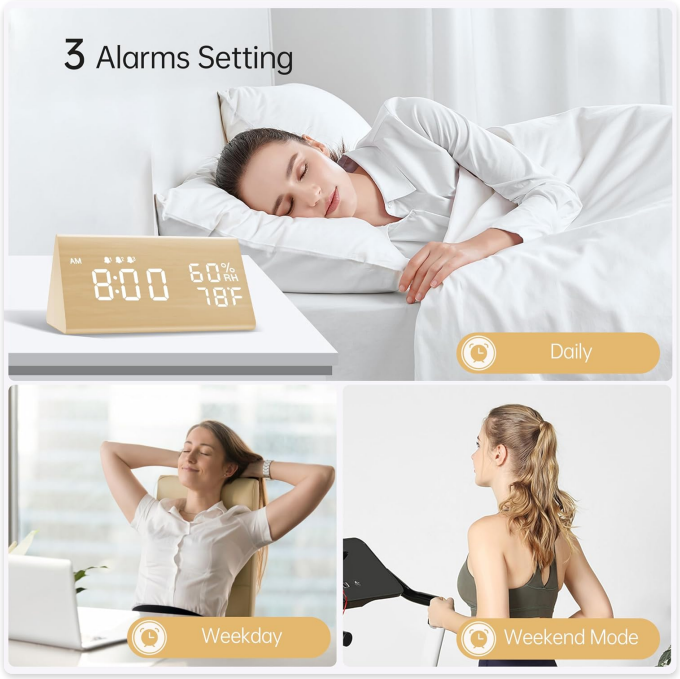


Image 4.2: Visual representation of the three alarm setting options: Daily, Weekday, and Weekend Mode.

4.3 Snooze Function

When an alarm sounds, press any button on the back of the clock to activate the snooze function. This will temporarily silence the alarm for 9 minutes.



Image 4.3: The clock displaying time, with an image of a person yawning, indicating the 9-minute snooze feature.

4.4 Brightness and Volume Adjustment

The clock features multiple brightness levels for the LED display and adjustable alarm volume.

- **Brightness:** Adjust the display brightness from low (L1) to high (L6). An option to turn off the LED display, making it sound-sensitive (activates with sound), may also be available.
- **Volume:** Adjust the alarm volume through 5 levels (V1 to V5).

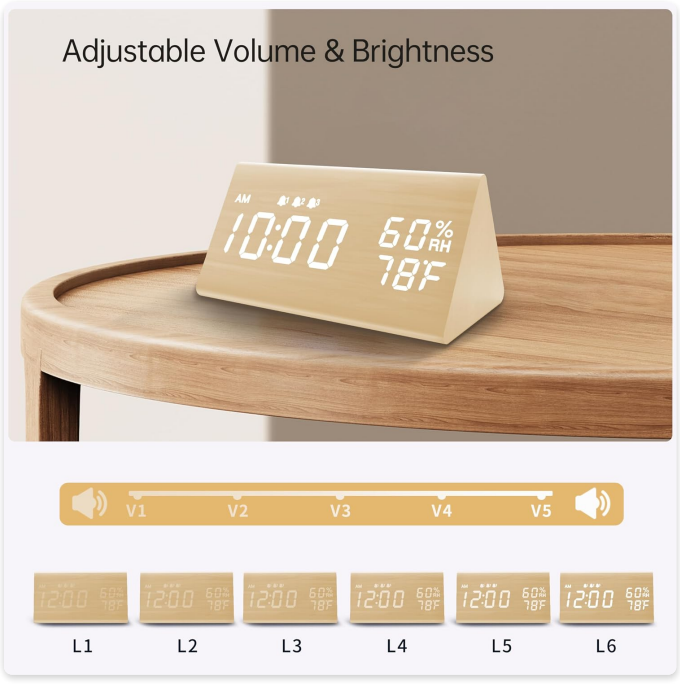


Image 4.4: Visual guide for adjusting the volume and brightness settings on the alarm clock.

4.5 Temperature and Humidity Display

The clock continuously monitors and displays indoor temperature and humidity levels. The temperature unit can be switched between Fahrenheit and Celsius as described in Section 4.1.

5. Maintenance

5.1 Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or excessive moisture, as these can damage the wooden finish or electronic components.

5.2 Power Management

Ensure the clock is connected to a stable power source. In case of a power outage, a CR-2032 backup battery (not included) can preserve settings, but the display will not be active without external power.

6. Troubleshooting

- **Display is off:** Ensure the USB power cord is securely connected to both the clock and a working power source. Check if the brightness setting is at L1 (lowest) or if the display is set to sound-sensitive mode.
- **Alarm not sounding:** Verify that the alarm is enabled and set to the correct time and mode (Daily, Weekday, Weekend). Check the alarm volume setting.
- **Incorrect time/date:** Re-enter the time and date settings as per Section 4.1.
- **Inaccurate temperature/humidity:** Ensure the clock is placed in an area with good air circulation, away from direct heat sources or extreme humidity. Allow some time for the sensors to stabilize after initial setup or relocation.

7. Specifications

Feature	Detail
Model Number	V18039
Product Dimensions	5.8"W x 3.1"H x 2.7"D
Item Weight	10.2 ounces
Power Source	Corded Electric (USB to barrel)
Display Type	Digital LED
Material	Wood
Alarm Settings	Up to 3 (Daily, Weekday, Weekend modes)
Snooze Duration	9 minutes
Special Features	Temperature Display, Humidity Display, Adjustable Brightness, Adjustable Volume



Image 7.1: Product dimensions of the JALL Digital Alarm Clock.

8. Warranty and Support

JALL provides a 365-day warranty for products sold on Amazon. For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact JALL customer support. Refer to your purchase documentation or the official JALL website for current contact information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question