Noma CTI1513194

NOMA Christmas Deer Doe & Fawn Pre-Lit LED Outdoor Yard Decor

Instruction Manual - Model CTI1513194

Brand: Noma

1. Important Safety Information

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Outdoor Use Only:** This product is designed for outdoor use.
- **Unplug During Inclement Weather:** Always unplug the decoration during strong winds, heavy rain, snowstorms, or other severe weather conditions to prevent damage or electrical hazards.
- **Keep Away from Children:** Do not allow children to play on or near the display. This is not a toy.
- **Flammable Materials:** Keep the decoration away from flammable materials such as dry leaves, fabrics, or other combustible items.
- **Electrical Connection:** Ensure the power cord and plug are in good condition. Do not use if damaged. Connect to a Ground Fault Circuit Interrupter (GFCI) protected outlet.
- **Secure Placement:** Ensure the decoration is securely anchored to the ground to prevent tipping or being blown over by wind.

2. Package Contents

Verify that all components are present before beginning assembly.

- 1 x NOMA Pre-Lit LED Doe (approx. 33.6 inches tall)

- 1 x NOMA Pre-Lit LED Fawn (approx. 24 inches tall)
- Assembly hardware (e.g., stakes, zip ties, if applicable)
- Power cord with plug

3. Setup Instructions

Follow these steps for proper assembly and placement of your NOMA Christmas Deer decoration.

1. **Unpack Components:** Carefully remove all items from the packaging. It is recommended to assemble outdoors or in a garage due to potential glitter shedding.
2. **Assemble Deer Figures:** The deer figures are largely pre-assembled. Connect any detached sections or limbs as indicated by the design. Ensure all connections are secure.
3. **Position Red Bows:** The red bows are pre-attached. Adjust their position as desired.
4. **Placement:** Choose a suitable outdoor location for the doe and fawn. Ensure the area is clear of obstructions and provides a stable surface. The set is ideal for porches, front lawns, or indoor spaces.
5. **Secure to Ground:** Use the provided ground stakes to firmly anchor the base of each deer figure into the soil. This prevents movement due to wind.
6. **Connect Power:** Plug the power cord into a standard 120-volt outdoor electrical outlet that is GFCI protected. Ensure the connection is dry and protected from moisture.



Image 1: The NOMA Christmas Deer Doe and Fawn set, showcasing the pre-lit design and red bows.

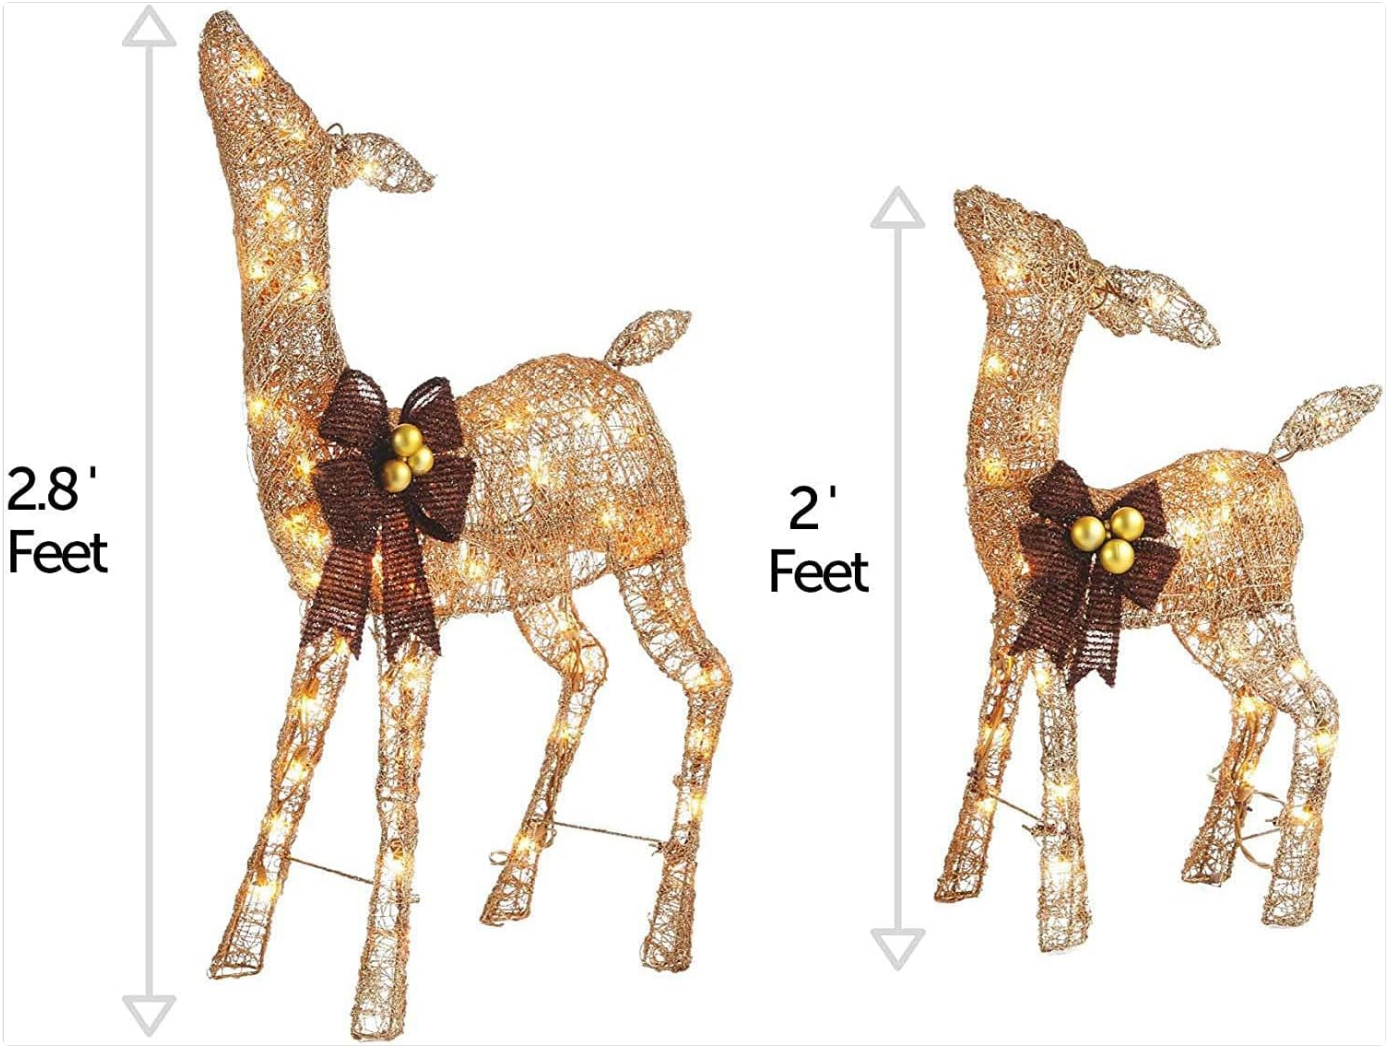


Image 2: Visual representation of the dimensions, with the doe measuring 2.8 feet and the fawn 2 feet in height.

4. Operating Instructions

The NOMA Christmas Deer decoration is designed for simple operation.

- **Power On/Off:** Once plugged into a live electrical outlet, the LED lights will illuminate. To turn off, simply unplug the unit from the power source.
- **Automatic Operation (with timer, if applicable):** If using an external timer (not included), set the timer according to its instructions to control the on/off cycles of the decoration.
- **Light Type:** The decoration features energy-efficient warm white LED bulbs.



Image 3: The illuminated NOMA deer set positioned in a snowy outdoor environment at night.

5. Maintenance

Proper care will ensure the longevity of your decoration.

- **Cleaning:** Disconnect from power before cleaning. Wipe the figures with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, store the decoration in its original packaging or a protective container in a cool, dry place. Disassembly for storage can be more challenging than initial setup; carefully reverse the assembly steps.
- **Durability:** The decoration is crafted from durable metal and PVC materials designed to withstand various climates.

6. Troubleshooting

If you encounter issues with your NOMA Christmas Deer decoration, refer to the following common solutions:

- **Lights Not Illuminating:**
  - Ensure the power cord is securely plugged into a functional 120-volt GFCI-protected outlet.
  - Check if the outlet is receiving power by testing it with another appliance.
  - Inspect the power cord for any visible damage. Do not use if damaged.
- **Decoration Instability:**
  - Ensure ground stakes are fully inserted into the ground.
  - If placed on a hard surface, consider using sandbags or other weights to stabilize the base.
- **Glitter Shedding:**
  - Glitter shedding is a common characteristic of this type of decoration. It is not a defect.
  - Assemble and disassemble the product outdoors to minimize glitter spread indoors.

7. Specifications

Feature	Detail
Model Number	CTI1513194
ASIN	B07WK9DF7H
UPC	029944572565
Item Weight	8.38 pounds
Number of Items	2 (Doe & Fawn)
Doe Height	Approx. 33.6 inches (2.8 feet)
Fawn Height	Approx. 24 inches (2 feet)
Light Color	Warm White
Number of Light Sources	105 LED bulbs
Voltage	120 Volts
Material	Metal frame, PVC, Cotton (for decorative elements)
Color	Gold (with red bows)
Recommended Use	Outdoor/Indoor Holiday Decoration

8. Warranty and Support

For warranty information or product support, please contact NOMA customer service directly. Details can typically be found on the product packaging or the official NOMA website.

We are committed to providing practical solutions and innovations for your home. For further assistance, please visit the Noma Store on Amazon.

© 2025 Noma. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question