Belaco BS-C388

Belaco BS-C388 Multifunction Handheld Steam Cleaner User Manual

1. Introduction

Thank you for choosing the Belaco BS-C388 Multifunction Handheld Steam Cleaner. This device is designed for effective and chemical-free cleaning across various surfaces in your home. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.

2. Safety Information

WARNING: Failure to follow these safety instructions may result in fire, electric shock, or other injury or damage.

- Do not power on the appliance until the water tank is completely filled.
- During operation, ensure the water tank opening is tightly sealed and the safety cap is securely fastened.
- Do not tilt the nozzle more than 35 degrees during operation to prevent water leakage.
- Always unplug the unit before refilling water or changing accessories.
- Keep out of reach of children and pets.
- Do not direct steam at people, animals, or electrical appliances.
- Use only clean tap water. Do not add detergents, perfumes, or other chemicals to the water tank.
- If the long nozzle or any other part is damaged, replace it immediately to prevent accidental injury.

3. Product Overview

Package Contents

Your Belaco BS-C388 steam cleaner comes with the following components:

- Belaco Handheld Steam Cleaner Unit
- Extension Hose
- Fabric Steam Tool
- Window / Door Brush Plate

- Brush Head
- Bend Spray Cup (Angled Nozzle)
- Towel Sleeve
- Measuring Cup
- Funnel



Image 3.1: Belaco Handheld Steam Cleaner with its 9 included accessories, including the main unit, extension hose, fabric steam tool, window/door brush plate, brush head, bend spray cup, towel sleeve, measuring cup, and funnel.



Image 3.2: The Belaco Handheld Steam Cleaner in yellow and black, shown with all its attachments, including various nozzles, brushes, and cloths, ready for use.

4. Setup

1. **Unpack:** Carefully remove all components from the packaging.
2. **Remove Safety Cap:** To open the water tank, push down on the safety cap and rotate it counter-clockwise until it unscrews.



Image 4.1: Visual guide demonstrating how to remove the safety cap: 1. Push down on cap. 2. While keeping pressure, rotate counter-clockwise. 3. Cap unscrews normally.

3. **Fill Water Tank:** Using the provided measuring cup and funnel, fill the water tank with up to 300 ml of clean tap water. Do not overfill.
4. **Secure Safety Cap:** Screw the safety cap back on by pushing down and rotating clockwise until it is tightly sealed.
5. **Attach Accessory:** Select the appropriate accessory for your cleaning task and securely attach it to the steam cleaner nozzle. For extended reach, use the extension hose.



Image 4.2: The Belaco steam cleaner with the flexible extension hose attached, allowing for easier access to hard-to-reach areas.

5. Operating Instructions

1. **Power On:** Plug the steam cleaner into a suitable electrical outlet (240V). The indicator light will illuminate, signifying that the unit is heating up.
2. **Heat Up:** Allow approximately 3-5 minutes for the water to heat and steam to build pressure. The indicator light may turn off or change color when ready, depending on the model.
3. **Begin Cleaning:** Point the nozzle at the surface to be cleaned and press the steam trigger. Release the trigger to stop the steam flow.
4. **Cleaning Applications:**
    - **Hard Surfaces:** Use the brush head or window/door brush plate for tiles, grout, sealed floors, and windows.

- **Fabrics & Upholstery:** Attach the fabric steam tool with the towel sleeve for refreshing clothes, curtains, and upholstery.

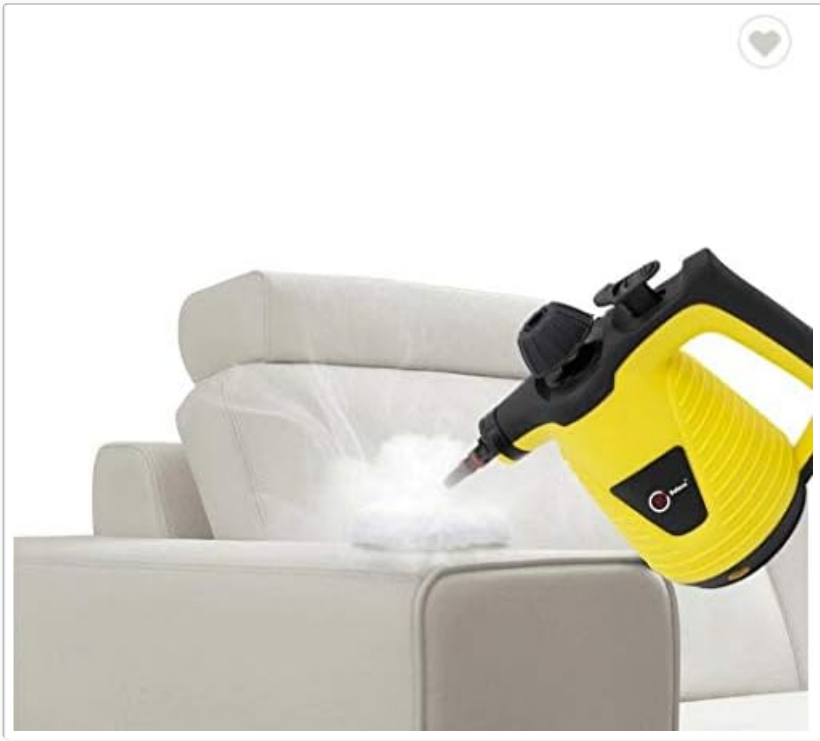


Image 5.1: The handheld steam cleaner being used to steam clean a light-colored sofa, demonstrating its application for upholstery.

- **Tight Spaces:** The bend spray cup (angled nozzle) is ideal for corners, crevices, and hard-to-reach areas.



Image 5.2: The steam cleaner in use inside a car, illustrating its ability to deep clean and sanitize vehicle interiors, with magnified images of dust mites and bacteria.

5. **Refilling:** If steam pressure decreases significantly or stops, unplug the unit and allow it to cool for a few minutes before carefully unscrewing the safety cap and refilling with water.
6. **Power Off:** When finished cleaning, release the steam trigger, unplug the unit from the power outlet, and allow it to

cool down completely before storing.

6. Maintenance

- **Cleaning the Unit:** Wipe the exterior of the steam cleaner with a damp cloth. Do not immerse the unit in water.
- **Draining Water:** After each use, ensure the unit is cool, then carefully unscrew the safety cap and drain any remaining water from the tank.
- **Accessory Care:** Clean accessories with water and mild soap if necessary. Allow them to dry completely before storing.
- **Storage:** Store the steam cleaner and its accessories in a cool, dry place, away from direct sunlight and out of reach of children.

7. Troubleshooting

Problem	Possible Cause	Solution
No steam or low steam pressure	Water tank is empty or low. Unit not fully heated. Safety cap not securely fastened.	Unplug, allow to cool, refill water. Wait for full heat-up. Ensure safety cap is tight.
Water leakage from nozzle	Nozzle tilted too much (over 35 degrees). Accessory not properly attached.	Keep nozzle angle within limits. Re-attach accessory securely.
Unit not turning on	Not plugged in. Power outlet issue.	Ensure unit is securely plugged in. Test outlet with another appliance.

8. Specifications

Feature	Specification
Brand	Belaco
Model Number	BS-C388
Color	Yellow/Black
Product Dimensions (L x W x H)	27 x 14 x 23.5 cm
Item Weight	1.81 Kilograms
Water Tank Capacity	300 Milliliters
Power	1050 Watts
Voltage	240 Volts
Material	Plastic and Brass
Special Features	Multi-use, Chemical-free and Safe, High Heating Efficiency and Energy Saving

Feature	Specification
Surface Recommendation	Hard Floor
Form Factor	Handheld

9. Warranty and Support

Information regarding warranty and customer support for the Belaco BS-C388 Multifunction Handheld Steam Cleaner is not available in the provided product details. Please refer to the product packaging or contact the retailer for specific warranty terms and support options.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question