Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Proscenic T21

Proscenic T21 Air Fryer User Manual

Model: T21 | Brand: Proscenic

Introduction

Thank you for choosing the Proscenic T21 Air Fryer. This manual provides essential information for the safe and efficient operation of your appliance. Please read it thoroughly before first use and keep it for future reference.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

Product Overview

The Proscenic T21 Air Fryer is designed for healthy cooking with minimal oil. It features a 5.5L capacity, LED touch screen, and smart control capabilities.

Components

- Main Unit

- Removable Frying Basket
- Non-stick Crisper Plate
- Power Cord



Figure 1: Proscenic T21 Air Fryer with its basket containing fries, alongside a smartphone showing the control application.

Control Panel

The intuitive LED touch screen allows for easy selection of cooking programs and adjustments.



Figure 2: Detailed view of the LED touch control panel, showing temperature, time, and preset cooking options.

Setup and First Use

Unpacking

1. Remove all packaging materials, stickers, and labels from the appliance.

2. Remove the frying basket and crisper plate from the air fryer.
3. Wash the frying basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge.
4. Wipe the inside and outside of the appliance with a damp cloth.

Placement

- Place the air fryer on a stable, horizontal, and heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of free space on the back and sides of the appliance, and 10 cm (4 inches) above it.
- Do not place anything on top of the air fryer.

Connecting to the ProscenicHome App

The Proscenic T21 Air Fryer can be controlled via the ProscenicHome app for enhanced functionality, including access to recipes and custom program settings.

1. Download the "ProscenicHome" app from your smartphone's app store (iOS or Android).
2. Register an account or log in.
3. Ensure your air fryer is plugged in and powered on.
4. Follow the in-app instructions to connect your air fryer to your home Wi-Fi network.
5. Once connected, you can control the air fryer, monitor cooking progress, and access a variety of recipes.

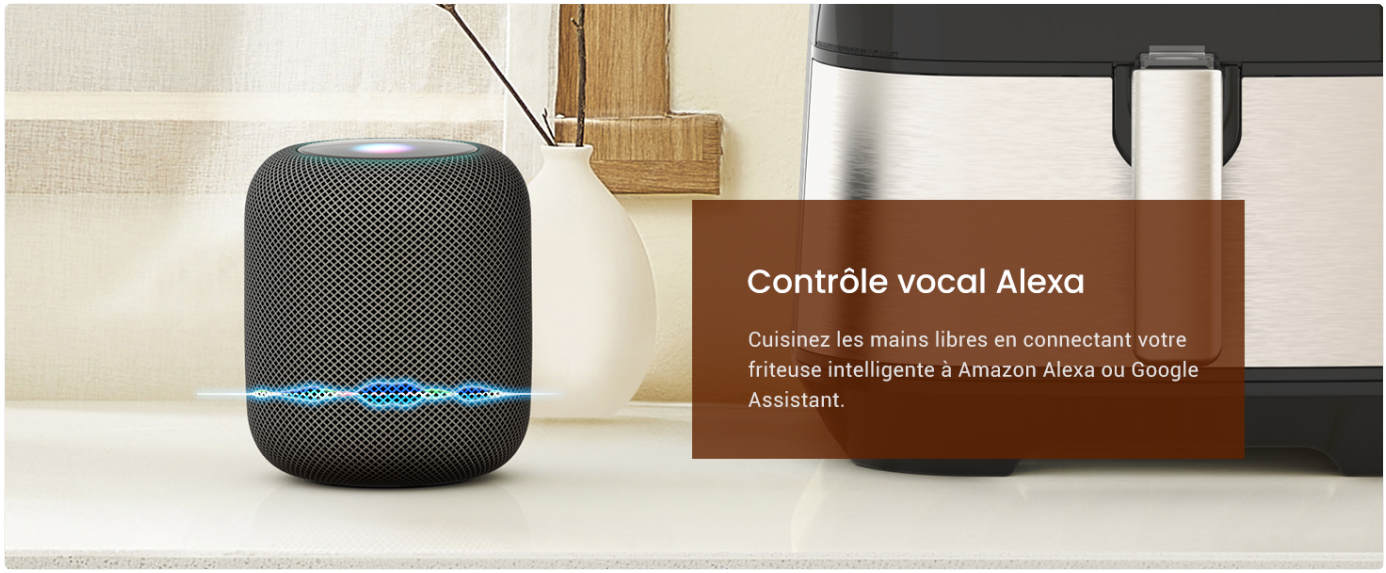


Figure 3: Controlling the air fryer via the ProscenicHome mobile application.

Operating Instructions

Basic Operation

1. Place ingredients into the frying basket. Do not overfill.
2. Slide the frying basket back into the air fryer.
3. Press the power button to turn on the appliance.
4. Select a preset program or manually set the temperature and time using the touch controls.
5. Press the start/pause button to begin cooking.

Preset Programs

The Proscenic T21 comes with 8 popular preset programs for common dishes. Simply select the desired icon on the control panel.



Figure 4: The control panel displaying 8 preset cooking options and app-based recipe customization.

Preheating Function

Preheating ensures optimal cooking results, leading to crispier food. Activate the preheat function before adding ingredients.



Figure 5: Illustration of the preheating function's benefit for crispier food.

Combined Functions

The air fryer supports combining functions like preheating, cooking, and keeping warm for a streamlined cooking process.



Figure 6: Combining multiple cooking functions for convenience.

Smart Control with Alexa

Integrate your Proscenic T21 with Amazon Alexa for hands-free voice control. This allows you to start, stop, or adjust cooking settings using voice commands.



Figure 7: Using Alexa for voice control of the air fryer.

Online Recipes

Access hundreds of step-by-step recipes through the ProscenicHome app. Nutrition experts regularly update these recipes for daily cooking.



Figure 8: Accessing online recipes via the ProscenicHome app.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

Cleaning the Frying Basket and Crisper Plate

- Always unplug the air fryer and allow it to cool completely before cleaning.
- Press the release button to detach the frying basket from the main unit.
- The non-stick frying basket and crisper plate are dishwasher safe.
- Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge.
- Ensure all food residues are removed.



Figure 9: Easy disassembly for cleaning the frying basket, including dishwasher compatibility.



Figure 10: The non-stick coating of the frying basket facilitates easy cleaning.

Cleaning the Main Unit

- Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners.
- Clean the interior with a damp cloth and mild detergent if necessary.
- Never immerse the main unit in water or any other liquid.

Troubleshooting

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working outlet.
Food is not cooked evenly.	Basket is overfilled; food not shaken/flipped.	Do not overfill the basket. Shake or flip ingredients halfway through cooking.
Food is not crispy.	Insufficient cooking time/temperature; too much moisture.	Increase cooking time or temperature. Pat food dry before cooking. Use the preheating function.
White smoke coming from the appliance.	Grease from previous use; fatty ingredients.	Clean the basket and crisper plate thoroughly. For fatty foods, drain excess oil during cooking.
App connection issues.	Incorrect Wi-Fi password; distance from router.	Ensure correct Wi-Fi credentials. Move the air fryer closer to the router or check router settings.

Specifications

Brand	Proscenic
Model Number	98-030101-20-DI (T21)
Color	Black and Silver
Product Dimensions (L x W x H)	25 x 25 x 28 cm
Cooking Capacity	5.5 Liters

Power	1700 Watts
Voltage	220 Volts
Material	Stainless Steel
Special Features	App Control, Alexa Voice Control, 8 Preset Programs, LED Touch Screen, Non-stick Dishwasher-Safe Basket
Item Weight	2 Kilograms

Warranty and Support

Proscenic is committed to providing reliable customer service.

- **Warranty:** The Proscenic T21 Air Fryer comes with a warranty of up to 24 months. Please refer to your purchase documentation for specific terms and conditions.
- **Return Policy:** A 30-day money-back guarantee is typically offered.
- **Customer Service:** For any issues before or after purchase, our customer service team is available to respond to your inquiries within 24 hours.
- **European Repair Warehouse:** Proscenic maintains a European repair warehouse for service needs.
- **Multilingual Online Assistance:** Support is available in multiple languages.

For further assistance, please visit the official Proscenic website or contact their customer support directly.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07X3RS4T3

More documents and user manuals: **https://manuals.plus/**