Noma B07X4L5HPR

NOMA Premium Mini LED Christmas Lights User Manual

Model: B07X4L5HPR (70 Blue Lights, 23.6-Foot Strand)

Introduction

Thank you for choosing NOMA Premium Mini LED Christmas Lights. This manual provides important information for the safe and effective use of your new lighting product. Please read these instructions carefully before installation and retain them for future reference. These 70 blue LED string lights are designed for both indoor and outdoor applications, offering energy-efficient illumination for various occasions.

Important Safety Instructions

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical products. This product is intended for seasonal installation and use. Do not install or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails. Do not let lamps rest on the supply cord or on any wire. Unplug the product when leaving the house, when retiring for the night, or if left unattended. This is an electrical product, not a toy. To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or placed where small children can reach it. Do not use this product for other than its intended use. Do not hang ornaments or other objects from cord, wire, or light string. Do not close doors or windows on the product or extension cords as this may damage the wire insulation. Do not cover the product with cloth, paper, or any material not part of the product when in use. Read and follow all instructions that are on the product or provided with the product.

Package Contents

- 1 x NOMA Premium Mini LED Christmas Lights (70 Blue Lights, 23.6-Foot Strand)
- 1 x Spare Fuse
- 2 x Spare LED Bulbs



Image: The product packaging for NOMA Premium Mini LED Christmas Lights, showing the brand, light count, color, and length.

Setup

1. Unpacking and Inspection

Carefully remove the light strand from its packaging. Uncoil the string lights gently to prevent tangling. Inspect the entire strand, including the bulbs, wires, and plugs, for any signs of damage. Do not use if any part is damaged.

2. Placement

These lights are suitable for both indoor and outdoor use. When placing outdoors, ensure all connections are secure and protected from direct exposure to heavy rain or snow. Avoid placing lights in areas where they might be submerged in water.



Image: Blue LED string lights installed on a snowy outdoor railing, demonstrating outdoor application.



Image: Blue LED string lights wrapped around an outdoor pillar with snow, illustrating another outdoor setup.



Image: Blue LED string lights illuminated on a dark green Christmas tree, showing an indoor application.

3. Connecting Multiple Strands

Each 23.6-foot strand features end-to-end connectors, allowing you to link multiple sets. You can connect up to 45 strands of these NOMA Premium Mini LED Christmas Lights together, for a total of 3,150 lights, from a single power outlet. Ensure the total wattage of connected strands does not exceed the maximum recommended load for your electrical circuit.

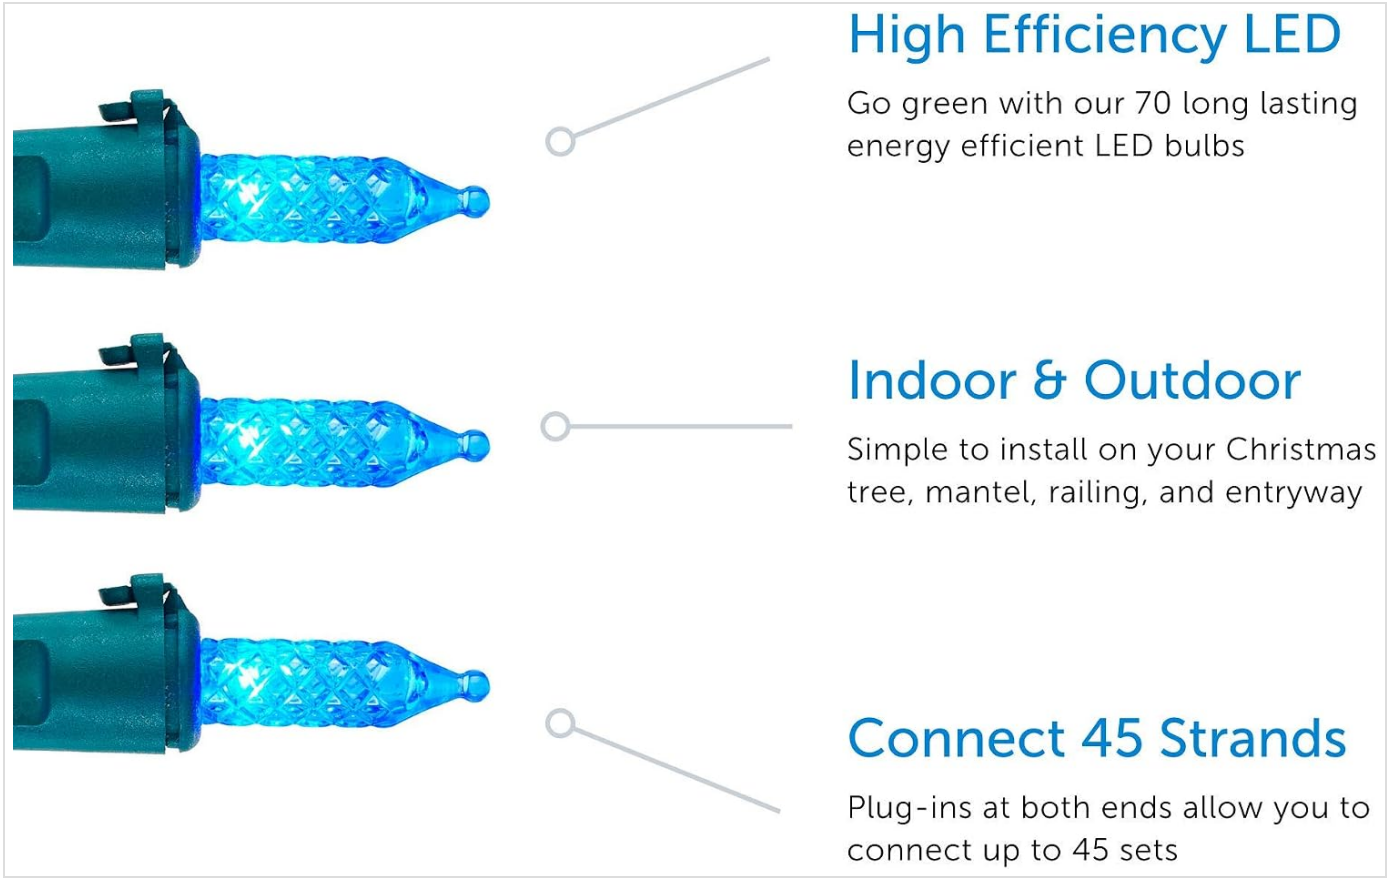


Image: A diagram highlighting key features including high-efficiency LEDs, indoor/outdoor suitability, and the ability to connect up to 45 strands.

4. Power Connection

Once the lights are positioned and any additional strands are connected, plug the main power cord into a standard electrical outlet. For outdoor use, always use a Ground Fault Circuit Interrupter (GFCI) protected outlet.

Operating Instructions

To operate your NOMA Premium Mini LED Christmas Lights, simply plug the strand into a suitable power outlet. The lights will illuminate immediately. To turn off, unplug the strand from the power source. These LED bulbs are energy-efficient and remain cool to the touch during operation, reducing power consumption.





Image: A close-up view of three individual blue LED mini bulbs, showing their design and connection to the green wire.

Maintenance

1. Cleaning

Always unplug the light strand before cleaning. Wipe the bulbs and wires with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

2. Storage

Before storing, carefully un-install the lights and coil them neatly to prevent tangling. Store the lights in a cool, dry place, away from direct sunlight and extreme temperatures. Keep them in their original packaging or a protective container to prevent damage.

3. Bulb Replacement

While LED bulbs have a long lifespan, if a bulb needs replacement, unplug the light string. Gently twist the faulty bulb counter-clockwise to remove it. Insert a spare LED bulb (provided) by twisting it clockwise until secure. Ensure the replacement bulb is of the same type and voltage.

4. Fuse Replacement

If the entire light string fails to illuminate, the fuse in the plug may need replacement. Unplug the product. Slide open the fuse access cover on the plug. Carefully remove the old fuse. Insert a new fuse of the same type and rating (a spare fuse is provided). Close the fuse access cover securely.

Troubleshooting

Problem	Possible Cause	Solution
Lights do not turn on	No power to the outlet	Check the power outlet with another device.
Lights do not turn on	Blown fuse in the plug	Replace the fuse as per Maintenance instructions.
Lights do not turn on	Loose or damaged bulb	Ensure all bulbs are securely twisted in. Replace any damaged bulbs.
Part of the strand is not lit	Loose or faulty bulb in that section	Check and replace individual bulbs in the unlit section.
Flickering lights	Loose connection or faulty bulb	Check all connections and bulbs for tightness. Replace any flickering bulbs.

Specifications

- **Model:** B07X4L5HPR
- **Brand:** NOMA
- **Bulb Type:** LED
- **Number of Lights:** 70
- **Light Color:** Blue
- **Strand Length:** 23.6 feet (7.2 meters)
- **Bulb Spacing:** 4 inches
- **Bulb Dimensions:** Approximately 1/4 inch diameter, 5/8 inch tall
- **Connectivity:** Connect up to 45 strands (max 3,150 lights)
- **Usage:** Indoor / Outdoor
- **Power Source:** Corded Electric
- **Manufacturer:** NOMA

Warranty and Support

Limited Warranty

This NOMA Premium Mini LED Christmas Lights product is covered by a**3-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, modification, or unauthorized repair. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, warranty inquiries, or to report any issues with your product, please contact NOMA customer support. Refer to the product packaging or the NOMA official website for the most current contact information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question