ALLIMITY SHW/RMC/0116, SHW/RMC/0117

ALLIMITY SHW/RMC/0116 SHW/RMC/0117 Remote Control User Manual

For Sharp Aquos 3D HD Smart Freeview TVs

1. Introduction

This manual provides instructions for the ALLIMITY SHW/RMC/0116 and SHW/RMC/0117 replacement remote control, designed for use with various Sharp Aquos 3D HD Smart Freeview TV models. Please read this manual carefully to ensure proper setup and operation of your new remote control.





Image 1.1: Front view of the ALLIMITY SHW/RMC/0116 SHW/RMC/0117 remote control, showing all buttons including Power, Netflix, YouTube, and navigation controls.

2. Setup

2.1 Battery Installation

The remote control requires two AAA 1.5V batteries (not included). To install batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the cover back into place until it clicks securely.

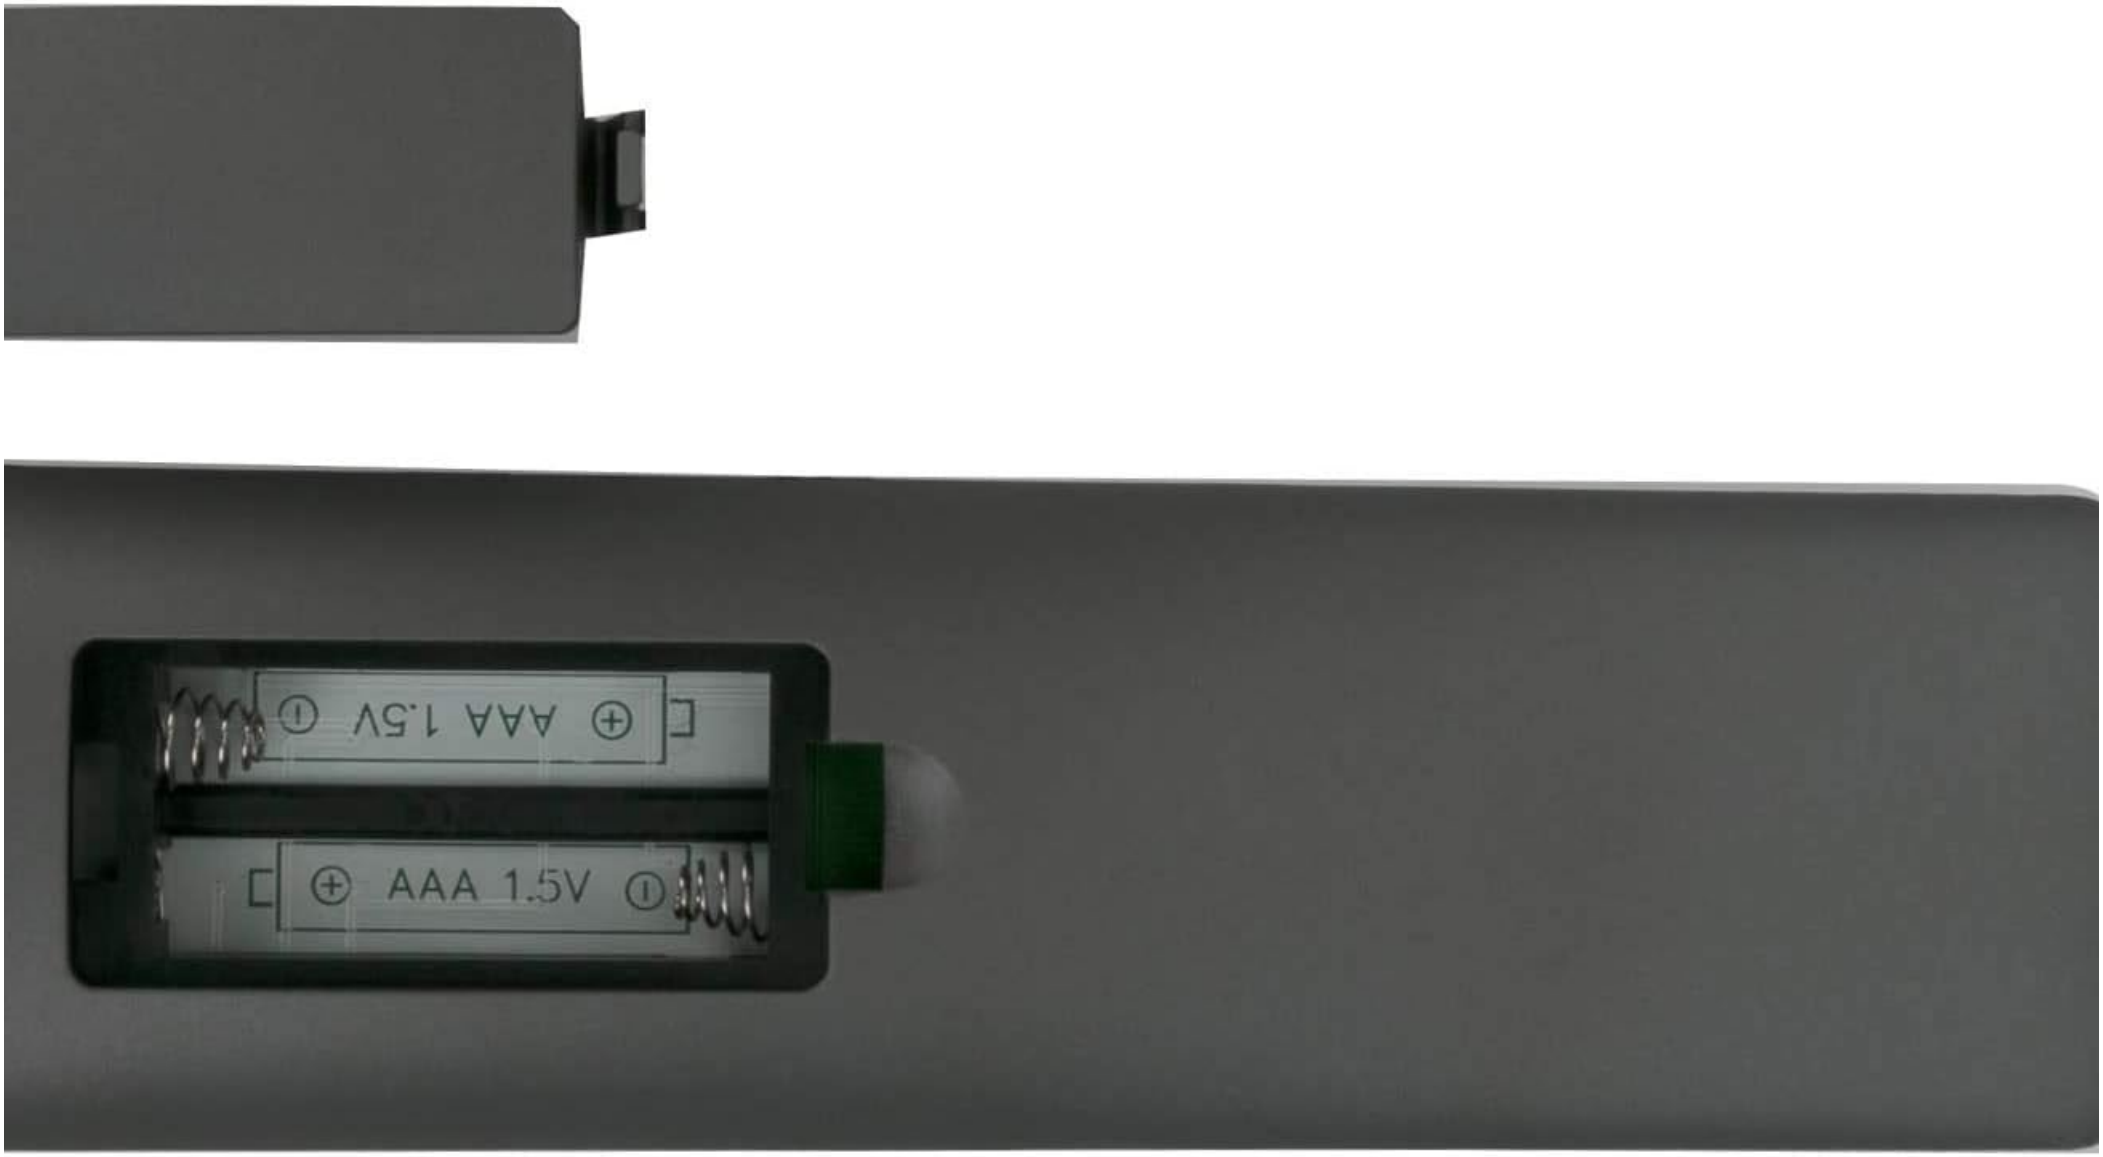

AAA 1.5V
AAA 1.5V



Image 2.1: Back view of the remote control with the battery compartment open, showing where to insert two AAA batteries.

2.2 Remote Control Pairing

The ALLIMITY SHW/RMC/0116 SHW/RMC/0117 remote control requires pairing with your Sharp Aquos TV. Follow these steps:

1. **Scenario 1: TV powers on automatically and displays the initial setup screen.**
   If the TV turns on automatically and presents the first installation screen, but does not respond to the remote control, press and hold the **YELLOW** and **BLUE** buttons on the remote control simultaneously for a few seconds. The power indicator light on the remote will flash 5 times to confirm successful pairing between the TV and the remote control.
2. **Scenario 2: TV does not power on automatically.**
   If the TV does not turn on automatically, you must manually power on the TV by pressing the control button located on the lower-left rear side of the TV. Once the TV is on, press and hold the TV's control button for a few seconds.
3. The pairing menu will appear on the TV screen. Navigate and highlight the "Pair your remote control" option by pressing the TV's control button up or down. Press the control button to confirm your selection.
4. While the TV is in pairing mode, press and hold the**YELLOW** and **BLUE** buttons on the remote control simultaneously for a few seconds. The power indicator light on the remote will flash 5 times to confirm successful pairing between the TV and the remote control.

3. Operating Instructions

Once paired, your ALLIMITY remote control functions similarly to the original Sharp Aquos remote. Familiarize yourself with the button layout:

- **Power Button (●)**: Turns the TV on or off.
- **Netflix, YouTube, Net+ Buttons**: Direct access to these streaming services.
- **Number Buttons (0-9)**: For direct channel selection.
- **TV Guide**: Accesses the electronic program guide.
- **Volume Up/Down (+VOL / -VOL)**: Adjusts the audio volume.
- **Channel Up/Down (+CH / -CH)**: Changes TV channels.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Used to navigate menus and confirm selections.
- **MENU**: Opens the TV's main menu.
- **BACK**: Returns to the previous screen or menu.
- **EXIT**: Exits the current menu or application.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Record, REC LIST)**: Controls media playback.
- **Colored Buttons (Red, Green, Yellow, Blue)**: Functionality varies depending on the TV menu or application.



Image 3.1: Angled view of the remote control, highlighting the ergonomic design and button layout.

4. Maintenance

To ensure the longevity and optimal performance of your remote control:

- **Cleaning**: Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or inconsistent. Always replace both batteries at the same time with new ones of the same type.
- **Storage**: If the remote control will not be used for an extended period, remove the batteries to prevent leakage. Store in a cool, dry place.
- **Avoid Damage**: Do not drop the remote control or expose it to extreme temperatures, moisture, or direct sunlight.

5. Troubleshooting

If you encounter issues with your remote control, refer to the following common solutions:

- **Remote Not Responding**: Check if the batteries are correctly installed and have sufficient charge. Replace batteries if necessary. Ensure there are no obstructions between the remote control and the TV's infrared

receiver.

- **Remote Not Pairing**: Re-attempt the pairing process as described in Section 2.2. Ensure the TV is in pairing mode.
- **Specific Buttons Not Working**: This could indicate a pairing issue or a dirty contact. Try re-pairing the remote. If the issue persists, ensure the remote is clean and free of debris.
- **Interference**: Other electronic devices might cause interference. Try operating the remote from a different angle or location relative to the TV.

If problems persist after attempting these solutions, contact customer support for further assistance.

6. Specifications

Feature	Detail
Brand	ALLIMITY
Model Numbers	SHW/RMC/0116, SHW/RMC/0117
Connectivity Technology	Infrared
Compatible Devices	Sharp Aquos Smart TVs (e.g., LC-55CFG6452E, LC-49CUG8462KS, LC-43CFG6022E, and many other models)
Power Source	2 x AAA 1.5V Batteries
Maximum Range	10 Meters
Special Features	Digital display (as per product specifications, though not visually apparent on remote)

7. Warranty and Support

Information regarding product warranty and specific support contact details is not available in the provided product data. Please refer to the retailer or manufacturer's website for the most current warranty and support information.

© 2023 ALLIMITY. All rights reserved.