Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

De'Longhi ENV150BAE

Nespresso VertuoPlus Coffee and Espresso Machine User Manual

Brand: De'Longhi | **Model:** ENV150BAE

1. Introduction

Welcome to the world of Nespresso VertuoPlus. This innovative coffee and espresso machine is designed to deliver a superior brewing experience, offering a variety of coffee styles from rich espresso to large-cup coffee with a perfect crema. Its advanced Centrifusion technology precisely brews each capsule, ensuring optimal results every time.

Key Features:

- **Single Serve Convenience:** Brew coffee or espresso at the touch of a button.
- **Versatile Brewing:** Offers five cup sizes: 14 oz. Alto, 8 oz. Coffee, 5 oz. Gran Lungo, 2.7 oz. Double Espresso, and 1.35 oz. Espresso.
- **Centrifusion Technology:** Reads capsule barcodes to automatically adjust brewing parameters (coffee size, temperature, pressure, brewing time) for optimal extraction.
- **Aeroccino3 Milk Frother:** Included for smooth hot or cold milk froth, perfect for lattes and cappuccinos.
- **Fast Heat-up:** Automatic shut-off feature.
- **Automatic Capsule Ejection:** Used capsules are automatically stored in a dedicated container.



Figure 1: Nespresso VertuoPlus Coffee and Espresso Machine with Aeroccino3 Milk Frother.

2. Setup

2.1 Unpacking and Initial Placement

- Carefully remove all packaging materials from the machine and frother.
- Place the machine on a clean, stable, and level surface. Ensure it is away from heat sources and direct sunlight.
- The water tank can be positioned on either the left or right side of the machine for convenience.

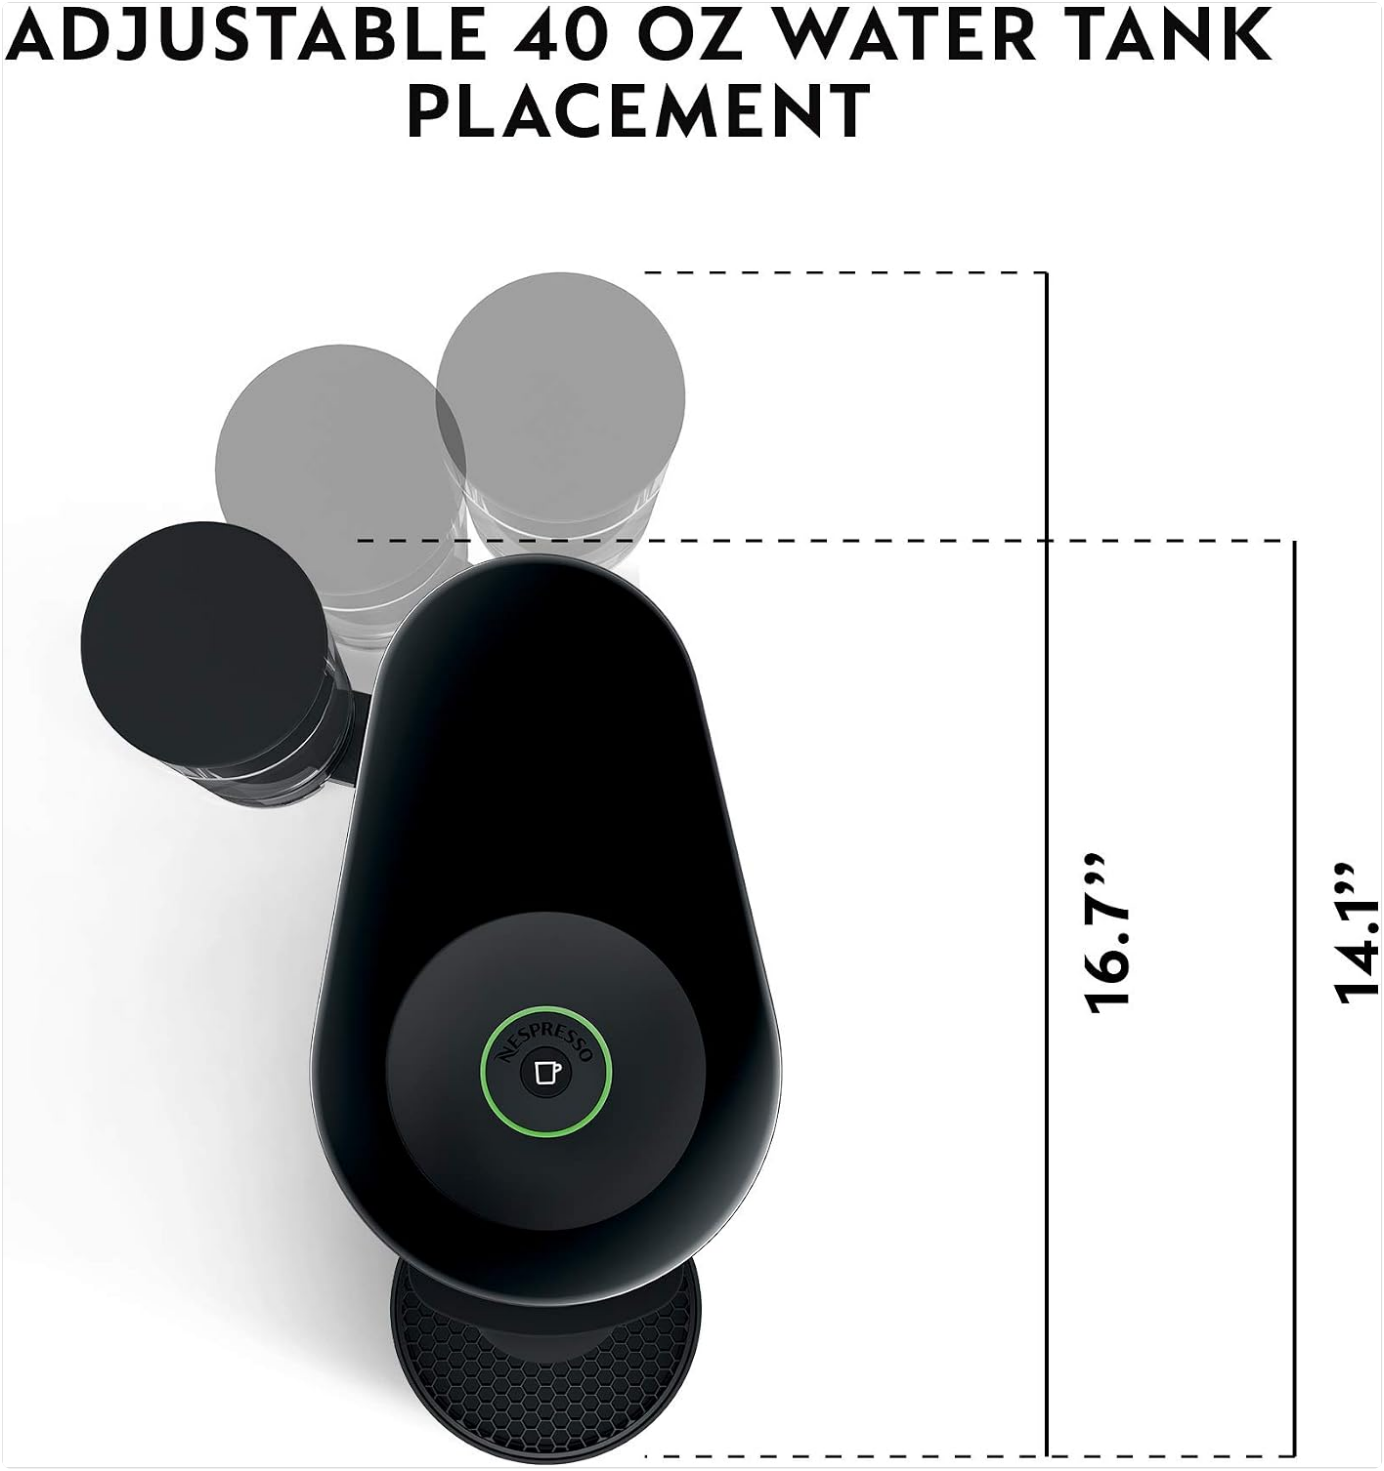


Figure 2: The VertuoPlus features an adjustable 40 oz water tank that can be positioned to suit your counter space.

2.2 Filling the Water Tank

- Remove the water tank from the machine.
- Fill the water tank with fresh, potable water up to the 'MAX' level indicator.
- Place the water tank back onto the machine, ensuring it is securely seated.

2.3 Power Connection and First Use

- Plug the machine into a grounded power outlet. The power button will illuminate.
- Press the power button to turn on the machine. It will begin to heat up, indicated by a blinking light.
- Once the light becomes steady, the machine is ready. Perform an initial rinse cycle by placing a large container under the coffee outlet and pressing the brew button three times without a capsule. This cleans the internal system.

3. Operating the Machine

3.1 Brewing Coffee or Espresso

- Ensure the water tank is filled and the machine is heated (steady light).
- Lift the machine head by pushing the lever upwards.
- Insert a Nespresso Vertuo capsule into the capsule holder. The machine automatically recognizes the barcode on the capsule.
- Close the machine head by pushing the lever downwards until it locks.
- Place your desired cup under the coffee outlet.
- Press the brew button. The machine will automatically adjust brewing parameters based on the capsule's barcode and begin brewing.
- The brewing process will stop automatically once complete.



Figure 3: The VertuoPlus brews five different cup sizes, from single espresso to 14 oz Alto coffee.



Figure 4: Nespresso's Centrifusion technology automatically adapts brewing parameters for each capsule, including coffee size, temperature, pressure, and brewing time.

3.2 Using the Aeroccino3 Milk Frother

The Aeroccino3 frother provides smooth hot or cold milk froth for your coffee recipes.

- Ensure the frother is clean and dry.
- Pour fresh, cold milk into the frother. Do not exceed the 'MAX' level indicator for milk froth.
- For hot milk froth, press the button once (red light). For cold milk froth, press and hold the button for 2 seconds (blue light).
- The frother will automatically stop when the milk is frothed to perfection.
- Pour the frothed milk into your coffee.



Figure 5: The Aeroccino3 Milk Frother prepares hot or cold milk froth for various coffeehouse recipes like Cappuccino and Latte.

3.3 Official Product Video: Nespresso VertuoPlus Coffee and Espresso Machine

Your browser does not support the video tag.

Video 1: An official overview of the Nespresso VertuoPlus Coffee and Espresso Machine, demonstrating its features and ease of use.

4. Maintenance and Cleaning

4.1 Daily Cleaning

- **Drip Tray and Used Capsule Container:** Empty and rinse the drip tray and used capsule container daily. These parts are removable for easy cleaning.
- **Water Tank:** Rinse the water tank with fresh water daily.
- **Coffee Outlet:** Wipe the coffee outlet with a damp cloth.

4.2 Aeroccino3 Cleaning

- After each use, immediately rinse the inside of the frother and the whisk with water.
- The frother is not dishwasher safe. Clean with a non-abrasive sponge.

4.3 Descaling

- Descaling is essential for maintaining the machine's performance and ensuring optimal coffee quality.
- The machine will indicate when descaling is needed (refer to the full user manual for specific light indicators).
- Use only Nespresso descaling solution and follow the instructions provided with the descaling kit.

5. Troubleshooting

Problem	Possible Cause	Solution
No coffee flow, or very little coffee	Water tank empty; Machine needs descaling; Capsule blocked.	Fill water tank; Perform descaling procedure; Open machine head, remove capsule, close head, and try again.
Coffee is not hot enough	Cup is cold; Machine needs descaling.	Pre-heat cup with hot water; Perform descaling procedure.
Milk frother not frothing milk	Milk is not cold enough; Incorrect milk type; Whisk is missing or dirty.	Use fresh, cold milk (refrigerated); Use semi-skimmed or whole milk; Ensure whisk is correctly inserted and clean.
Machine leaks	Water tank not correctly positioned; Used capsule container is full.	Ensure water tank is securely in place; Empty and clean used capsule container.

For more detailed troubleshooting, please refer to the full user manual or contact Nespresso customer support.

6. Specifications

Feature	Detail
Brand	De'Longhi
Model Number	ENV150BAE
Color	Ink Black
Product Dimensions	12.81"D x 16.2"W x 12.8"H
Item Weight	15.72 pounds
Water Tank Capacity	40 oz (approx. 1.18 Liters)
Heat-up Time	Approx. 25 seconds
Operation Mode	Fully Automatic
Included Components	Milk Frother (Aeroccino3)
UPC	044387203500
Country of Origin	Hungary

7. Warranty and Support

Your Nespresso VertuoPlus machine comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

Customer Support:

For any questions, technical assistance, or to order Nespresso capsules and accessories, you can easily manage orders and get support through the official Nespresso app, website, phone, or by visiting an in-store Boutique. A complimentary starter set of Nespresso capsules is included with your machine to begin your coffee journey.



Figure 6: Explore Nespresso.com benefits, including unique coffee offerings, complimentary capsule recycling, and special offers.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07YBVTM6F

More documents and user manuals: **https://manuals.plus/**