Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Picket House Furnishings Hayward 6 PC Dining Set

Picket House Furnishings Hayward 6 PC Dining Set

INSTRUCTION MANUAL

Model: Hayward 6 PC Dining Set

1. Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your Picket House Furnishings Hayward 6 PC Dining Set. Please read all instructions carefully before beginning assembly and retain this manual for future reference. Ensure all components are present and undamaged before proceeding.

2. Package Contents

Verify that all the following items are included in your package:

- 1 x Dining Table with Double Pedestal Base
- 4 x Tall Back Dining Chairs
- 1 x Dining Settee
- 2 x 12-inch Removable Extension Leaves
- 7 x Settee Pillows
- Hardware Pack (bolts, washers, nuts, Allen wrench)



Figure 2.1: Complete Hayward 6 PC Dining Set, including the rectangular table, four tall back chairs, and the upholstered settee with pillows.

3. Setup and Assembly

Assembly typically requires two adults. Clear a spacious area for assembly and place all components on a soft, clean surface to prevent scratches.

3.1 Table Assembly

1. Carefully unbox the tabletop and the two pedestal bases.
2. Attach each pedestal base to the underside of the tabletop using the provided bolts and washers. Ensure all connections are secure but do not overtighten until all bolts are in place.
3. If desired, insert the two 12-inch extension leaves into the center of the table. Align the pins and secure them in place.
4. Once all components are aligned and secured, fully tighten all bolts.

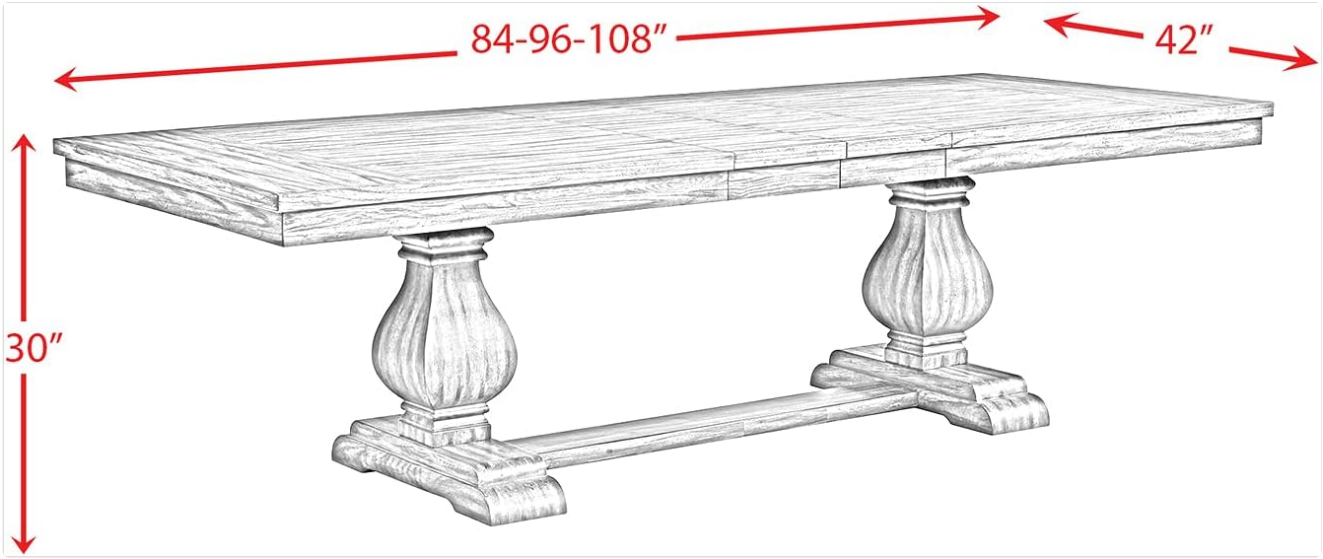


Figure 3.1: Diagram illustrating the dining table dimensions, showing adjustable lengths from 84 to 108 inches with extension leaves, and a width of 42 inches and height of 30 inches.



Figure 3.2: Close-up view of the dining table's rich walnut finish, highlighting the natural wood grains and the seam where extension leaves can be inserted.

3.2 Chair Assembly

1. Attach the chair legs to the seat frame using the provided hardware. Ensure the legs are oriented correctly.
2. Secure the backrest to the seat frame.
3. Tighten all connections evenly.

3.3 Settee Assembly

1. Attach the settee legs to the base of the settee using the provided hardware.
2. Ensure all connections are tight and stable.
3. Arrange the seven decorative pillows on the settee as desired.



Figure 3.3: Detailed view of the settee's transitional fabric print, featuring a geometric pattern in gray and white tones.

4. Operating Instructions

4.1 Using the Extension Leaves

The dining table includes two 12-inch removable extension leaves, allowing you to adjust the table's length from 84 inches to 96 inches (with one leaf) or 108 inches (with both leaves).

- **To insert leaves:** Gently pull the two halves of the tabletop apart. Align the pins on the extension leaf with the holes in the table and carefully lower the leaf into place. Push the tabletop halves back together until they are flush with the leaf. Repeat for the second leaf if needed.
- **To remove leaves:** Pull the tabletop halves apart slightly. Lift the extension leaf straight up and out. Push the tabletop halves back together.

5. Maintenance and Care

Proper care will ensure the longevity and appearance of your dining set.

- **General Cleaning:** Wipe all wood and faux leather surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Spills:** Blot spills immediately with a clean, dry cloth.
- **Heat and Moisture:** Use coasters and placemats to protect the tabletop from heat and moisture.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading of wood and fabric.
- **Loose Connections:** Periodically check and tighten all bolts and screws to ensure stability.

6. Troubleshooting

- **Wobbly Table/Chairs:** Ensure all assembly bolts are fully tightened. Check for uneven flooring and use furniture glides if necessary.
- **Difficulty Inserting/Removing Leaves:** Ensure the tabletop halves are pulled apart sufficiently and that the pins and holes are correctly aligned. Do not force the leaves.
- **Scratches/Dents:** Minor scratches on wood can sometimes be touched up with furniture repair markers. For significant damage, consult a professional.

7. Specifications

Feature	Detail
Brand	Picket House Furnishings
Model	Hayward 6 PC Dining Set
Material	Wood (Table), Faux Leather (Chairs), Fabric (Settee)
Table Dimensions (without leaf)	42" W x 84" L x 30" H
Table Dimensions (with one leaf)	42" W x 96" L x 30" H
Table Dimensions (with two leaves)	42" W x 108" L x 30" H
Chair Dimensions	20" W x 29" D x 47" H
Settee Dimensions	32" W x 47" D x 36" H
Color	Brown (Walnut Finish)
Item Weight	378 pounds
UPC	843627169206
Product Care Instructions	Wipe with Damp Cloth

8. Warranty and Support

For warranty information or technical support, please contact Picket House Furnishings directly through their official website or customer service channels. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07YY8RX5F

More documents and user manuals: **https://manuals.plus/**