Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Tosuny KX-880CID

Tosuny KX-880CID Wired Telephone User Manual

Model: KX-880CID | Brand: Tosuny

Introduction

This manual provides detailed instructions for the proper installation, operation, and maintenance of your Tosuny KX-880CID Wired Telephone. Please read this manual thoroughly before using the product to ensure optimal performance and longevity. Keep this manual for future reference.

Safety Information

- Do not expose the telephone to water or moisture.
- Avoid placing the telephone in direct sunlight or near heat sources.
- Use only the provided cables and accessories.
- Do not attempt to open or repair the telephone yourself. Contact qualified service personnel.
- Keep the telephone away from strong magnetic fields.

Package Contents

Verify that all items are present in the package:

- 1 x Tosuny KX-880CID Wired Telephone Base Unit
- 1 x Telephone Handset
- 1 x Coiled Handset Cord
- 1 x Telephone Line Cord
- 1 x Dual-Port Cable



Image: The Tosuny KX-880CID wired telephone base unit shown alongside its coiled handset cord and telephone line cord, illustrating the typical package contents.

Product Overview

The Tosuny KX-880CID is a wired telephone designed for reliable communication. It features an LCD display, caller ID functionality, a speakerphone, and supports dual-port extensions.

Key Features:

- **LCD Display:** Shows real-time date, call time records, and incoming caller numbers.
- **Noise Cancellation:** Helps ensure clear communication by reducing external noise.
- **Dual-Port Extension:** Supports connection to an extension set.
- **Large Buttons:** Designed for clear visibility of numbers and letters.
- **Multi-functionality:** Includes a built-in calculator and 8 quick memory keys.

- **Caller ID:** Displays incoming call information.
- **Speakerphone:** Allows for hands-free conversations.

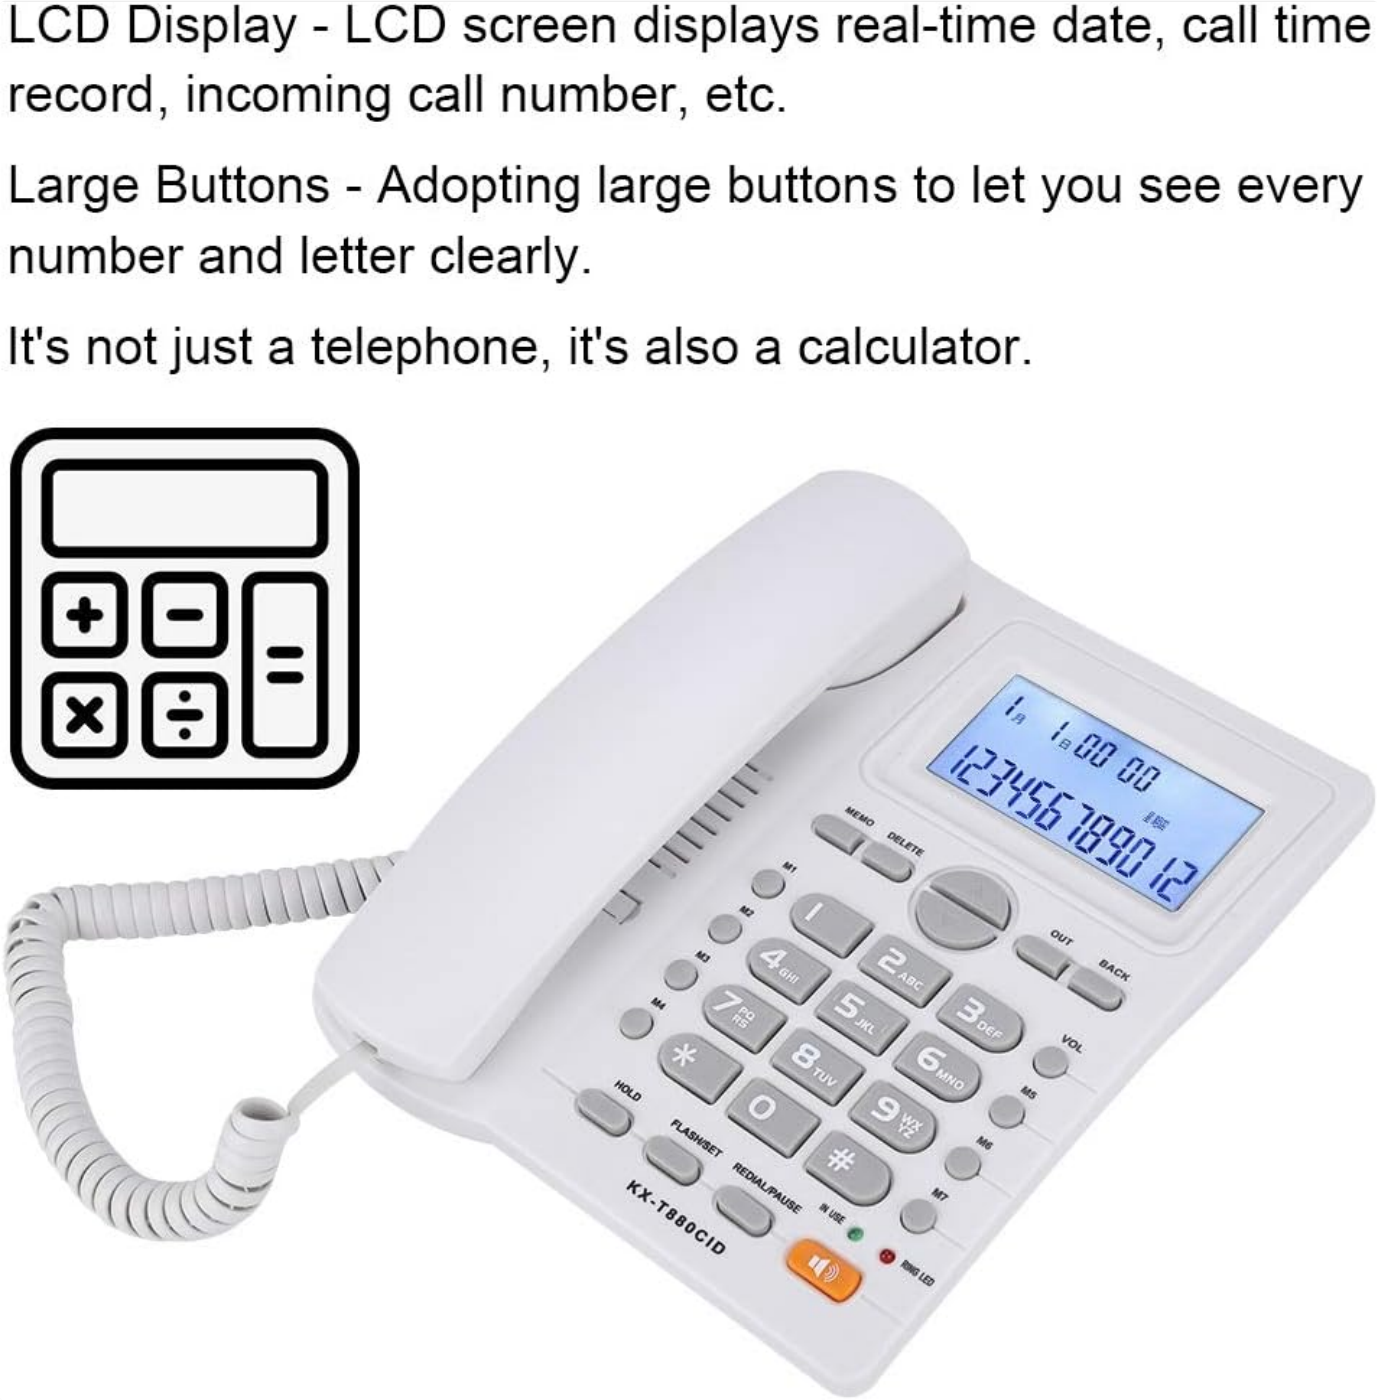


Image: A close-up view of the telephone's LCD screen displaying date and numbers, along with the large, clearly labeled keypad buttons. The image highlights the LCD display for real-time date, call time, and incoming call numbers, and the large buttons for easy visibility. It also indicates the calculator function.



Image: A detailed view of the dual-port design on the side of the telephone, indicating support for an extension set. The image also notes the durable ABS material construction.



Image: A close-up of the telephone handset's earpiece, emphasizing the noise-cancelling feature for clear communication.

Setup

1. **Connect the Handset:** Plug one end of the coiled handset cord into the handset and the other end into the designated port on the telephone base unit.
2. **Connect the Telephone Line:** Plug one end of the telephone line cord into the LINE port on the telephone base unit and the other end into your wall telephone jack.
3. **Connect Extension (Optional):** If using an extension, connect the dual-port cable to the EXT port on the telephone base unit and to your extension device.
4. **Power Source:** The telephone is powered via the telephone line. No external power adapter is typically required for basic functions.

Operating Instructions

Making a Call:

1. Lift the handset or press the **SPEAKER** button to activate the speakerphone.

2. Listen for a dial tone.
3. Dial the desired telephone number using the keypad.
4. To end the call, replace the handset or press the **SPEAKER** button again.

Receiving a Call:

1. When the telephone rings, the caller's number (if available) will be displayed on the LCD screen.
2. Lift the handset or press the **SPEAKER** button to answer the call.
3. To end the call, replace the handset or press the **SPEAKER** button.

Using Memory Keys (M1-M8):

The telephone features 8 quick memory keys (M1-M8) for storing frequently dialed numbers. Refer to the specific instructions for programming these keys, which may vary slightly depending on the firmware version.

Calculator Function:

The telephone includes a basic calculator function. To access and use it, refer to the specific key combinations or mode selection indicated on the device or in a supplementary guide.

Volume Adjustment:

Use the **VOL** buttons (up/down arrows) to adjust the earpiece or speakerphone volume during a call.

Maintenance

- **Cleaning:** Wipe the telephone surface with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** If storing the telephone for an extended period, disconnect it from the telephone line and store it in a cool, dry place.
- **Cable Inspection:** Periodically check all cables for signs of wear or damage. Replace damaged cables immediately.

Troubleshooting

Problem	Possible Cause	Solution
No dial tone	Telephone line not connected properly.	Check all cable connections. Ensure the telephone line cord is securely plugged into both the phone and the wall jack.
LCD display is blank	No power from the telephone line.	Verify the telephone line connection. Test with another working phone if possible to rule out line issues.
Cannot hear caller / Caller cannot hear me	Handset or speaker volume too low; faulty connection.	Adjust volume using the **VOL** buttons. Check handset cord connection.
Caller ID not displaying	Caller ID service not activated; line issue.	Contact your telephone service provider to ensure Caller ID service is active.

Specifications

- **Model Number:** Tosuny3n9tv6gpcb-02
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Dimensions (L x W x H):** Approximately 22 x 22.5 x 7 cm (8.66 x 8.86 x 2.76 inches)

- **Telephone Type:** Wired
- **Caller ID:** Yes
- **Power Source:** Electric Cable (Line Powered)
- **Dialer Type:** Single Keypad
- **GTIN/UPC:** 739879760400

Warranty and Support

Specific warranty information for the Tosuny KX-880CID Wired Telephone is not provided in the product details. For warranty claims or technical support, please contact the retailer or manufacturer directly. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question