Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Neufday B07Z4XFCVM

Neufday Multifunctional Electric Sharpener User Manual

Model: B07Z4XFCVM | Brand: Neufday

1. Introduction

Thank you for choosing the Neufday Multifunctional Electric Sharpener. This device is designed for household use to efficiently sharpen various tools including knives, scissors, drills, and chisels. Please read this manual thoroughly before operation to ensure safe and effective use of the product.

2. Safety Instructions

- Always ensure the power supply matches the specifications of the sharpener (US Plug 110V).
- Keep hands and fingers away from the grinding wheel during operation.
- Wear appropriate safety glasses to protect your eyes from sparks and debris.
- Do not operate the sharpener in wet conditions or near flammable materials.
- Unplug the sharpener from the power outlet when not in use, before cleaning, or when changing accessories.
- Keep the sharpener out of reach of children.
- Do not attempt to sharpen tools that are not suitable for this device.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. Package Contents

Upon unpacking, please verify that all items are present and in good condition:

- 1 x Neufday Multifunctional Electric Sharpener (US Plug 110V)

4. Product Features

The Neufday Multifunctional Electric Sharpener offers the following key features:

- **Multifunctional Design:** Capable of sharpening knives, scissors, drills, and chisels/plane cutters.
- **High Hardness Grinding Wheel:** Ensures efficient and fast sharpening.
- **Angle Adjustable:** Suitable for various tool shapes and sizes.

- **Durable Construction:** Made from high-quality plastic and metal for robust and long-lasting use.
- **Compact Size:** Designed for convenient household use and storage.



Figure 4.1: Front view of the Neufday Multifunctional Electric Sharpener, showcasing its compact design and various sharpening slots.

5. Setup

1. **Unpack:** Carefully remove the sharpener and all components from the packaging.
2. **Placement:** Place the sharpener on a stable, flat, and dry surface. Ensure there is adequate space around the unit for safe operation.
3. **Power Connection:** Connect the power plug to a standard US 110V electrical outlet. Ensure the plug is fully inserted.



Figure 5.1: The US standard 110V plug for connecting the sharpener to a power source.

6. Operating Instructions

Always ensure the sharpener is powered on before attempting to sharpen any tool. Refer to the specific sections below for different tool types.

6.1. Sharpening Knives and Scissors

1. Identify the appropriate sharpening slot for knives or scissors. These are typically located on the side of the unit.
2. Gently insert the blade into the designated slot, ensuring it rests against the grinding wheel.
3. Apply light, consistent pressure and pull the blade slowly through the slot, maintaining the angle. Repeat several times until desired sharpness is achieved.
4. For scissors, sharpen each blade individually.

6.2. Sharpening Drills

1. Locate the drill sharpening port, usually found on the top or side of the unit.
2. Insert the drill bit into the port, ensuring it is securely seated.
3. Follow the internal guide to rotate or adjust the drill bit as necessary to sharpen both cutting edges evenly.
4. Sharpen until the drill bit has a clean, sharp edge.



Figure 6.1: The sharpener's drill bit sharpening module in use, with a drill bit positioned for sharpening.



Figure 6.2: A closer view of the drill bit sharpening mechanism, showing the precise angle for effective sharpening.

6.3. Sharpening Chisels and Plane Cutters

1. Identify the chisel/plane sharpener module, typically a separate attachment or slot.
2. Insert the chisel or plane cutter into the guide.
3. Adjust the angle knob (if available) to match the original bevel angle of the tool.
4. Carefully push the tool across the grinding wheel, maintaining even pressure.
5. Repeat until a sharp edge is achieved.



Figure 6.3: Side view of the sharpener, highlighting the dedicated slot for sharpening chisels and plane cutters.

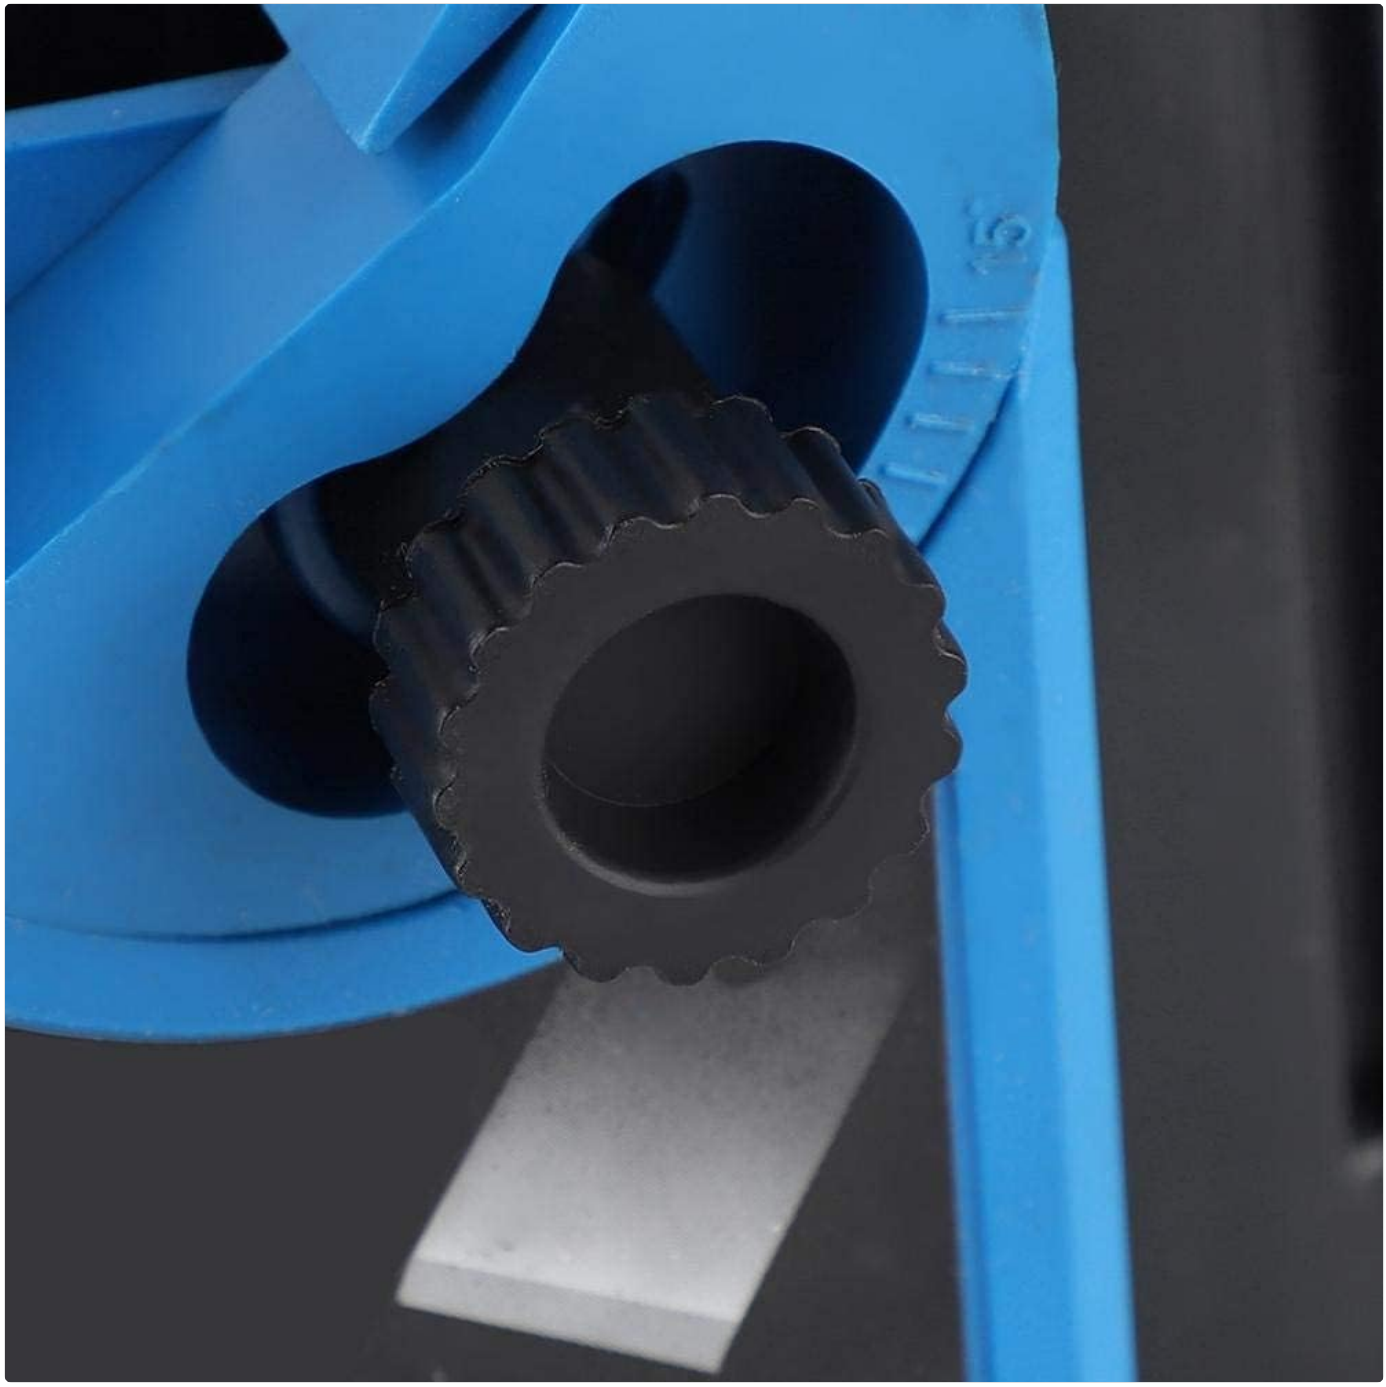


Figure 6.4: A detailed view of the adjustment knob, used to set the precise sharpening angle for chisels and plane cutters.

7. Maintenance

- **Cleaning:** After each use, unplug the sharpener and use a dry cloth or soft brush to remove any metal dust or debris from the sharpening slots and grinding wheel. Do not use water or liquid cleaners.
- **Storage:** Store the sharpener in a dry, cool place, away from direct sunlight and moisture. Keep it out of reach of children.
- **Grinding Wheel:** The grinding wheel is designed for durability. If you notice a significant decrease in sharpening performance over time, the grinding wheel may be worn and require replacement. Contact customer support for assistance.

8. Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Sharpener does not turn on.	No power supply; loose plug; faulty outlet.	Check power connection; try a different outlet; ensure the power switch is ON.
Tools are not sharpening effectively.	Incorrect sharpening technique; worn grinding wheel; tool not suitable for sharpener.	Review operating instructions; apply consistent pressure; ensure tool is compatible; consider grinding wheel replacement.
Excessive noise or vibration.	Debris in grinding area; loose components.	Unplug and clean the sharpener thoroughly; ensure all parts are secure. If problem persists, discontinue use and contact support.

9. Specifications

- **Model:** B07Z4XFCVM
- **Brand:** Neufday
- **Material:** Plastic + Metal
- **Dimensions:** Approximately 15.2 x 14.3 x 15.5 cm (6 x 5.6 x 6.1 inches)
- **Item Weight:** Approximately 3.07 pounds
- **Power Supply:** US Plug 110V

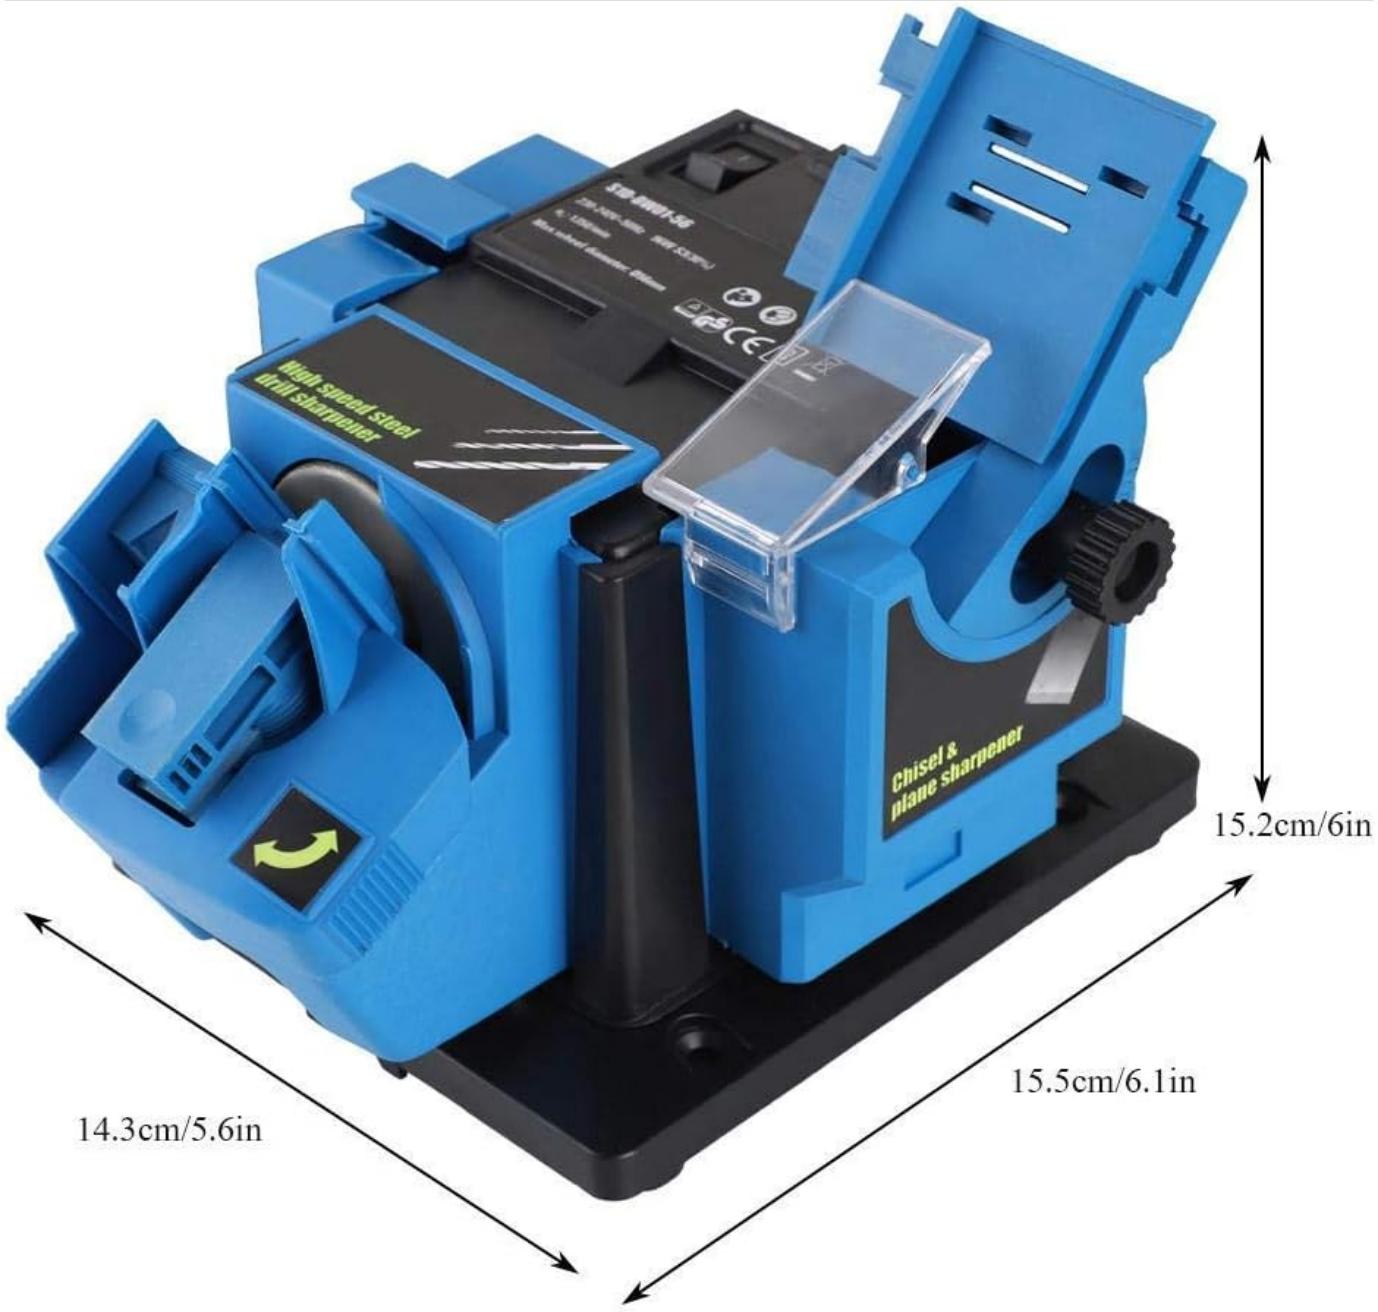


Figure 9.1: Diagram illustrating the dimensions of the Neufday Multifunctional Electric Sharpener.

10. Warranty and Support

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07Z4XFCVM

More documents and user manuals: **https://manuals.plus/**