Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Hitachi 32HE1005

Hitachi 32HE1005 32-inch HD Ready LED TV User Manual

Model: 32HE1005 | Brand: Hitachi

Introduction Safety Information Setup Operation Maintenance Troubleshooting Specifications

1. Introduction

This manual provides essential information for the safe and efficient use of your Hitachi 32HE1005 32-inch HD Ready LED TV. Please read these instructions thoroughly before operating the television and retain them for future reference. This television features a 32-inch HD Ready LED display, 2 HDMI ports, 1 USB port for multimedia playback, and integrated DVB-T2/S2 tuners for terrestrial and satellite reception.



Figure 1: Front view of the Hitachi 32HE1005 32-inch HD Ready LED TV.

2. Important Safety Information

Always observe the following safety precautions to prevent electric shock, fire, or injury:

- Do not expose the TV to rain or moisture.
- Do not open the TV casing; refer all servicing to qualified personnel.
- Ensure proper ventilation around the TV.
- Do not place the TV on unstable surfaces.
- Unplug the TV during lightning storms or when unused for long periods.
- Keep batteries out of reach of children.

3. Setup

3.1 Unpacking and Assembly

Carefully remove the TV from its packaging. Ensure all components are present. If assembling the stand, follow the instructions provided in the separate assembly guide. Place the TV on a stable, level surface or mount it on a wall using a compatible VESA mount (not included).

3.2 Connecting Peripherals

- **Power:** Connect the power cord to the TV and then to a wall outlet.
- **Antenna/Satellite:** Connect your terrestrial antenna or satellite dish cable to the appropriate input on the TV.
- **HDMI Devices:** Connect external devices such as a Blu-ray player, game console, or set-top box to the HDMI ports. This model features 2 HDMI inputs.

- **USB Devices:** Insert a USB storage device into the USB port for multimedia playback. This model features 1 USB input.

3.3 First-Time Installation

Upon first power-on, the TV will guide you through the initial setup process. This typically includes:

1. Language selection.
2. Country selection.
3. Channel scanning for DVB-T2 (terrestrial) and DVB-S2 (satellite) channels.
4. Time zone settings.

Follow the on-screen prompts to complete the setup.

4. Operation

4.1 Basic Functions

- **Power On/Off:** Press the power button on the remote control or the TV.
- **Channel Selection:** Use the CH+/- buttons or number buttons on the remote.
- **Volume Control:** Use the VOL+/- buttons on the remote.
- **Mute:** Press the MUTE button to temporarily silence the audio.

4.2 Input Source Selection

To switch between connected devices (e.g., TV, HDMI 1, HDMI 2, USB):

1. Press the "Source" or "Input" button on your remote control.
2. Use the arrow buttons to navigate through the available input sources.
3. Press "OK" or "Enter" to select the desired source.

4.3 USB Multimedia Playback

The TV supports playback of various multimedia files from a connected USB storage device.

1. Insert your USB device into the USB port.
2. Select the USB input source.
3. Navigate through the folders and files using the remote control.
4. Select a file to begin playback.

Note: While some product descriptions may mention recording capabilities, user feedback indicates that the USB port primarily supports multimedia playback. Recording functionality may not be available or fully supported on this model.

5. Maintenance

5.1 Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner.
- Never spray cleaner directly onto the screen or cabinet.

5.2 Remote Control Battery Replacement

When the remote control's range decreases or it stops responding, replace the batteries. This TV uses alkaline batteries (included). Ensure correct polarity when inserting new batteries.

6. Troubleshooting

Problem	Possible Cause	Solution
No power	Power cord not connected; no power from outlet.	Check power cord connection; test outlet with another device.
No picture, but sound is present	Incorrect input source selected; backlight issue.	Verify correct input source; try power cycling the TV.
No sound, but picture is present	Volume muted or too low; external audio device issue.	Unmute or increase volume; check external audio connections.
Remote control not working	Batteries depleted or incorrectly inserted; obstruction.	Replace batteries; ensure clear line of sight to TV's IR sensor.
Poor picture quality	Weak signal; incorrect picture settings.	Check antenna/cable connection; adjust picture settings in menu.

7. Specifications

The following table details the technical specifications for the Hitachi 32HE1005 TV:

Feature	Detail
Brand	Hitachi
Model Name	32HE1005
Model Year	2021
Product Dimensions (W x H x D)	79.5 x 53 x 12.8 cm (with stand)
Product Weight	4.1 kg
Display Technology	LED
Screen Size	32 Inches (80 cm diagonal)
Screen Resolution	1366 x 768 pixels (HD Ready)
Aspect Ratio	16:9
Refresh Rate	50 Hz (Native), 200Hz (BPR - Backlight Picture Rate)
Hardware Interface	2 x HDMI, 1 x USB
Tuner Type	DVB-T2, DVB-S2 (Satellite)
Voltage	240 Volts

Feature	Detail
Energy Efficiency Class (SDR)	F
On mode power demand (SDR)	32.0 W
Standby mode power demand	0.5 W
Networked standby mode power demand	2.0 W
Batteries Included	Yes (Alkaline)
Mounting Compatibility	Table Stand (VESA compatible for wall mount, mount not included)
Minimum guaranteed availability of software and firmware updates (until)	19 February 2022
Minimum guaranteed availability of spare parts (until)	19 February 2022
Minimum guaranteed product support (until)	19 February 2022

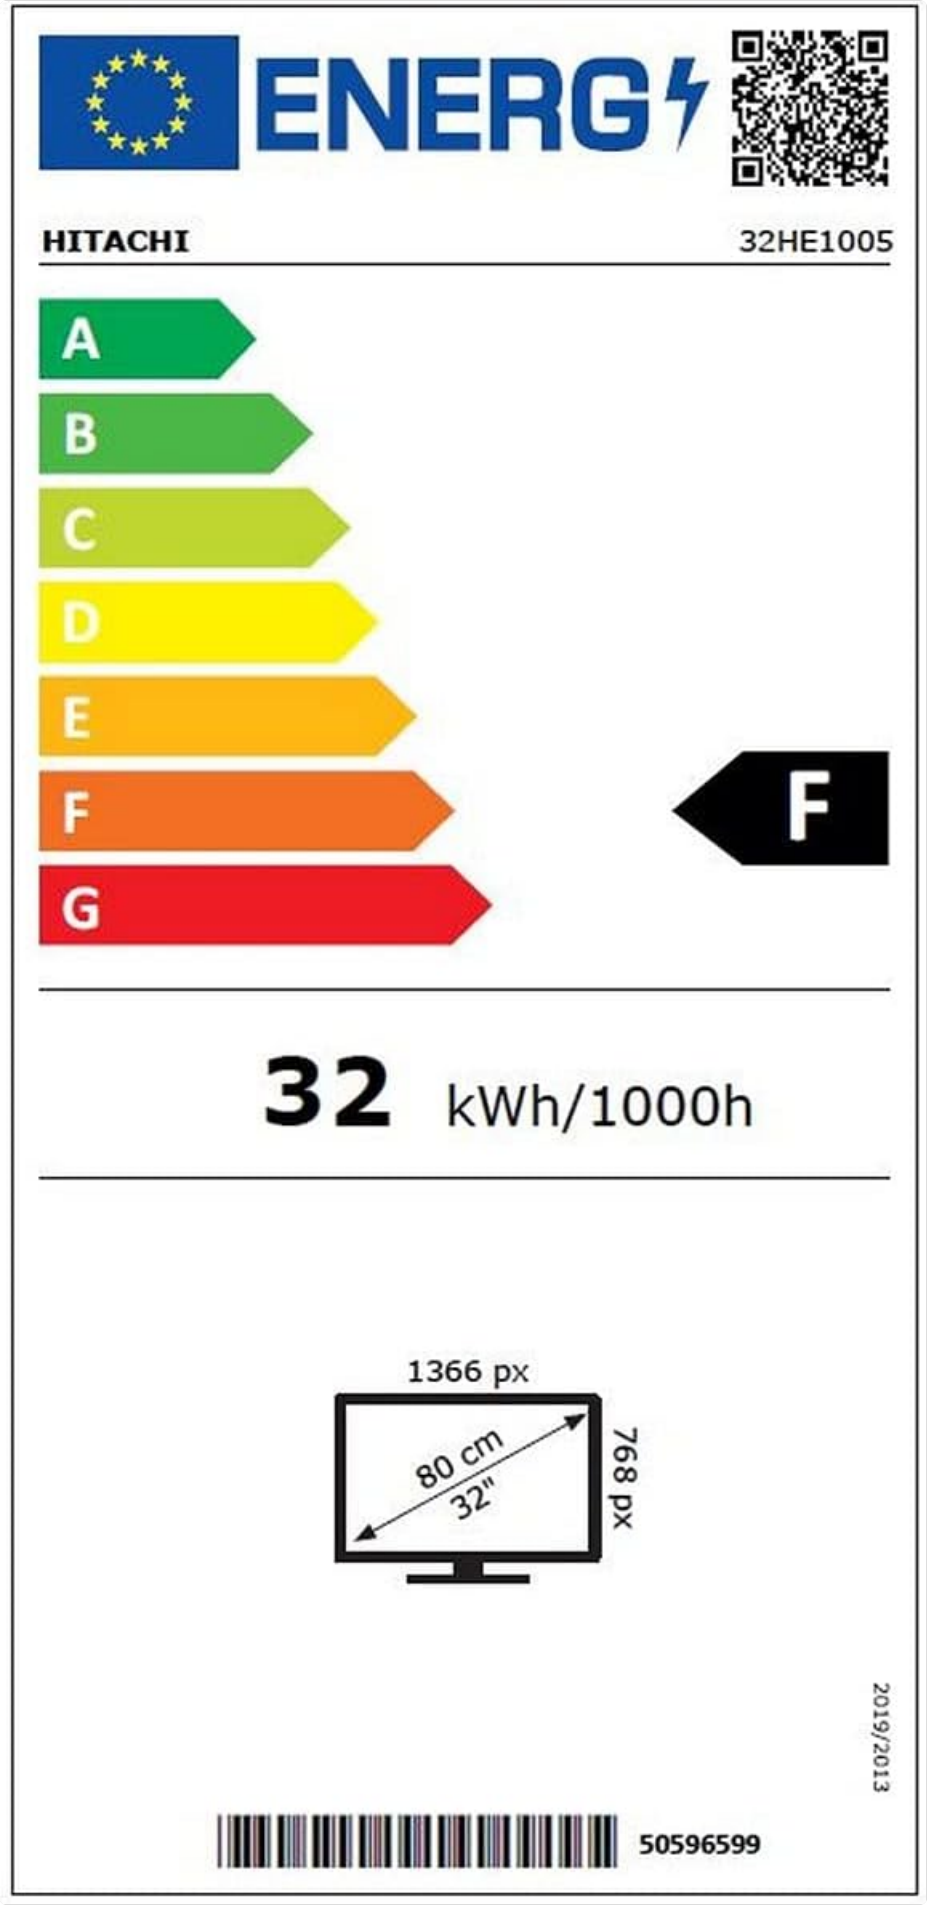


Figure 2: Energy Efficiency Label for Hitachi 32HE1005. For more details, visit EPREL Database (QR Code: 50596599).

Product Information Sheet

COMMISSION DELEGATED REGULATION (EU) 2019/2013

INFORMATION		Value	Unit
1. Supplier name or trademark		HITACHI	
2. Model identifier		32HE1005	
3. Energy Efficiency Class for Standard Dynamic Range (SDR)		F	
4. On mode power demand for Standard Dynamic Range (SDR)		32,0	W
5. Energy Efficiency Class for High Dynamic Range (HDR)		n.a.	
6. On mode power demand in High Dynamic Range (HDR) mode		n.a.	W
7. Off mode, power demand		n.a.	W
8. Standby mode power demand		0,5	W
9. Networked standby mode power demand		2,0	W
10. Electronic display category		Television	
11. Size ratio		16 : 9	
12. Screen resolution (pixels)		1 366 x 768	pixels
13. Screen diagonal		80,0	cm
14. Screen diagonal		32	inches
15. Visible screen area		2 736,7	cm^2
16. Panel technology used		LCD	
17. Automatic Brightness Control (ABC) available		No	
18. Voice recognition sensor available		No	
19. Room presence sensor available		No	
20. Image refresh frequency rate		50	Hz
21. Minimum guaranteed availability of software and firmware updates (until):		19 02 2022	
22. Minimun guaranteed availability of spare parts (until)		19 02 2022	
23. Minimum guaranteed product support (until)		19 02 2022	
24. Power supply type:		Internal	
i External standardised power supply (included in the product box)	Standard name	-	
	Input voltage	-	V
	Output voltage	-	V
ii External standardised suitable power supply (if not included in the product box)	Standard name	-	
	Required output voltage	-	V
	Required delivered current	-	A
	Required current frequency	-	Hz

Figure 3: Product Information Sheet detailing technical specifications and compliance with COMMISSION DELEGATED REGULATION (EU) 2019/2013.

8. Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your product or contact Hitachi customer service in your region. Keep your proof of purchase for warranty claims.
Minimum guaranteed availability of software and firmware updates, spare parts, and product support is until February 19, 2022, as per the Product Information Sheet.

© 2023 Hitachi. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07Z5Y8VGT

More documents and user manuals: **https://manuals.plus/**