Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZdalaMit fghea-298

ZdalaMit fghea-298 Remote Control Replacement for Polaroid TV Instruction Manual

Model: fghea-298

1. Introduction

This manual provides essential instructions for the ZdalaMit fghea-298 remote control, designed as a direct replacement for various Polaroid TV models. This remote control is pre-programmed and requires no additional setup beyond battery installation. Please ensure your TV model is listed in the compatibility section before use.

2. Compatibility

The ZdalaMit fghea-298 remote control is compatible with the following Polaroid TV models:

- 32GSR3000FC
- 40GSR3000FC
- 55GTR3000-2
- 55GTR3000
- DE550M3N4AU-YA4
- DE416T1N4AU-PA4
- 24GSD3000UA
- 24GSD3000SA
- 32GSD3000FB
- 22GSD3000F

If your TV model is not listed, please verify compatibility with the manufacturer before attempting to use this remote control.



Image: The ZdalaMit remote control displayed alongside a graphic listing compatible Polaroid TV models, emphasizing its broad compatibility.

3. Setup

3.1 Battery Installation

The remote control requires two (2) 1.5V AAA alkaline batteries. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: A detailed view of the remote control's back, illustrating the open battery compartment ready for AAA battery insertion.

3.2 Initial Use

No programming or pairing is required for this remote control. Once new batteries are installed, the remote is ready

for immediate use with compatible Polaroid TV models. Simply point the remote control towards your television and press the desired function button.

4. Operating Instructions

The ZdalaMit fghea-298 remote control provides full functionality for your compatible Polaroid TV. Below is a general overview of common button functions:



Image: A clear front view of the ZdalaMit remote control, highlighting the layout of all function buttons.

- **POWER:** Turns the TV on or off.
- **SOURCE:** Selects input sources (e.g., HDMI, AV, Component).

- **MUTE:** Mutes or unmutes the TV audio.
- **Number Buttons (0-9):** Directly selects TV channels.
- **DISPLAY:** Shows current channel information or TV status.
- **EPG:** Accesses the Electronic Program Guide.
- **SWAP:** Switches between the current and previously viewed channel.
- **MENU:** Opens the TV's main menu.
- **EXIT:** Closes the current menu or on-screen display.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **ENTER:** Confirms selections in menus.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes TV channels.
- **P.MODE (Picture Mode):** Cycles through picture presets.
- **S.MODE (Sound Mode):** Cycles through sound presets.
- **SLEEP:** Sets the sleep timer.
- **ASPECT:** Changes the screen aspect ratio.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **MTS (Multi-channel Television Sound):** Selects audio tracks (e.g., Stereo, SAP).
- **ADD/ERASE:** Function may vary by TV model, often related to channel management.
- **FAV (Favorite):** Accesses favorite channels list.
- **GOTO:** Function may vary, often for specific time jumps in media.
- **REPEAT:** Repeats media playback.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Previous, Stop, Next):** Controls media playback on compatible devices or TV functions.



Image: The remote control in use, demonstrating its direct line-of-sight operation with a television.

5. Maintenance

5.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

5.2 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's finish or internal components.

5.3 Storage

Store the remote control in a dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

6. Troubleshooting

- **Remote control is not working:**
  - Ensure new AAA batteries are correctly installed with the proper polarity.
  - Check for any obstructions between the remote control and the TV's infrared sensor.
  - Confirm that the remote control is pointed directly at the TV.

- Verify that your TV model is listed as compatible in Section 2.

- **Some buttons do not perform the expected function:**
  - While this remote is pre-programmed, some specific button labels may have slightly different functions depending on the exact Polaroid TV model. Experiment with other buttons to find the desired function, especially for less common features.
  - Refer to your original Polaroid TV manual for specific button mappings if available.

7. Specifications

Model Number	fghea-298
Brand	ZdalaMit
Color	Black
Product Dimensions	6.5 x 1.8 x 0.5 inches (16.5 x 4.6 x 1.3 cm)
Item Weight	1.41 ounces (40 grams)
Batteries Required	2 x 1.5V AAA Alkaline Batteries (not included)
Special Feature	Pre-programmed, no setup required
Max Number of Supported Devices	1 (Television)
Operating Range	Up to 30 feet / 10 meters
Button Durability	Supports over 1,600,000 clicks
Response Time	Quick response in 0.2 seconds



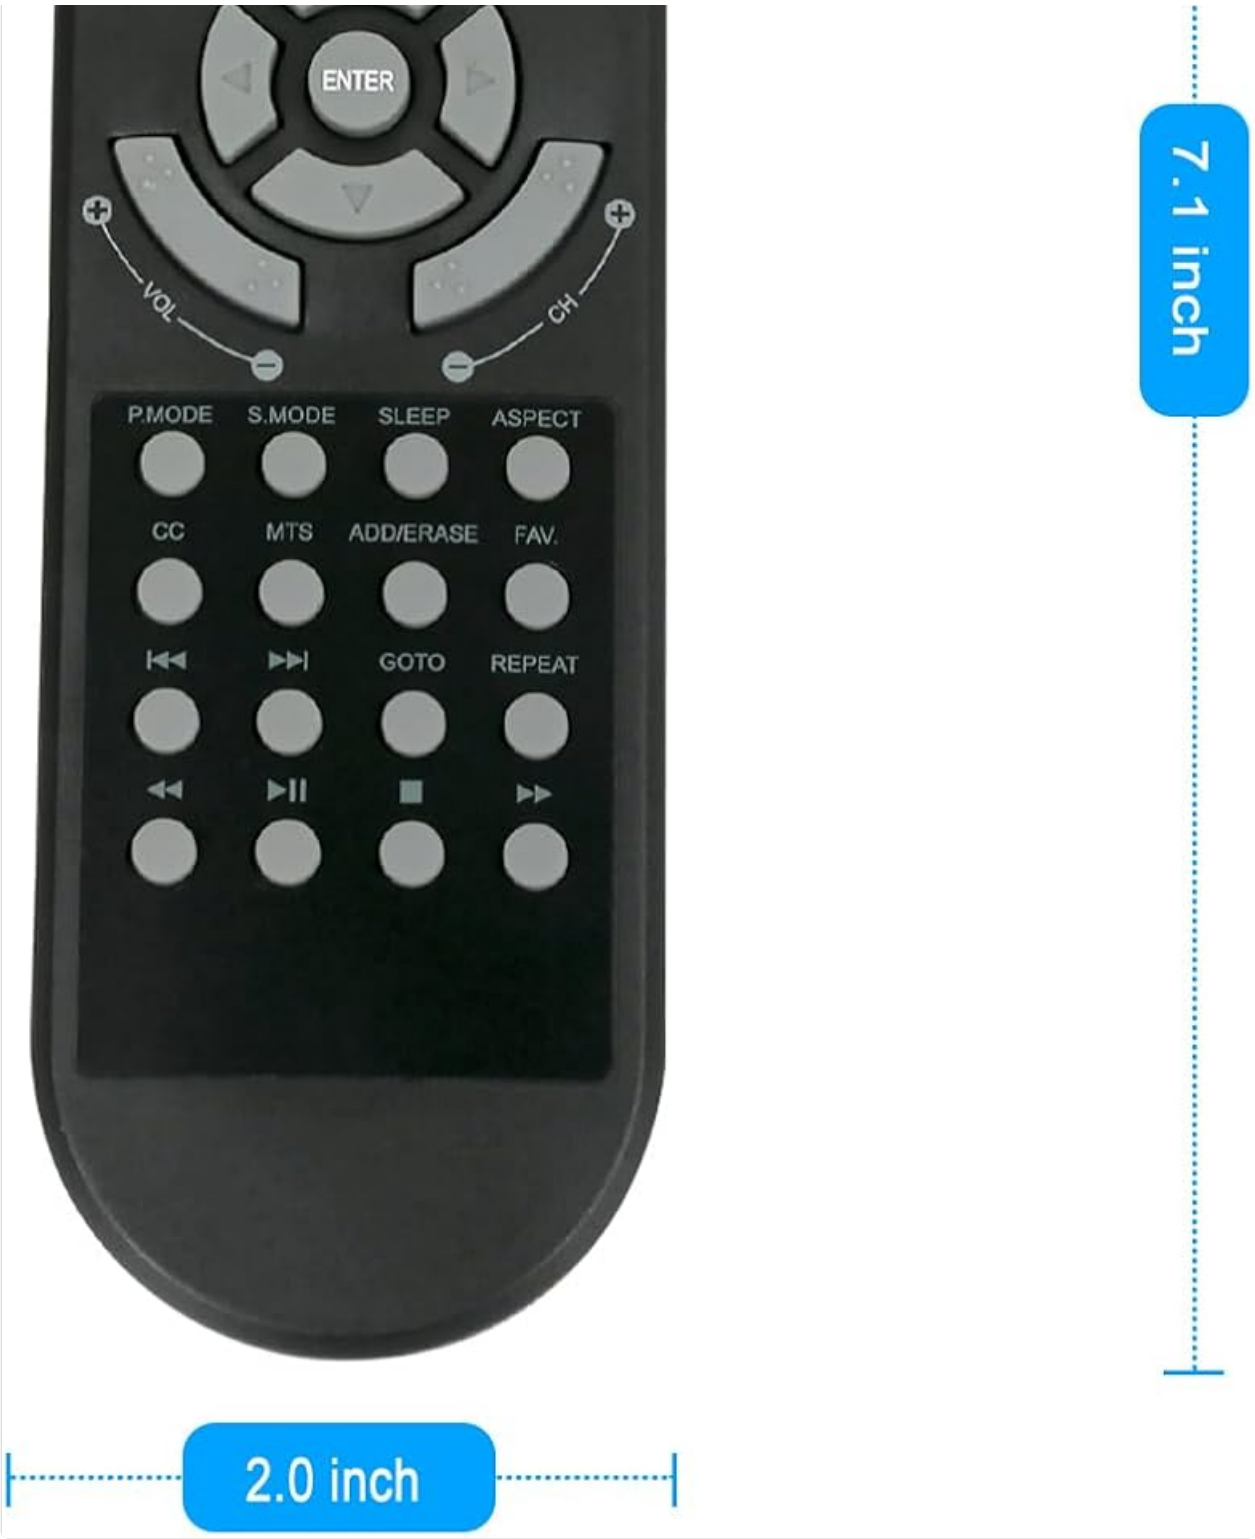


Image: The remote control with visual indicators for its length (7.1 inches) and width (2.0 inches).



Image: The remote control accompanied by a list of its key features and performance metrics.

8. Warranty and Support

Information regarding product warranty and customer support is not provided within this manual. For warranty details or technical assistance, please refer to the product packaging or contact the ZdalaMit manufacturer directly.

© 2025 ZdalaMit. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07Z7V3KMT

More documents and user manuals: **https://manuals.plus/**