Havells GHCAFDIK150

Havells Air Fryer Air Oven Digi (Model GHCAFDIK150) Instruction Manual

1. Introduction

Thank you for choosing the Havells Air Fryer Air Oven Digi. This appliance combines the functions of an air fryer and an oven toaster grill (OTG), offering a versatile solution for healthy cooking. With its advanced Aero Crisp Technology and digital controls, you can fry, grill, bake, roast, and dehydrate your favorite foods with minimal oil. Please read this manual carefully before using the appliance to ensure safe and efficient operation.



Image 1.1: The Havells Air Fryer Air Oven Digi appliance.

2. Important Safety Instructions

- Always place the appliance on a stable, heat-resistant surface, away from walls and other appliances to ensure proper ventilation.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not operate the appliance if the plug, main cord, or the appliance itself is damaged.
- Keep children and pets away from the appliance during operation. Surfaces can become very hot.
- Always use oven mitts when handling hot accessories or food.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Never leave the appliance unattended while in operation.

3. Product Overview and Components

The Havells Air Fryer Air Oven Digi is designed for versatile cooking. It features a digital control panel and comes with several accessories to enhance your cooking experience.



Image 3.1: All included accessories for the Havells Air Fryer Air Oven Digi.

Included Components:

- 1 N Main Unit
- 2 N Grill Tray
- 1 N Tray
- 1 N 4.6 L Rectangular Basket with handle
- 1 N 2.6 L Rotation Drum Basket
- 1 N Drum Basket Holder
- 1 N Instruction Manual
- 1 N Recipe Book

4. Setup

4.1 Unpacking

1. Carefully remove all packaging materials from the appliance and its accessories.
2. Check that all listed components are present and undamaged.
3. Remove any stickers or labels from the appliance, except for the rating label.

4.2 Placement

- Place the appliance on a flat, stable, and heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of clear space on all sides of the appliance for adequate air circulation.
- Do not place the appliance near flammable materials or under wall cabinets.

4.3 Initial Cleaning

- Wipe the exterior of the appliance with a damp cloth.
- Wash all removable accessories (grill trays, baskets, etc.) with warm, soapy water. Rinse thoroughly and dry completely.
- Before first use, operate the appliance for approximately 10-15 minutes at 180°C (350°F) without any food inside to burn off any manufacturing residues. A slight odor or smoke may be present, which is normal. Ensure good ventilation during this process.

4.4 Power Connection

- Plug the power cord into a grounded electrical outlet.
- The appliance is now ready for use.

5. Operating the Appliance

5.1 Control Panel

The Havells Air Fryer Air Oven Digi features an intuitive LED display with a digital sensor touch control panel.



Image 5.1: Close-up of the digital sensor touch control panel.

The control panel includes:

- **Power ON/OFF Button:** To turn the appliance on or off.
- **Temperature Control:** Use '+' and '-' buttons to adjust the cooking temperature.
- **Timer Controls:** Use '+' and '-' buttons to set the cooking time (up to 90 minutes).
- **Preset Cooking Buttons:** 9 pre-set options for common dishes.
- **Light Button:** To turn the interior light on or off.
- **Reheat Button:** For reheating food.
- **Rotating Button:** Activates the rotisserie function for the drum basket.

Your browser does not support the video tag.

Video 5.1: This video demonstrates the features of the Havells Air Fryer Air Oven Digi, including the control panel, various accessories, and cooking functions like air frying, baking, roasting, grilling, reheating, and dehydrating. It highlights the Aero Crisp Technology and 360-degree air circulation for even cooking.

5.2 Using Pre-set Menus

The appliance offers 9 auto pre-set options for convenient cooking. Simply select the desired pre-set, and the appliance will automatically set the optimal temperature and time.

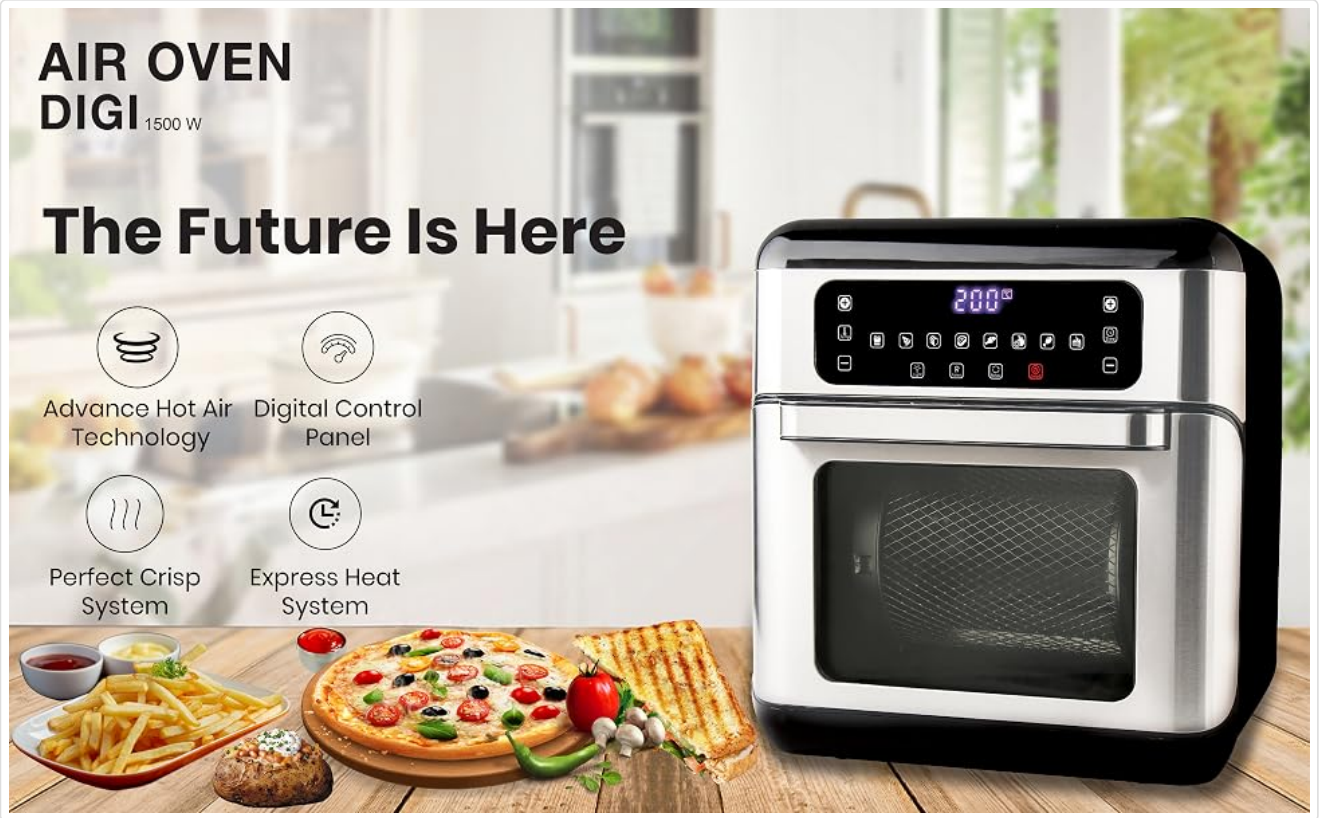


Image 5.2: Visual representation of the 9 auto pre-set cooking options available on the control panel.

The pre-set options include:

- Baked
- Chicken
- Dehydrated
- Toaste (Toast)
- Preheat
- Fish
- Steak
- Pizza
- Fry

5.3 Manual Operation

For custom cooking, you can manually adjust the temperature and time:

1. Press the Power ON/OFF button to turn on the appliance.
2. Use the Temperature Control '+' and '-' buttons to set your desired temperature.
3. Use the Timer Controls '+' and '-' buttons to set the cooking duration.
4. Press the Power ON/OFF button again to start cooking.

5.4 Using Accessories

Proper use of accessories ensures optimal cooking results.

- **Rotation Drum Basket (2.6 L):** Ideal for items like french fries, nuts, or small vegetables that require tumbling for even cooking. Insert the drum basket into the rotisserie slots and activate the Rotating Button on the control

panel.



Image 5.3: The 2.6 L rotation drum basket, suitable for tumbling food items.

- **Rectangular Basket (4.6 L):** Suitable for larger quantities of food or items that do not require tumbling, such as chicken pieces or vegetables.



Image 5.4: The 4.6 L non-stick rectangular shaped basket.

- **Grill Trays:** Use for baking, roasting, or grilling items that need a flat surface.



Image 5.5: Two grill trays for baking and roasting.

5.5 Cooking Technologies

- **Aero Crisp Technology:** Utilizes advanced hot air technology to fry foods quickly and evenly with no oil usage, providing a healthier cooking option.



Image 5.6: The appliance utilizes Aero Crisp Technology for oil-free cooking.

- **360-degree Air Circulation:** Ensures rapid air circulation in every direction for evenly cooked food and better crispness.



Image 5.7: Illustration of 360-degree air circulation for uniform cooking.

- **Express Heat System:** Designed to ensure faster cooking times.



Image 5.8: The Express Heat System ensures quick cooking.

6. Maintenance and Cleaning

6.1 General Cleaning

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Wipe the exterior with a damp cloth and mild detergent. Do not use abrasive cleaners.
3. Clean the interior with a damp cloth and mild, non-abrasive cleaning liquid. For stubborn stains, a soft brush may be used.
4. Ensure the heating element is free from food debris.

6.2 Cleaning Accessories

- All removable accessories (grill trays, baskets, drum basket, etc.) can be washed with warm, soapy water.
- Rinse thoroughly and dry completely before storing or re-using.
- The appliance is **not** dishwasher safe.

7. Troubleshooting

If you encounter any issues with your Havells Air Fryer Air Oven Digi, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the power cord is securely plugged in. Check your circuit breaker. Try a different outlet.

Problem	Possible Cause	Solution
Food is not cooking evenly.	Overcrowding the basket/tray; incorrect temperature/time.	Do not overcrowd the cooking area. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous use; fatty food cooking.	Clean the appliance and accessories thoroughly. This is normal for fatty foods; ensure proper ventilation.
Appliance switches off momentarily and comes back on.	Overheating protection activated; loose connection.	Allow the appliance to cool down. Check power connections. If the problem persists, contact customer service.

If the issue persists after trying these solutions, please contact Havells customer support.

8. Specifications

Here are the technical specifications for the Havells Air Fryer Air Oven Digi (Model GHCAFDIK150):

Feature	Specification
Model Name	Air Oven
Item Model Number	GHCAFDIK150
Brand	Havells
Capacity	9 litres
Wattage	1500 Watts
Voltage	230 Volts
Control Method	Touch
Special Feature	Temperature Control
Product Dimensions	38D x 47.4W x 38H Centimeters
Item Weight	9 kg 200 g
Colour	Grey-Black
Material	Plastic (Outer Material: Glass)
Recommended Uses	Bake or Roast, Fry, Grill
Air Frying Technology	Aero crisp technology
Has Nonstick Coating	No
Is Dishwasher Safe	No
Country of Origin	China

9. Warranty and Support

9.1 Warranty Information

The Havells Air Fryer Air Oven Digi comes with a**2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your purchase receipt as proof of purchase for warranty claims.

9.2 Customer Support

For any product-related queries, service requests, or warranty claims, please contact Havells customer support. Refer to the contact details provided in your warranty card or visit the official Havells website for the latest support information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question