simplehuman CW2080

simplehuman CW2080 45 Liter Rectangular Pedal Bin Instruction Manual

Model: CW2080

Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your simplehuman CW2080 45 liter rectangular pedal bin. Please read these instructions carefully to ensure proper use and longevity of your product.



Image: Front view of the simplehuman CW2080 45 liter rectangular pedal bin in brushed stainless steel.

Setup

1. Unpacking

Carefully remove all packaging materials from the bin. Ensure no components are left inside the packaging.

2. Liner Pocket Installation

The bin features an integrated liner pocket for convenient storage of custom-fit liners. To install a new pack of liners:

1. Open the lid of the bin.
2. Locate the liner pocket inside the bin, typically on the back wall.
3. Insert a pack of simplehuman custom-fit liners into the pocket.
4. Pull the first liner through the dispensing slot.



Image: Close-up view of the integrated liner pocket designed to store a pack of custom-fit liners.



Image: A hand demonstrating how to easily dispense a single liner from the internal liner pocket.

Operating Instructions

1. Opening the Lid

To open the lid, gently press down on the wide steel pedal located at the base of the bin. The lid will open smoothly.



Image: Detail of the strong, wide steel pedal designed for durability and ease of use.

2. Closing the Lid

Release the pedal to close the lid. The patented lid shox technology ensures a slow, silent, and controlled closing motion.

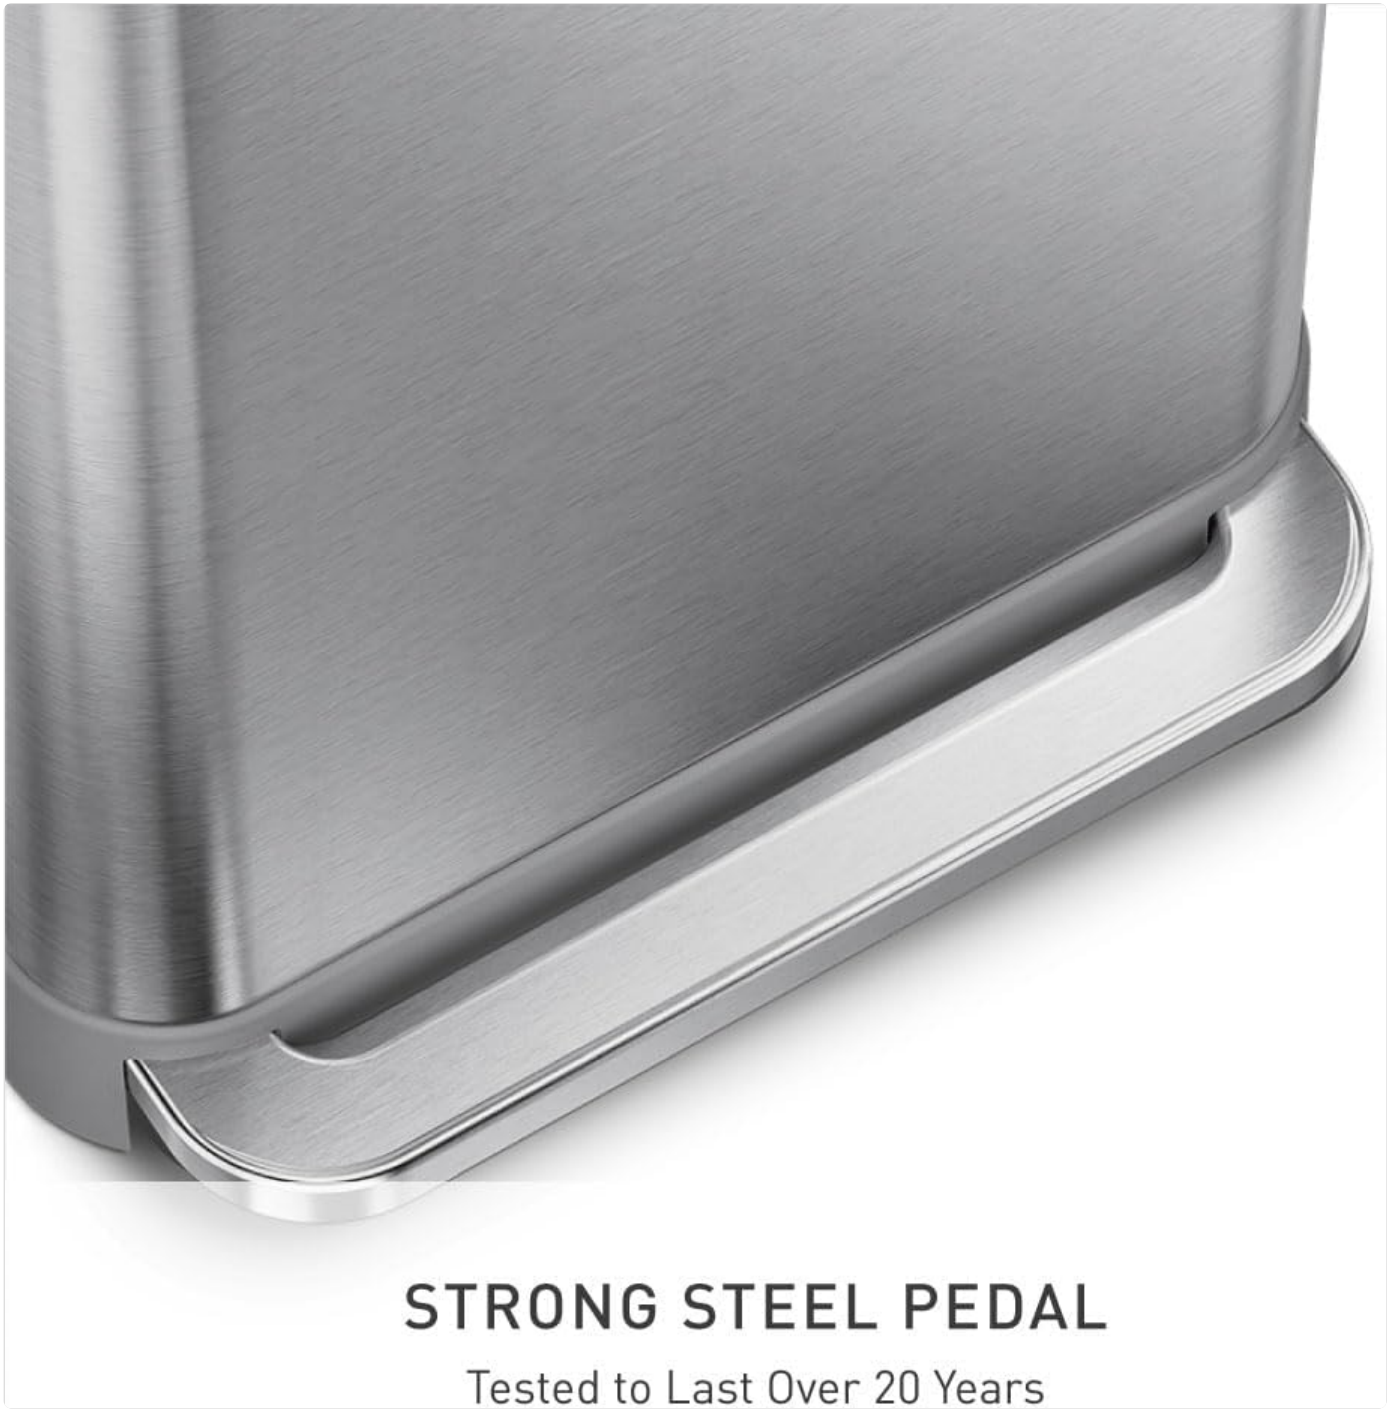


Image: Visual representation of the lid's slow-close mechanism, controlled by Lid Shox Technology.

3. Replacing the Liner

1. Open the lid.
2. Lift the stainless steel rim upwards. This rim will stay in an upright position, making liner replacement easier.
3. Remove the full liner.
4. Take a new liner from the liner pocket and place it around the inner bucket.
5. Lower the stainless steel rim to secure the liner and hide any excess bag.



Image: The stainless steel rim lifted to facilitate easy liner replacement, ensuring a neat and secure fit.

Maintenance

1. Cleaning the Bin

- Wipe the exterior of the stainless steel bin with a soft, damp cloth and a mild stainless steel cleaner. Avoid abrasive cleaners or scrubbers.
- Clean the plastic lid with a soft cloth and mild soap and water. The plastic lid is dent-proof and designed to resist fingerprints.
- For the interior, remove the inner bucket and wash it with soap and water. Rinse thoroughly and dry before placing it back into the bin.

2. OdorSorb Pod (Optional Accessory)

If you use an optional OdorSorb pod, replace it every 45 days to effectively eliminate trash odors. Refer to the OdorSorb pod packaging for specific replacement instructions.



Image: The OdorSorb pod, an optional accessory, designed to eliminate trash odors for up to 45 days.

Troubleshooting

Problem	Possible Cause	Solution
Lid does not open or close smoothly.	Obstruction in the lid mechanism or pedal.	Check for any debris or objects obstructing the lid or pedal. Ensure the bin is placed on a flat, stable surface.
Liner slips into the bin.	Liner not properly secured by the rim.	Ensure the stainless steel rim is fully lowered and securely holding the liner in place. Use simplehuman custom-fit liners for optimal fit.

Problem	Possible Cause	Solution
Unpleasant odors persist.	OdorSorb pod needs replacement or bin needs cleaning.	Replace the OdorSorb pod if used and it's been over 45 days. Thoroughly clean the inner bucket and lid.

Specifications

- **Model:** CW2080
- **Capacity:** 45 Liters
- **Dimensions (L x W x H):** 40.39 cm x 33.78 cm x 65.53 cm
- **Weight:** 5.85 kg (12.9 Pounds)
- **Material:** Brushed stainless steel body with gray plastic lid
- **Opening Mechanism:** Pedal
- **Special Features:** Silent close lid (Lid Shox Technology), Liner Pocket, Dent-proof plastic lid



Image: A diagram illustrating the length, width, and height dimensions of the simplehuman CW2080 45 liter rectangular pedal bin.

Warranty

This simplehuman product is backed by a **10-year warranty**. This warranty covers defects in material and workmanship under normal use. For detailed warranty terms and conditions, please refer to the official simplehuman website or contact customer support.



Image: A visual representation of the 10-year warranty offered for simplehuman products.

Support

For further assistance, product information, or to purchase replacement parts and custom-fit liners, please visit the official simplehuman website:

www.simplehuman.com

You may also contact simplehuman customer service for support.

© 2023 simplehuman. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question