Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

KODIAK 3500GRP-3500 lumens

KODIAK LITEZALL 3500 Lumen Rubber Grip Tactical Flashlight

Model: 3500GRP-3500 lumens (Item Model Number: 23207)

Introduction

This manual provides essential information for the safe and effective use of your KODIAK LITEZALL 3500 Lumen Rubber Grip Tactical Flashlight. Please read these instructions thoroughly before operating the device and retain them for future reference.



Image: The KODIAK LITEZALL 3500 Lumen Rubber Grip Tactical Flashlight, showcasing its robust design.

Product Overview

The KODIAK LITEZALL 3500 Lumen Rubber Grip Tactical Flashlight is designed for durability and high performance. It features a rubberized grip for secure handling, weather and impact resistance, and an adjustable focusing beam to switch between spot and wide illumination.

Key Features:

- **High Brightness:** Up to 3500 lumens for powerful illumination.
- **Multiple Light Modes:** High, Medium, and Low settings for varied use.
- **Adjustable Focusing Beam:** Easily transition from a focused spot to a broad floodlight.
- **Durable Construction:** Rubber grip, weather, and impact-resistant design.

Visual Guide:



Image: The KODIAK K-3500 Flashlight, highlighting its model name.



Image: Illustration of the three light modes: 3500 lumens (High), 1750 lumens (Medium), and 350 lumens (Low), with approximate runtimes.

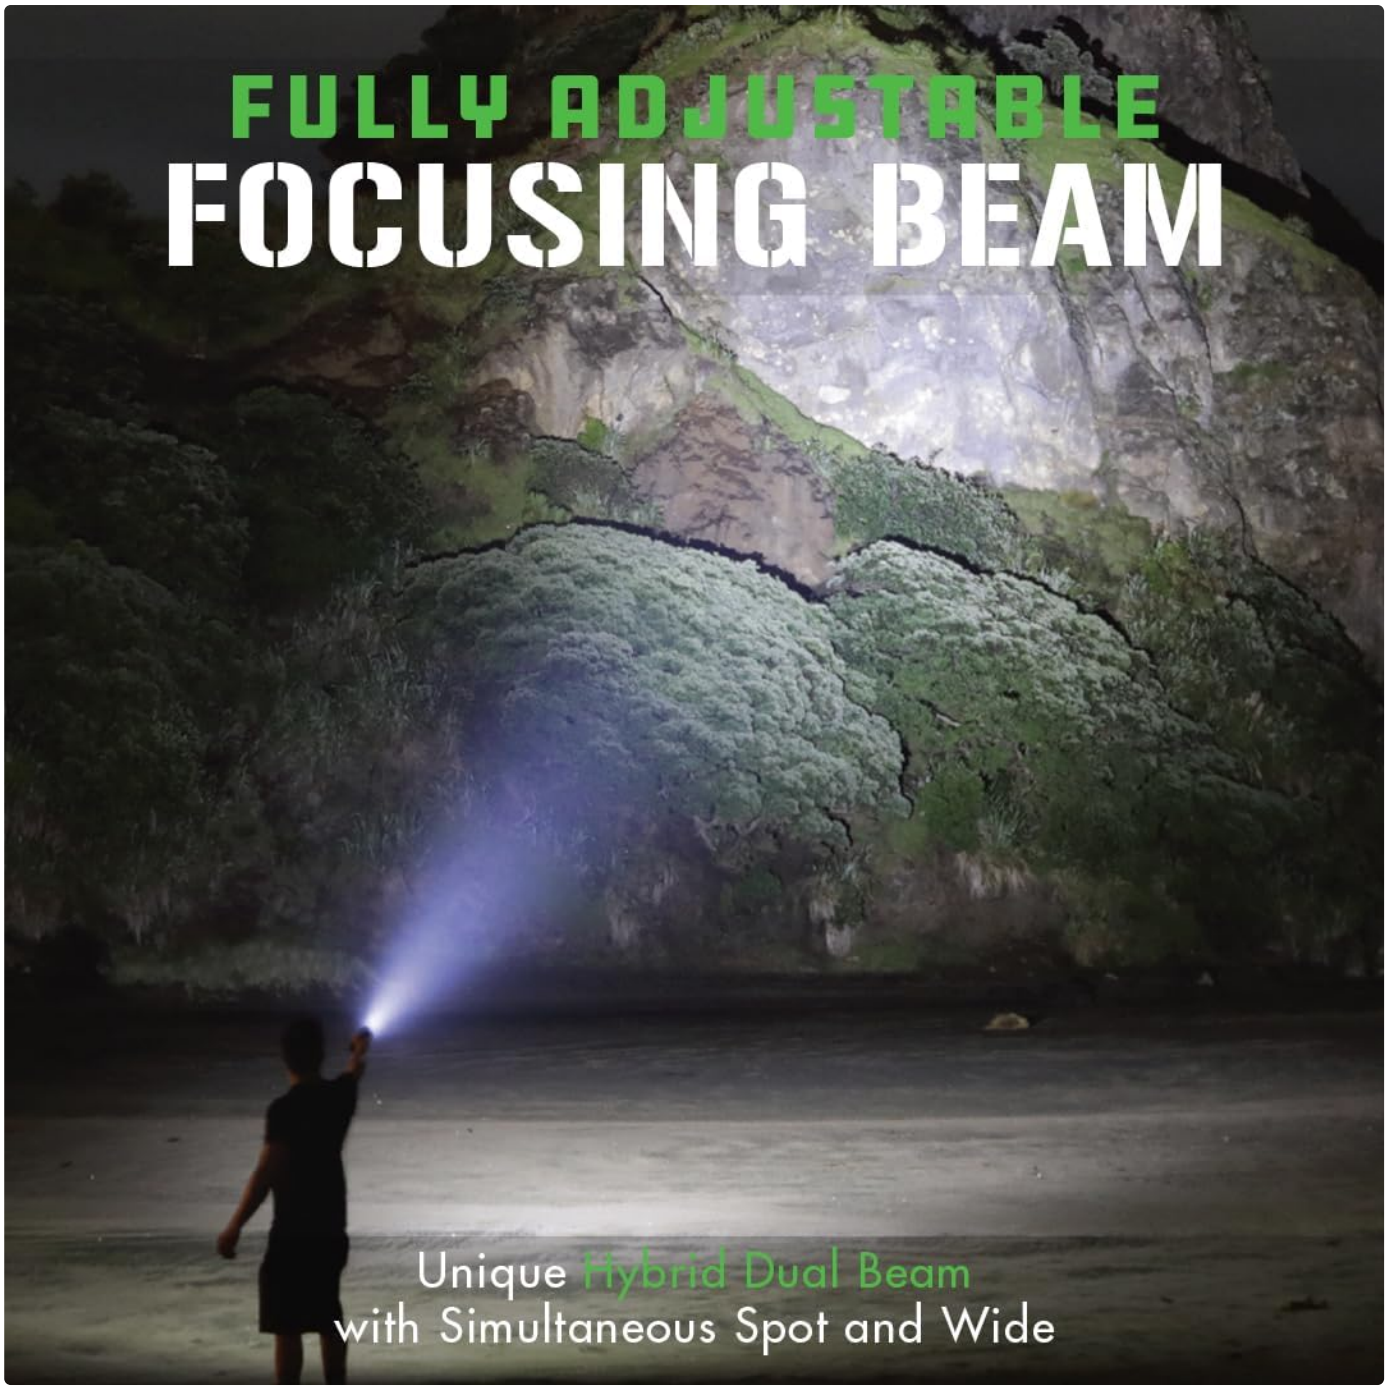


Image: A person demonstrating the fully adjustable focusing beam, showing its ability to illuminate a wide area.



Image: Detailed view of the flashlight highlighting its rubber grip, weather, and impact-resistant features, and push-pull adjustable beam mechanism.

Product Video:

Your browser does not support the video tag.

Video: A short overview of the Kodiak flashlight, demonstrating its features and use cases.

Setup

Battery Installation:

1. Unscrew the tail cap of the flashlight by turning it counter-clockwise.
2. Insert the required batteries (9 x AA batteries, not included) into the battery compartment, ensuring correct polarity (+/-) as indicated inside the flashlight.
3. Screw the tail cap back on clockwise until it is securely tightened.

Note: Ensure batteries are inserted correctly to prevent damage to the flashlight. Always use fresh, high-quality batteries for optimal performance.

Operating Instructions

Power On/Off:

- To turn the flashlight **ON**, press the power button located on the side of the flashlight.
- To turn the flashlight **OFF**, press the power button again.

Changing Light Modes:

The flashlight features three light modes: High, Medium, and Low.

- With the flashlight ON, press the power button repeatedly to cycle through the modes: High → Medium → Low.
- The flashlight will remember the last used mode when turned off and on again.

Adjusting the Beam Focus:

The flashlight features an adjustable focusing beam:

- To adjust the beam from a focused spot to a wide floodlight, gently push or pull the head of the flashlight forward or backward.
- Adjust the beam to suit your specific lighting needs.

Maintenance

Cleaning:

- Wipe the flashlight body with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Keep the lens clean for optimal light output. Use a lens cleaning cloth if necessary.

Battery Care:

- Remove batteries if the flashlight will not be used for an extended period to prevent leakage and corrosion.
- Replace all batteries at the same time with new ones of the same type and brand.
- Dispose of used batteries according to local regulations.

Troubleshooting

Problem	Possible Cause	Solution
Flashlight does not turn on.	Dead or incorrectly installed batteries.	Check battery polarity. Replace with fresh batteries.
Light is dim or flickers.	Low battery power or loose connections.	Replace batteries. Ensure tail cap is tightly screwed on.

Problem	Possible Cause	Solution
Beam adjustment is stiff.	Dirt or debris in the focusing mechanism.	Gently clean the head area. Avoid forcing the mechanism.
Corrosion inside battery compartment.	Old or leaking batteries left inside.	Clean with a cotton swab and vinegar (for alkaline corrosion) or baking soda paste (for acid corrosion), then wipe dry. Prevent by removing batteries during long storage.

Specifications

Feature	Detail
Brand	KODIAK
Manufacturer	LitezAll
Model Number	23207
Part Number	3500GRP-3500 Lumens
Item Weight	1.4 pounds
Product Dimensions	2.06 x 2.06 x 9.37 inches
Material	Plastic
Color	Black
Power Source	Battery Powered
Type of Bulb	LED
Luminous Flux	3500 Lumen
Bulb Features	Adjustable Focus, Multiple Brightness Levels
Special Features	Adjustable, Durable, Portable
Batteries Required	Yes (9 x AA batteries, not included)

Warranty and Support

Warranty Information:

Specific warranty details for the KODIAK LITEZALL 3500 Lumen Rubber Grip Tactical Flashlight are typically provided at the point of purchase or within the product packaging. Please refer to any included warranty cards or contact the manufacturer directly for detailed information regarding warranty coverage and terms.

Customer Support:

For technical assistance, troubleshooting not covered in this manual, or inquiries about replacement parts, please contact KODIAK customer support. Contact information can usually be found on the manufacturer's official website or on the product packaging.

© 2024 KODIAK. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0816331TQ

More documents and user manuals: **https://manuals.plus/**