Kärcher SC3 Yellow

Kärcher SC 3 EasyFix Steam Cleaner User Manual

Model: SC3 Yellow (1.513-120.0)

Introduction Safety Information Package Contents Setup Operation Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

The Kärcher SC 3 EasyFix is a versatile and efficient steam cleaner designed to provide chemical-free deep cleaning for various surfaces in your home. Utilizing high-temperature steam, it effectively removes dirt, grease, and stains, while also eliminating up to 99.9% of common household bacteria and enveloped viruses.

This manual provides essential information on the safe operation, setup, maintenance, and troubleshooting of your Kärcher SC 3 EasyFix steam cleaner. Please read it thoroughly before first use and keep it for future reference.

2. Safety Information

Always observe the following safety precautions when using your Kärcher SC 3 EasyFix steam cleaner:

- **Electrical Safety:** Ensure the power supply matches the voltage specified on the appliance. Do not operate the appliance with a damaged cord or plug.
- **Hot Steam Hazard:** Steam is extremely hot and can cause severe burns. Never direct steam at people, pets, or electrical appliances. Use caution when handling hot parts and accessories.
- **Child Safety:** Keep the appliance out of reach of children. The device features a child safety lock to prevent accidental activation.
- **Surface Compatibility:** Test the steam on an inconspicuous area of the surface before cleaning the entire area, especially for delicate materials like unsealed wood, certain plastics, or painted surfaces.
- **Water Only:** Only use clean tap water in the water tank. Do not add detergents, perfumes, or other chemicals, as this can damage the appliance and void the warranty.

- **Unplug When Not in Use:** Always unplug the appliance from the power outlet before cleaning, maintenance, or when not in use.

3. Package Contents

Your Kärcher SC 3 EasyFix steam cleaner package should include the following components:

- Kärcher SC 3 EasyFix Steam Cleaner Unit
- Hand Nozzle with Microfiber Cover
- EasyFix Floor Nozzle with Microfiber Cloth
- Small Round Brush
- 2 Extension Tubes (20 inches each)
- Descaling Cartridge



Image: Kärcher SC 3 EasyFix Steam Cleaner with all standard accessories laid out.

4. Setup

4.1 Initial Assembly

1. Unpack all components from the packaging.
2. Attach the wheels to the main unit if they are not pre-assembled.
3. Connect the steam hose to the main unit by pushing it firmly into the connection port until it clicks into place.

4.2 Filling the Water Tank

The SC 3 EasyFix features a removable water tank for continuous operation.

1. Remove the water tank from the appliance.
2. Fill the tank with clean tap water. The maximum capacity is 1 liter.
3. Insert the descaling cartridge into the designated slot in the water tank. This cartridge helps prevent limescale buildup and prolongs the life of the appliance.
4. Place the filled water tank back into the appliance, ensuring it is securely seated.



Image: Illustration of inserting the descaling cartridge for automatic descaling.

4.3 Attaching Accessories

Select the appropriate accessory for your cleaning task and attach it to the steam gun or extension tubes.

- **For Floor Cleaning:** Connect the two extension tubes together, then attach the EasyFix floor nozzle to one end and the steam gun to the other. Secure the microfiber floor cloth to the floor nozzle using the hook-and-loop fasteners.
- **For Handheld Cleaning:** Attach the desired accessory (e.g., hand nozzle, small round brush, spotlight nozzle) directly to the steam gun.

5. Operating Instructions

5.1 Powering On and Heat-Up

1. Plug the power cord into a grounded electrical outlet.
2. Press the ON/OFF switch. The indicator light will illuminate.
3. The appliance will heat up rapidly, typically within 40 seconds. The indicator light will change or turn off when the steam cleaner is ready for use.

5.2 Steam Regulation and Child Safety Lock

The SC 3 EasyFix features two-stage steam regulation and a child safety lock on the steam gun.

- **Steam Intensity:** Adjust the steam output using the slider on the steam gun to suit the surface and level of grime.
- **Child Safety Lock:** Engage the child safety lock when the appliance is not in use or during breaks to prevent accidental steam release.



Image: Illustration of the child safety lock feature.

5.3 Cleaning Various Surfaces

The Kärcher SC 3 EasyFix is suitable for a wide range of hard surfaces. Always ensure the surface is steam-resistant before cleaning.

- **Hard Floors (Tile, Laminate, LVT, Vinyl):** Use the EasyFix floor nozzle with the microfiber cloth. Move the nozzle slowly and evenly over the floor. The lamella technology ensures steam is distributed edge-to-edge for efficient cleaning.

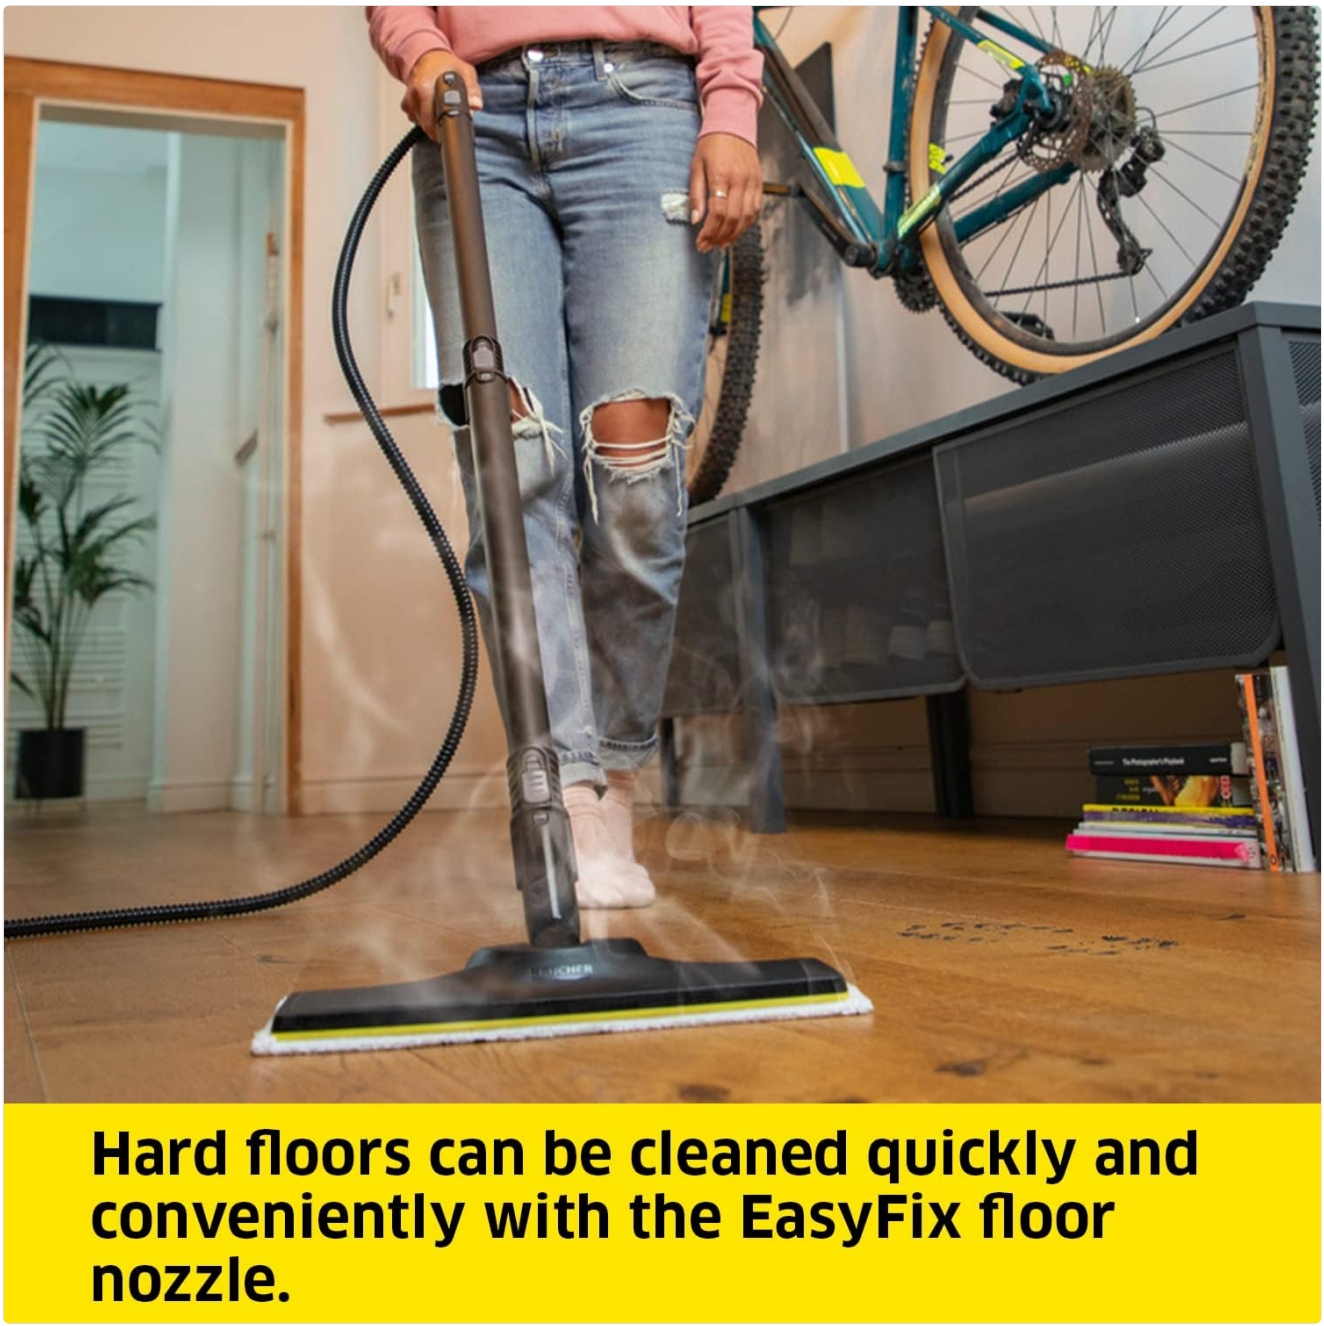


Image: Hard floors can be cleaned quickly and conveniently with the EasyFix floor nozzle.

- **Grout and Tight Spaces:** Attach the small round brush or spotlight nozzle to the steam gun. Direct steam onto the area and scrub as needed.



Image: The round brush effectively cleans fittings, joints, and narrow crevices.

- **Countertops, Appliances, and Walls:** Use the hand nozzle with a microfiber cover. Move the nozzle over the surface, allowing the steam to loosen dirt.



Image: The hand nozzle can be used in combination with the microfiber cover for various surfaces.

- **Windows and Mirrors:** Use the hand nozzle with a microfiber cover, then wipe with a clean, dry cloth for a streak-free finish.



Image: The hand nozzle is effective for cleaning glass surfaces like shower doors.

5.4 Extended Reach and Maneuverability

The included extension tubes and flexible nozzle joint enhance the cleaning range and ease of use.

- Use the 20-inch extension tubes to reach high areas or under furniture.
- The flexible joint on the floor nozzle allows for maximum range of motion, making it easy to clean around obstacles and into corners.



Image: The flexible joint ensures maximum range of motion for cleaning hard-to-reach areas.

6. Maintenance

6.1 Descaling

The Kärcher SC 3 EasyFix uses a descaling cartridge to automatically decalcify the water. Replace the descaling cartridge when indicated by the appliance or after approximately 3 months of regular use, depending on water hardness.

6.2 Cleaning Microfiber Cloths

The microfiber cloths for the hand nozzle and floor nozzle are machine washable. Wash them at a maximum temperature of 60°C (140°F) without fabric softener. Do not bleach or tumble dry.

6.3 General Cleaning and Storage

After each use, wipe down the exterior of the appliance with a damp cloth. Ensure the appliance is completely cool and dry before storing it in a dry, safe place, away from direct sunlight and extreme temperatures.

7. Troubleshooting

If you encounter issues with your Kärcher SC 3 EasyFix, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
No steam output	No water in tank / Appliance not heated up / Child safety lock engaged	Refill water tank / Wait for heat-up indicator / Disengage child safety lock
Low steam pressure	Insufficient heat / Limescale buildup	Allow more time to heat / Replace descaling cartridge
Water leaking from nozzle	Accessory not properly attached / Condensation	Ensure accessory is securely attached / This is normal during initial use or after long pauses
Appliance not turning on	Not plugged in / Power outlet issue	Check power connection / Test outlet with another device

If the problem persists after attempting these solutions, please contact Kärcher customer support.

8. Specifications

Feature	Detail
Brand	Kärcher
Model Name	SC3 Yellow
Item Model Number	1.513-120.0
Wattage	1450 watts
Voltage	120V
Tank Volume	1 Liters
Heat Time	40 seconds
Maximum Temperature	212°F
Item Weight	9.15 Pounds
Product Dimensions (LxWxH)	15.5"D x 9.3"W x 10.5"H
Color	Yellow
UPC	886622029274

9. Warranty and Support

9.1 Warranty Information

Your Kärcher SC 3 EasyFix Steam Cleaner comes with a**Three Year Limited Warranty with Rapid Exchange Program**. Please retain your proof of purchase for warranty claims. For full details on warranty coverage and terms, refer to the official Kärcher warranty documentation or contact Kärcher customer service.

9.2 Customer Support

For technical assistance, spare parts, or service inquiries, please contact Kärcher customer support through their official website or the contact information provided in your product packaging.

You can also refer to the official User Manual PDF for more detailed informationDownload User Manual (PDF)

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question