Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Lovehoney FS-74956

Lovehoney Fifty Shades of Grey Greedy Girl Thrusting Rabbit Vibrator User Manual

Model: FS-74956

Introduction

This manual provides essential information for the safe and effective use of your Lovehoney Fifty Shades of Grey Greedy Girl Thrusting Rabbit Vibrator. Please read these instructions carefully before first use and retain for future reference. The Greedy Girl Thrusting Rabbit Vibrator is designed for dual stimulation, featuring a thrusting shaft and a clitoral stimulator. It is made from body-safe silicone, is 100% waterproof, and USB rechargeable.

Safety Information

- For adult use only.
- Clean the device thoroughly before and after each use as described in the "Maintenance" section.
- Use only with water-based lubricants. Oil-based lubricants can damage silicone products.
- Do not use if the device appears damaged or if the silicone is torn.
- Keep out of reach of children.
- If you experience any discomfort or pain, discontinue use immediately.

Package Contents

Verify that all items are present in your package:

- Lovehoney Fifty Shades of Grey Greedy Girl Thrusting Rabbit Vibrator
- USB Charging Cable
- Satin Gift Bag
- User Manual (this document)



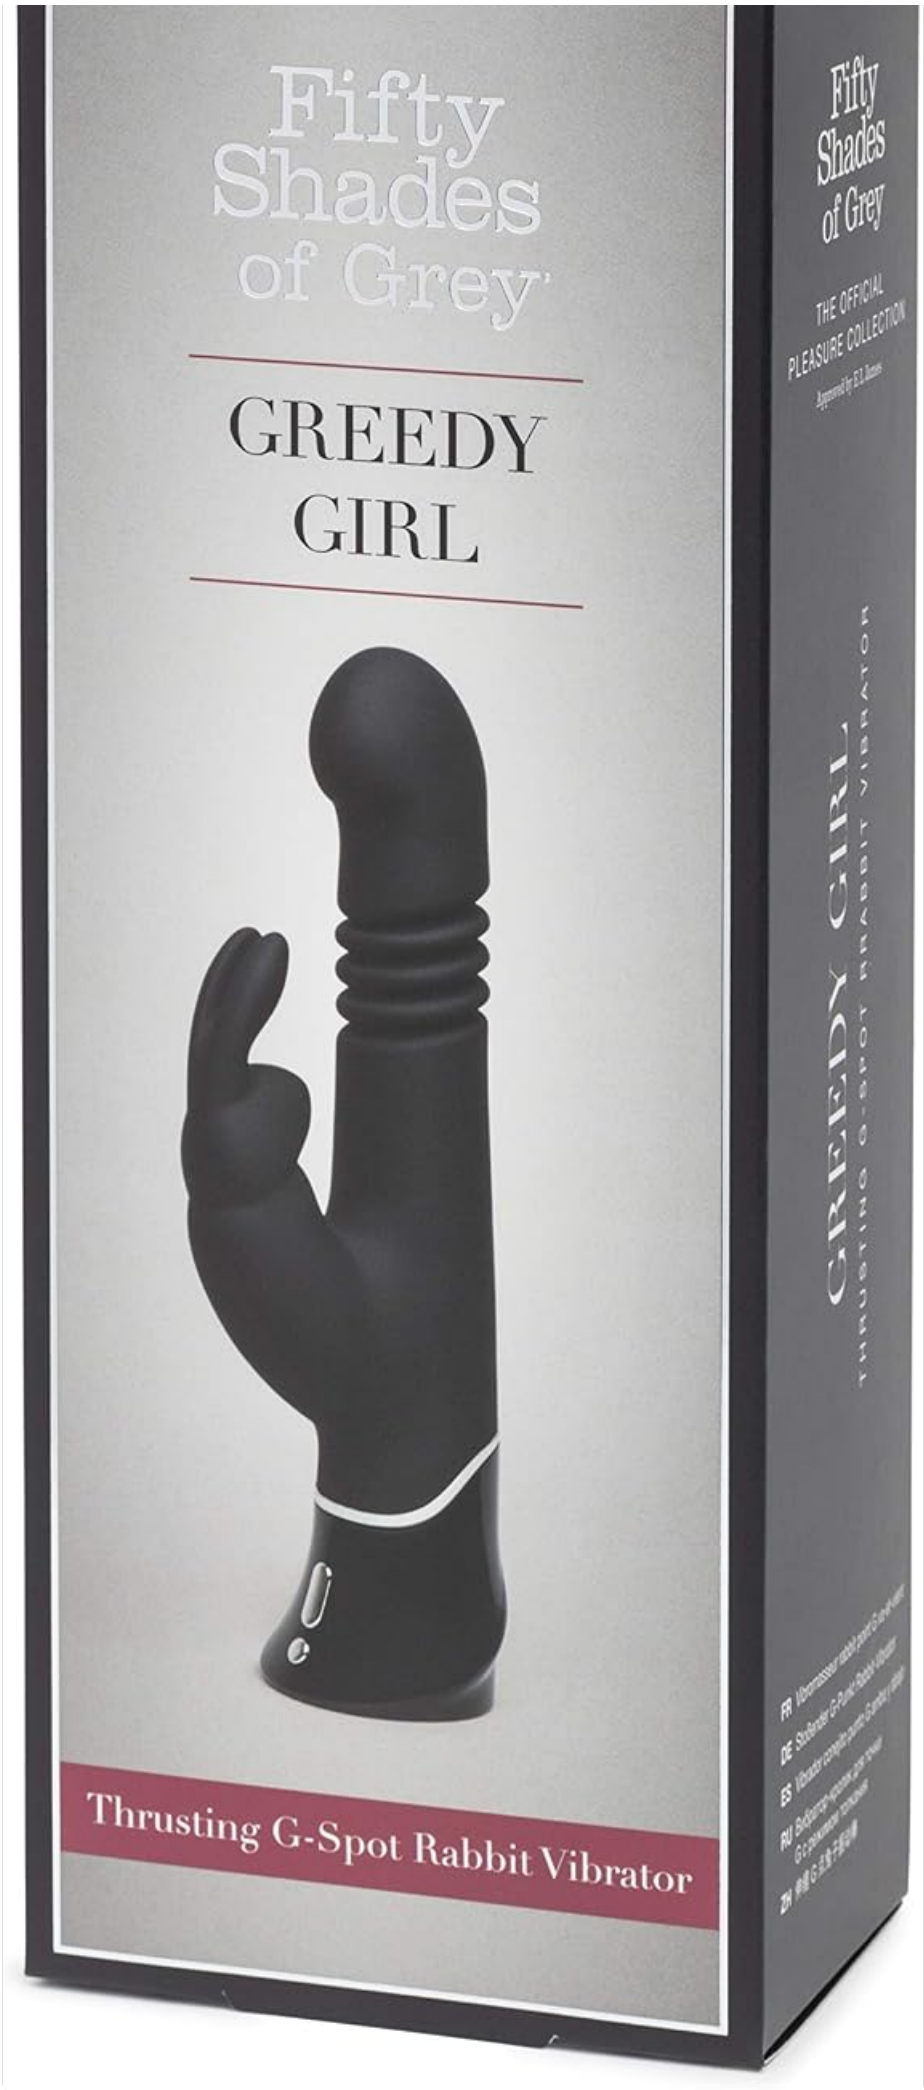

Fifty Shades of Grey
GREEDY GIRL
Thrusting G-Spot Rabbit Vibrator
Fifty Shades of Grey
THE OFFICIAL PLEASURE COLLECTION
GREEDY GIRL
THRUSTING G-SPOT RABBIT VIBRATOR

Image: The Lovehoney Greedy Girl Thrusting Rabbit Vibrator, its USB charging cable, and a satin gift bag, representing the typical package contents.

Setup

Charging the Device

Before first use, fully charge the vibrator. Subsequent charges should be performed as needed.

1. Locate the charging port on the base of the vibrator.
2. Insert the small end of the provided USB charging cable into the charging port.
3. Connect the USB end of the cable to a compatible USB power source (e.g., computer, USB wall adapter).
4. The indicator light on the device will illuminate or flash during charging and typically turn solid when fully charged. Refer to the device's specific light indicators for full charge status.
5. Disconnect the cable once charging is complete.



Image: The Lovehoney Greedy Girl Thrusting Rabbit Vibrator with its charging port connected to the USB charging cable, illustrating the charging process.

First Use Preparation

Before the first use, and after each subsequent use, clean the device as instructed in the "Maintenance" section.

Operating Instructions

The Lovehoney Greedy Girl Thrusting Rabbit Vibrator offers multiple vibration patterns and intensities for both the main shaft and the clitoral stimulator.

Your browser does not support the video tag.

Video: A demonstration of the Lovehoney Greedy Girl Thrusting Rabbit Vibrator, showing its features, charging, and waterproof capabilities. This video illustrates how to handle the device, connect the charger, and its ability to be used in water.

Power On/Off

- To turn on: Press and hold the power button (usually located on the base) for 2-3 seconds.
- To turn off: Press and hold the power button for 2-3 seconds until the device stops.

Adjusting Settings

- **Vibration Modes:** Short press the power button to cycle through the available vibration patterns and intensities. The device features 36 vibration combinations.
- **Thrusting Function:** If applicable, a separate button or a specific sequence of presses on the main button may control the thrusting motion. Refer to the quick start guide included with your product for exact button functions.





Image: A front view of the Lovehoney Greedy Girl Thrusting Rabbit Vibrator, highlighting its dual stimulation design with the main shaft and rabbit ear clitoral stimulator, and the control buttons at the base.

Maintenance

Cleaning

Proper cleaning ensures hygiene and prolongs the life of your device.

1. Always clean the device before and after each use.
2. Wash the device with warm water and a toy cleaner or mild antibacterial soap.
3. Rinse thoroughly with clean water.
4. Pat dry with a lint-free cloth or allow to air dry completely before storing.

Note: The device is 100% waterproof, allowing for easy cleaning under running water. Ensure the charging port is dry before connecting the charging cable.

Storage

Store the vibrator in a clean, dry, and cool place, away from direct sunlight and extreme temperatures. Use the provided satin gift bag for discreet and protected storage.

Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided USB cable.

Problem	Possible Cause	Solution
Device does not charge.	Charging cable or power source issue; charging port obstruction.	Ensure the cable is securely connected. Try a different USB power source. Check the charging port for debris.
Weak or inconsistent vibrations.	Low battery; internal malfunction.	Recharge the device. If the problem persists after charging, contact customer support.
Unusual noise during operation.	Internal component issue.	Discontinue use and contact customer support.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact Lovehoney customer support for assistance.

Specifications

Model Number: FS-74956

Brand: Lovehoney

Material: Body-safe Silicone

Dimensions: 3.94 x 1.57 x 1.97 inches

Weight: Approximately 15.52 ounces

Battery: 1 Lithium Ion (Rechargeable)

Waterproof: Yes

Features: Thrusting shaft, clitoral stimulator, 36 vibration combinations.

Warranty and Support

Lovehoney products are manufactured to high standards. For information regarding warranty coverage, returns, or technical support, please refer to the official Lovehoney website or contact their customer service directly. Keep your proof of purchase for warranty claims.

Lovehoney Customer Support: Please visit www.lovehoney.com for contact details and further assistance.

© 2023 Lovehoney. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B081FFTZM5

More documents and user manuals: **https://manuals.plus/**