Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Kircuit AC Adapter for Roland R-70

Kircuit AC Adapter User Manual

For Roland R-70 Drum Machine Charger Switching Power Supply


1. Introduction

This user manual provides essential information for the safe and effective use of your Kircuit AC Adapter, designed specifically for the Roland R-70 Drum Machine Charger. Please read this manual thoroughly before using the product to ensure proper operation and to prevent damage.
The Kircuit AC Adapter is a reliable power supply unit engineered to deliver stable and consistent power, ensuring optimal performance for your compatible devices. It features built-in safety protections to safeguard against common electrical issues.

2. Safety Information

WARNING: To reduce the risk of fire or electric shock, carefully follow these instructions.

- Ensure the adapter's input voltage (100V-240V AC) matches your local power supply.
- Do not expose the adapter to rain or moisture.
- Do not disassemble the adapter. Refer all servicing to qualified service personnel.
- Avoid placing the adapter in direct sunlight or near heat sources.
- Always unplug the adapter from the power outlet when not in use or before cleaning.
- Ensure the adapter is compatible with your device's power requirements (voltage and amperage) before connecting.

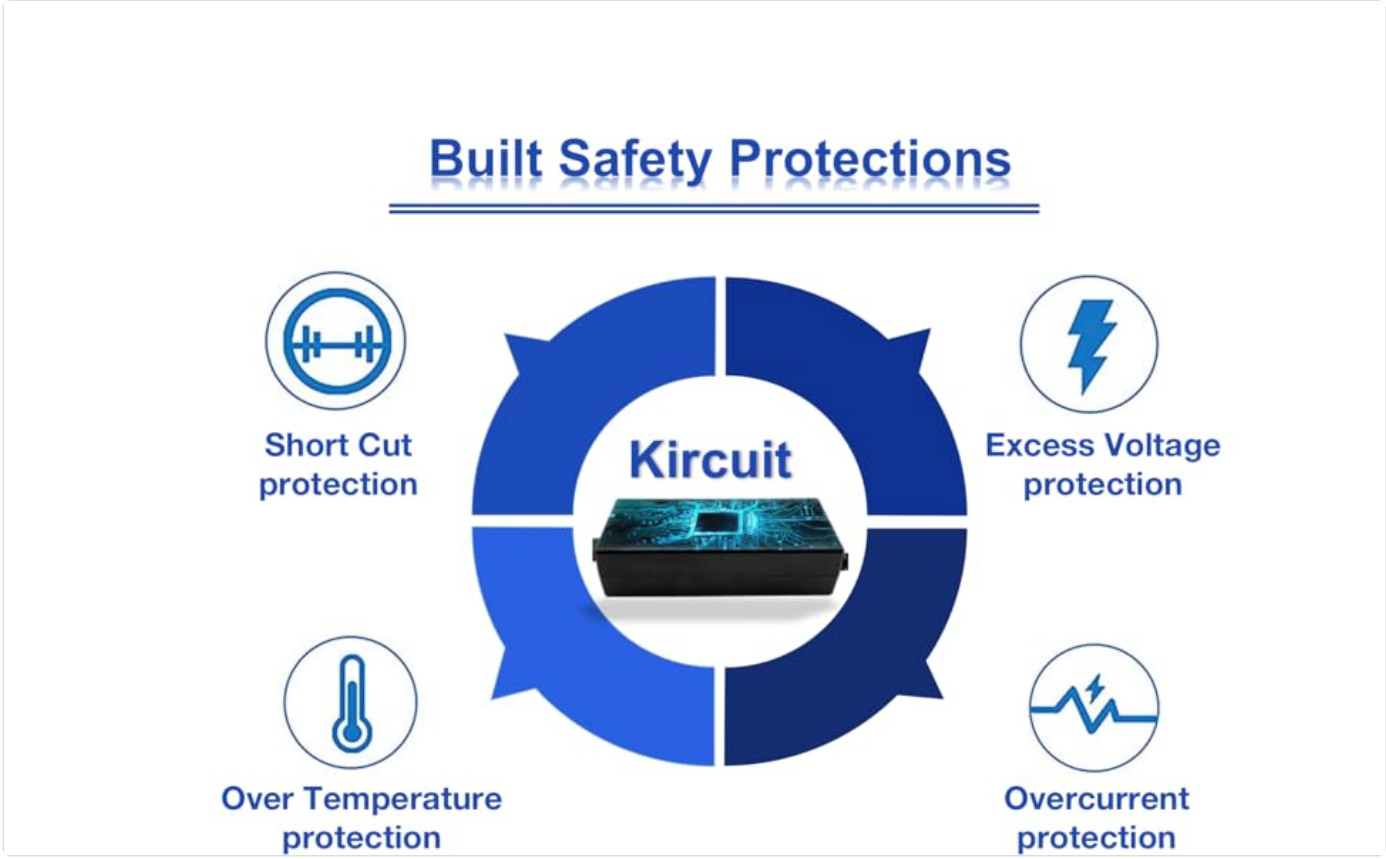

This image illustrates the built-in safety protections of the Kircuit AC Adapter, including safeguards against short circuits, excess voltage, over temperature, and overcurrent, ensuring safe operation.

3. Package Contents

Verify that all items are present in your package:

- 1 x Kircuit AC Adapter for Roland R-70 Drum Machine Charger



A Kircuit AC Adapter, featuring a black rectangular body with a standard US plug and an attached power cord terminating in a barrel

connector.

4. Setup

Follow these steps to set up your Kircuit AC Adapter:

1. **Verify Compatibility:** Before connecting, ensure your Roland R-70 Drum Machine Charger requires the specific voltage and amperage output by this Kircuit AC Adapter. Refer to your device's specifications.
2. **Connect to Device:** Insert the barrel connector of the AC adapter firmly into the power input port of your Roland R-70 Drum Machine Charger.
3. **Connect to Power Outlet:** Plug the AC adapter's wall plug into a standard 100V-240V AC electrical outlet.
4. **Power On:** Once connected, your device should receive power. If your device has a power indicator, confirm it illuminates.



The Kircuit AC Adapter is shown plugged into a power strip, demonstrating a typical setup for connecting to a power source.

5. Operating Instructions


The Kircuit AC Adapter operates automatically once connected to a power source and a compatible device. It provides a stable power supply for continuous operation or charging.

- **Continuous Power:** The adapter is designed for continuous use, providing power to your Roland R-70 Drum Machine Charger as long as it is plugged in.
- **Charging:** If your device has a charging function, the adapter will facilitate charging when connected.
- **Disconnection:** To disconnect, first unplug the adapter from the wall outlet, then disconnect the barrel connector from your device.

6. Maintenance

Proper maintenance ensures the longevity and safe operation of your AC adapter:

- **Cleaning:** Use a soft, dry cloth to clean the adapter. Do not use liquid cleaners or aerosol sprays.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable.
- **Cable Care:** Regularly inspect the power cord for any signs of damage, such as fraying or cuts. Do not use the adapter if the cord is damaged.

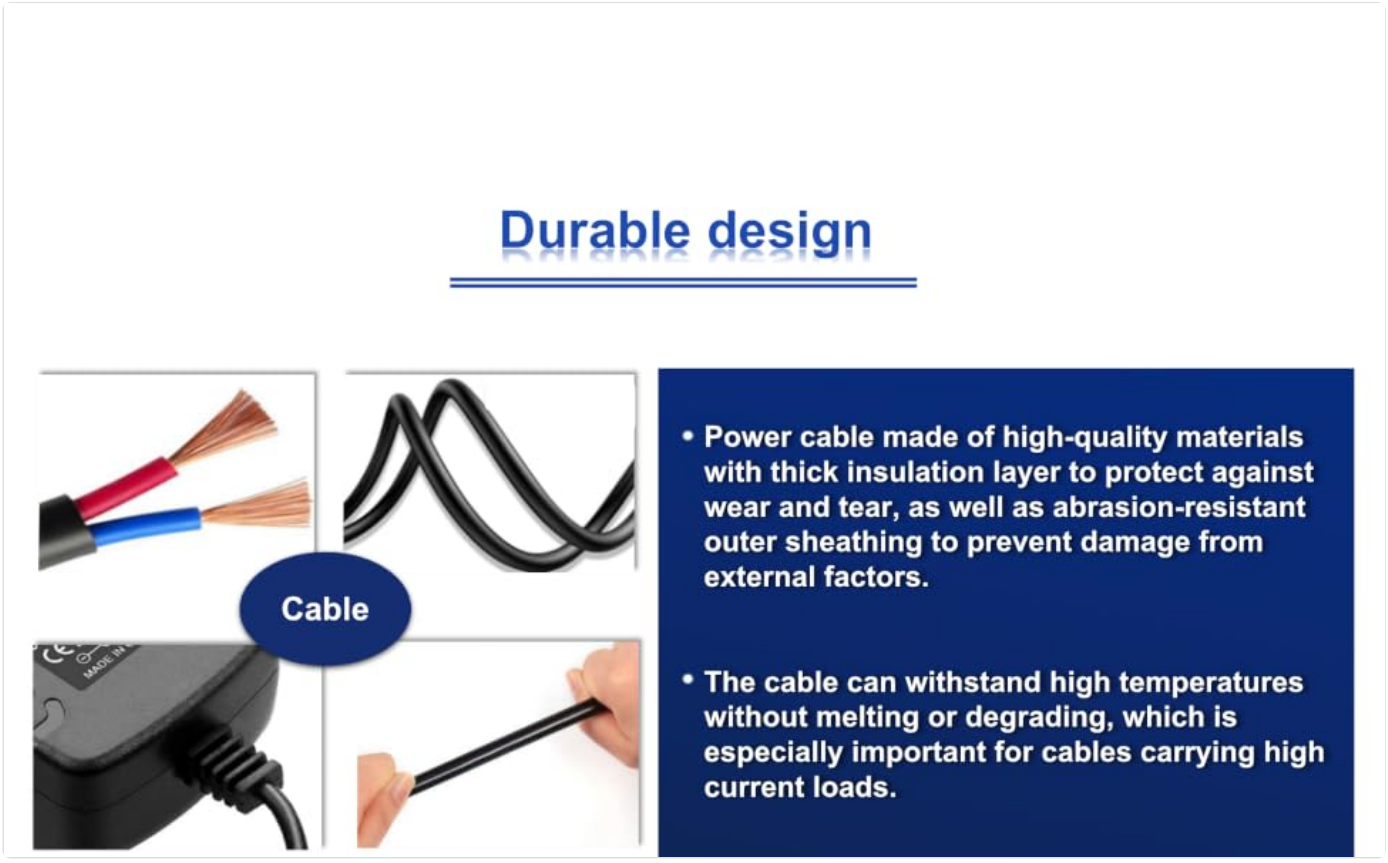

This image highlights the durable construction of the adapter's power cable, emphasizing its high-quality materials, thick insulation, and resistance to wear, abrasion, and high temperatures.

7. Troubleshooting

If you encounter issues with your Kircuit AC Adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
No power to device	Adapter not plugged in; faulty outlet; incorrect connection; device issue.	Ensure adapter is securely plugged into a working outlet. Check device connection. Test outlet with another appliance.
Adapter gets hot	Normal operation under load; poor ventilation; overloaded circuit.	Slight warmth is normal. Ensure adequate ventilation around the adapter. Disconnect if excessively hot and contact support.
Device not charging/powering consistently	Loose connection; incompatible device; damaged cable.	Check all connections. Verify device compatibility. Inspect cable for damage.

8. Specifications

Feature	Detail
Brand	Kircuit
Input Voltage	100V-240V AC
Input Frequency	50/60Hz 0.3A
Connector Type	Barrel Connector
Compatible Devices	Roland R-70 Drum Machine Charger (and other compatible devices)
Special Features	Portable, Travel-friendly, Built-in Dynamic IC, Charger IC & Power fuse for rapid charging and over charge protection.
Item Weight	8 ounces

9. Warranty and Support

Kircuit products are designed for reliability and performance. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims.
For technical support or inquiries, please contact your retailer or the manufacturer directly. Refer to the product packaging or the seller's information on the purchase platform for contact details.
This product is tested and confirmed to be in great working condition, ensuring quality and reliability.

© 2024 Kircuit. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B081SG1PDS

More documents and user manuals: **https://manuals.plus/**