Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

SUNVIVI OUTDOOR ZER

SUNVIVI OUTDOOR 22-Quart Electric Roaster Oven Instruction Manual

Model: ZER
Brand: SUNVIVI OUTDOOR

1. Product Overview

The SUNVIVI OUTDOOR 22-Quart Electric Roaster Oven is a versatile kitchen appliance designed for roasting, baking, and boiling. Its large capacity makes it ideal for preparing meals for holidays, parties, and family gatherings. Key features include a self-basting lid, multiple temperature settings, and a convenient defrost/warm function.

- **Large Capacity and Portable:** High dome cover design. 22 Quart Electric Roaster Oven is perfect for baking, roasting, or boiling on holiday or at a party. Convenient for indoor gatherings and courtyard BBQ!
- **Heat Preservation:** Do not worry about dissipating heat with cooked food. Turn the button to “KEEP WARM” before the arrival of friends or family. The food in “KEEP WARM” is exactly same as it baked few minutes ago.
- **Multiple Temperature Settings:** According to different preferences and requirements, choose the appropriate temperature. More convenient to make food suitable for most people's taste. Raise or lower the temperature as needed.
- **Easy to Clean:** Contains a removable steel grill and pan. After cooking, baking or roasting, it is easy to clean out. The next time you use it, it will be as clean as ever.
- **Cold-touch Handle Design:** There is a cold-touch handle, which prevent your hand from being burnt, on the lid of the electric oven. With this insulated handle you can safely uncover the electric oven when you finish baking and cooking.



Figure 1.1: The SUNVIVI OUTDOOR 22-Quart Electric Roaster Oven, showcasing its main components and control knob.

2. Important Safety Information

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always place the roaster oven on a stable, heat-resistant surface. Ensure adequate ventilation around the unit.
- Do not touch hot surfaces. Use oven mitts or the cold-touch handles when handling the lid, removable pan, or rack.
- To protect against electrical hazards, do not immerse the base unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- For the first use, it is normal for the unit to produce a slight burning smell and thin wisps of smoke as manufacturing oils burn off. This typically dissipates within 5-10 minutes. It is recommended to perform this initial burn-off in a well-ventilated area or outdoors.

3. Components and Parts

Your SUNVIVI OUTDOOR Electric Roaster Oven includes the following components:

1. **Transparent Viewable Window Lid:** Features a cold-touch handle and allows monitoring of cooking progress.
2. **Removable Roasting Rack:** Designed to lift food for even cooking and easy removal.
3. **Removable Enamel-Coated Pan:** The main cooking vessel, easy to clean.
4. **22 QT Roaster Oven Base:** Contains the heating element and temperature controls.



Figure 3.1: Breakdown of the roaster oven's main components.

4. Setup

Before first use, follow these steps:

1. **Unpack:** Remove all packaging materials, stickers, and labels from the roaster oven.

2. **Initial Cleaning:** Wash the removable enamel-coated pan and roasting rack in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the roaster oven base with a damp cloth. Do not immerse the base in water.
3. **First Use Burn-Off:** Place the empty removable pan and roasting rack inside the roaster oven base. Place the lid on top. Plug the unit into a grounded electrical outlet. Turn the temperature knob to the highest setting (450°F) and let it operate for approximately 10-15 minutes in a well-ventilated area. This process burns off any residual manufacturing oils and is normal.
4. **Placement:** Position the roaster oven on a flat, stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.

5. Operating Instructions

The roaster oven offers various functions for diverse cooking needs.

Temperature Control

The temperature control knob allows you to select temperatures from 150°F to 450°F, as well as 'KEEP WARM' and 'DEFROST' settings.

Figure 5.1: Temperature control knob with various settings.

Cooking Functions

- **Roasting/Baking:** Place the removable pan with the roasting rack inside the oven base. Place your food (e.g., turkey, chicken, casseroles) on the rack or directly in the pan. Close the self-basting lid. Turn the temperature knob to your desired setting. The indicator light will illuminate when the heating element is active and turn off when the set temperature is reached.
- **Self-Basting Lid:** The unique design of the lid allows moisture to circulate, continuously basting your food for tender and juicy results, reducing the need for manual basting.
- **Defrost Function:** Use the 'DEFROST' setting to safely thaw frozen foods, such as a turkey, before cooking. This function provides a gentle, controlled temperature to ensure even thawing.
- **Keep Warm Function:** Once cooking is complete, turn the knob to 'KEEP WARM' to maintain the food's temperature without overcooking. This is ideal for serving or holding food until guests arrive.

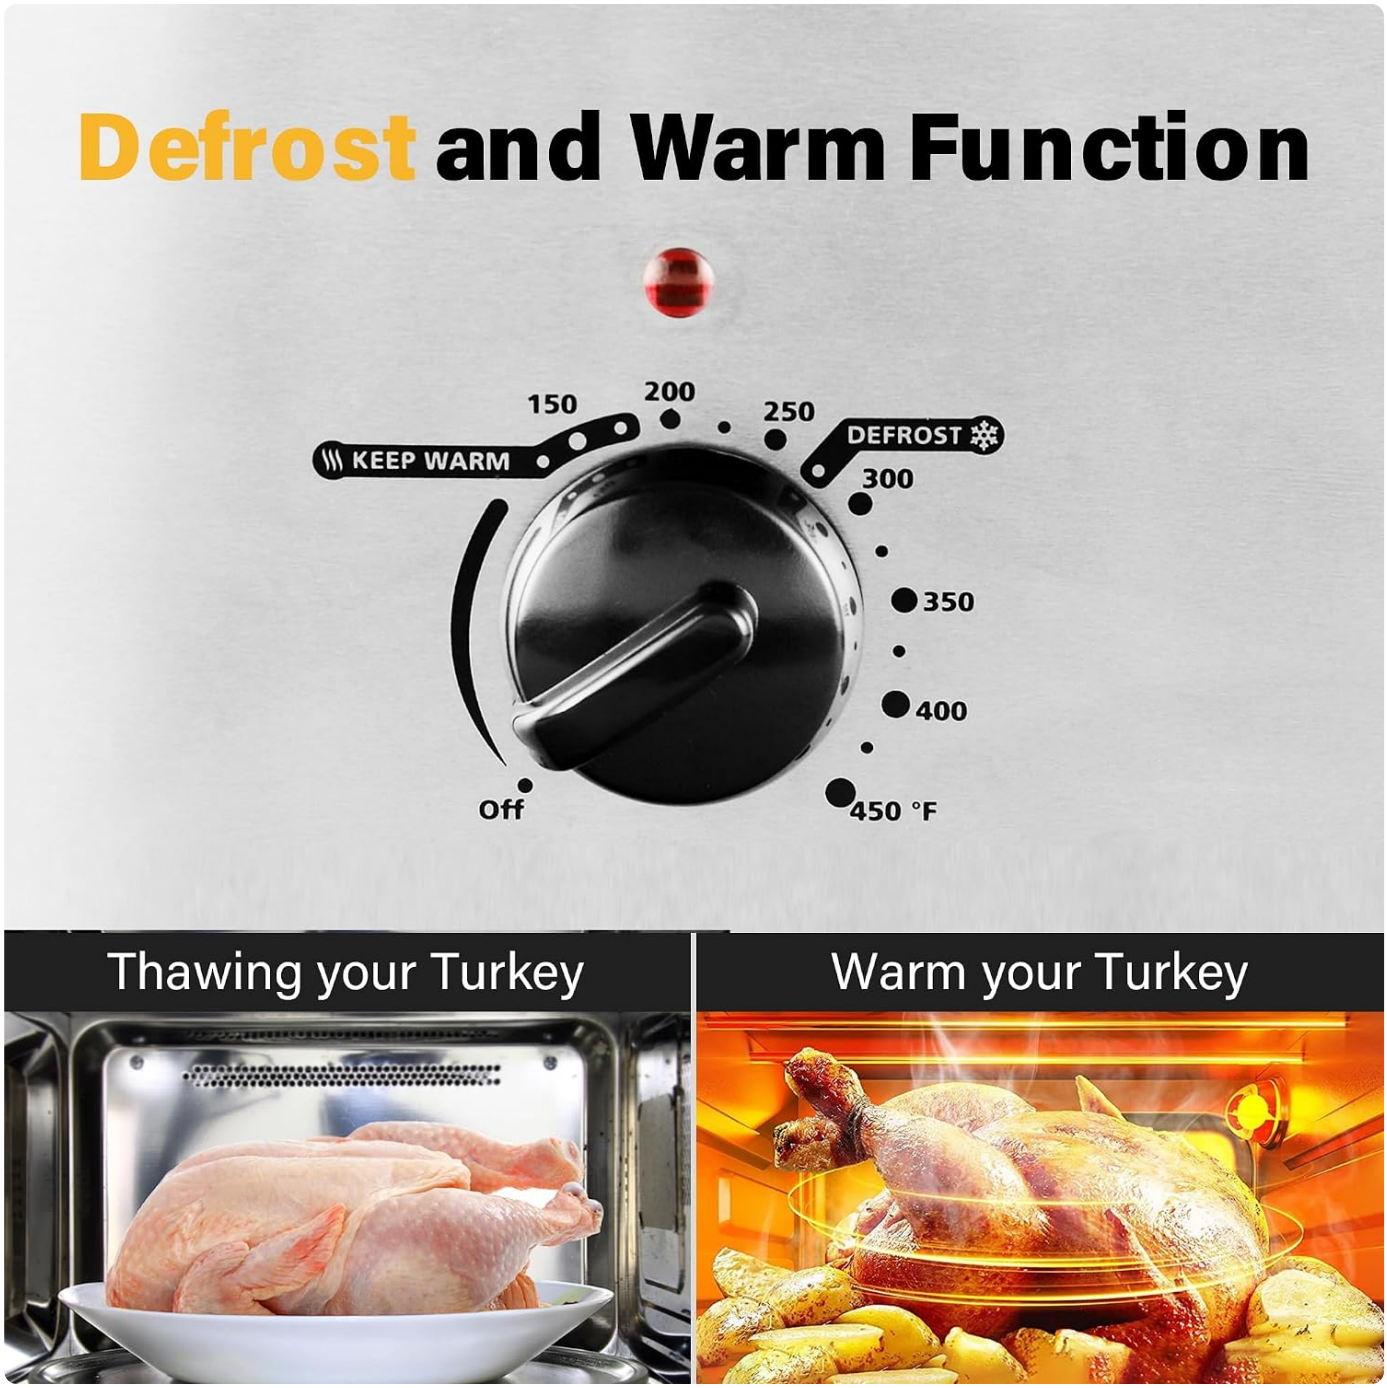


Figure 5.2: Illustration of the Defrost and Warm functions.

Video 5.1: Official product video demonstrating the SUNVIVI OUTDOOR Electric Roaster Oven in use, including preparation, cooking, and serving. This video highlights the ease of use and the appliance's ability to cook various dishes.

6. Maintenance and Cleaning

Regular cleaning ensures the longevity and optimal performance of your roaster oven.

1. **Always Unplug:** Before cleaning, ensure the roaster oven is unplugged from the power outlet and has completely cooled down.
2. **Remove Components:** Carefully remove the lid, roasting rack, and removable enamel-coated pan.
3. **Wash Removable Parts:** Wash the removable pan and roasting rack in warm, soapy water. For stubborn food residue, you may soak them before washing. These parts are designed for easy cleaning. Rinse thoroughly and dry

completely.

4. **Clean Exterior:** Wipe the exterior of the roaster oven base with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish. Never immerse the base unit in water or any other liquid.
5. **Clean Lid:** Wipe the lid with a damp cloth and dry thoroughly.
6. **Storage:** Once all parts are clean and dry, reassemble the roaster oven or store the components separately in a dry place.



Figure 6.1: The self-basting lid design aids in cooking and cleaning.

7. Troubleshooting

If you encounter issues with your roaster oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; power outlet malfunction; unit malfunction.	Ensure the unit is securely plugged into a working outlet. Test the outlet with another appliance. If still not working, contact customer support.
Burning smell or light smoke on first use.	Residual manufacturing oils burning off.	This is normal. Ensure adequate ventilation. The smell and smoke should dissipate within 5-10 minutes.
Food not cooking evenly.	Incorrect temperature setting; overcrowding the pan.	Verify the temperature setting. Ensure food is not packed too tightly, allowing for proper heat circulation. Use the roasting rack for optimal air flow.
Lid does not fit properly.	Lid is not aligned correctly.	Ensure the lid is seated firmly and evenly on the removable pan.

8. Specifications

Brand:
SUNVIVI OUTDOOR

Model Name:
ROASTER OVEN

Item Model Number:
ZER

Color:
Silver

Size:
22 QT

Product Dimensions:
15.5"D x 23.5"W x 12"H

Item Weight:
17 pounds

Control Type:
Knob

Temperature Range:
150-450 F Degrees Fahrenheit

Power Source:
AC

Door Material Type:
Stainless Steel

Included Components:
Lid

UPC:

631661991934

9. Warranty and Support

For warranty information or technical support, please contact SUNVIVI OUTDOOR customer service. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, please visit the official SUNVIVI OUTDOOR store or contact their support channels.

Online Store: SUNVIVI OUTDOOR Store on Amazon

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08228P54D

More documents and user manuals: **https://manuals.plus/**