Zienstar E68

Zienstar Wireless Large Print Keyboard and Mouse Combo User Manual

Model: E68

Introduction

Welcome to your Zienstar Wireless Large Print Keyboard and Mouse Combo. This manual provides detailed instructions for setting up, operating, and maintaining your new device. Designed for enhanced visibility and ease of use, this combo is ideal for individuals with low vision or those who prefer larger, clearer characters.



Image: The Zienstar Wireless Large Print Keyboard and Mouse Combo, showcasing its design for middle-aged and elderly users.

Package Contents

Please verify that all items are present in your package:

- 1 x Wireless Keyboard
- 1 x Wireless Mouse
- 1 x USB Receiver (located inside the mouse battery compartment)
- 1 x User Manual

Key Features

- **Large Print Keys:** High-contrast white keycaps with crisp, large black letters for improved visibility.
- **Wireless Connectivity:** Easy and stable 2.4G wireless connection using a single USB nano receiver for both keyboard and mouse.
- **Full-Size & Ultra-thin Keyboard:** 102 keys with dimensions of 14.5 x 5.8 x 0.2 inches, offering a complete typing

experience in a slim design.

- **Responsive Scissor-Key-Switch:** Provides smooth typing and sensitive response with low-profile keycaps.
- **Quiet Mouse Buttons:** Designed for a silent clicking experience.
- **Ergonomic Design:** Inclined angle on the keyboard and a comfortable mouse shape for extended use.
- **Wide Compatibility:** Works with Windows 10 / 8 / 7 / Vista / XP / 2000 / 98, Mac OSX, and macOS.



Image: A visual comparison highlighting the thicker and clearer font design of the Zienstar keyboard keys against standard keys.



Image: Close-up of the keyboard demonstrating the responsive scissor-switch keys for a smooth and silent typing experience.

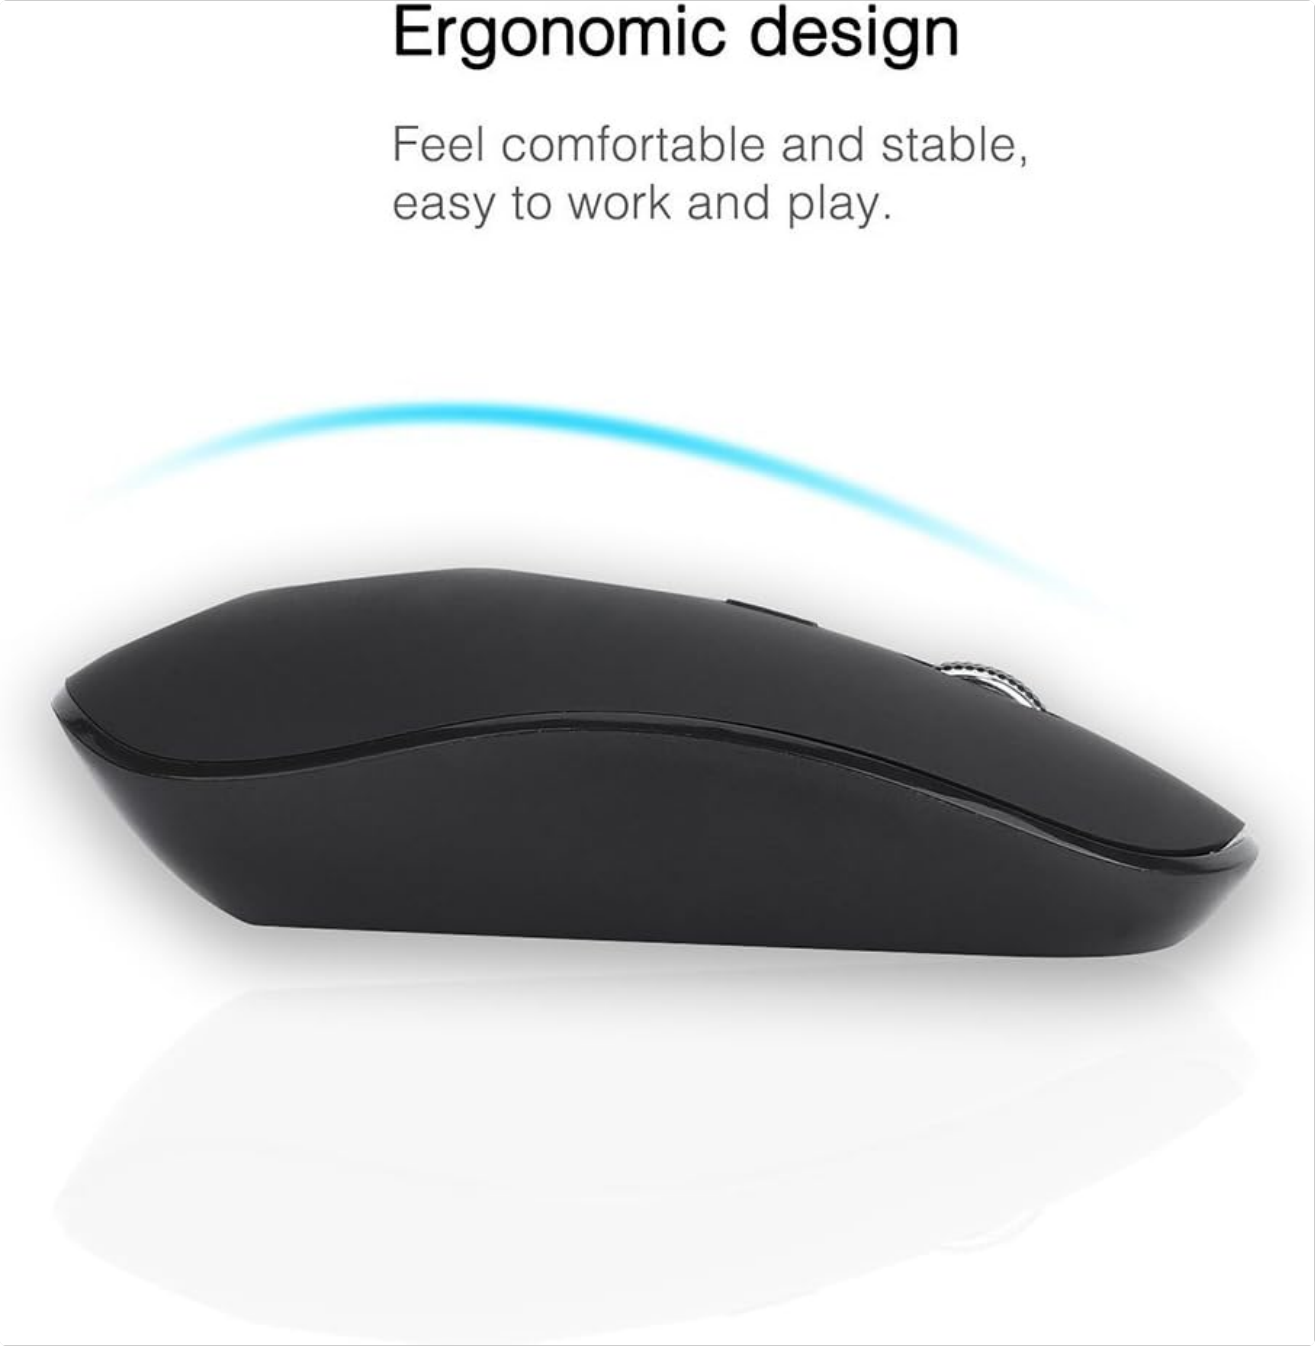


Image: Side view of the ergonomic mouse, designed for comfortable and stable use.

Setup Guide

1. Install Batteries

1. **For the Keyboard:** Open the battery compartment on the underside of the keyboard. Insert two (2) AAA batteries, ensuring correct polarity (+/-). Close the compartment.
2. **For the Mouse:** Open the battery compartment on the underside of the mouse. Insert one (1) AA battery, ensuring correct polarity (+/-). Close the compartment.

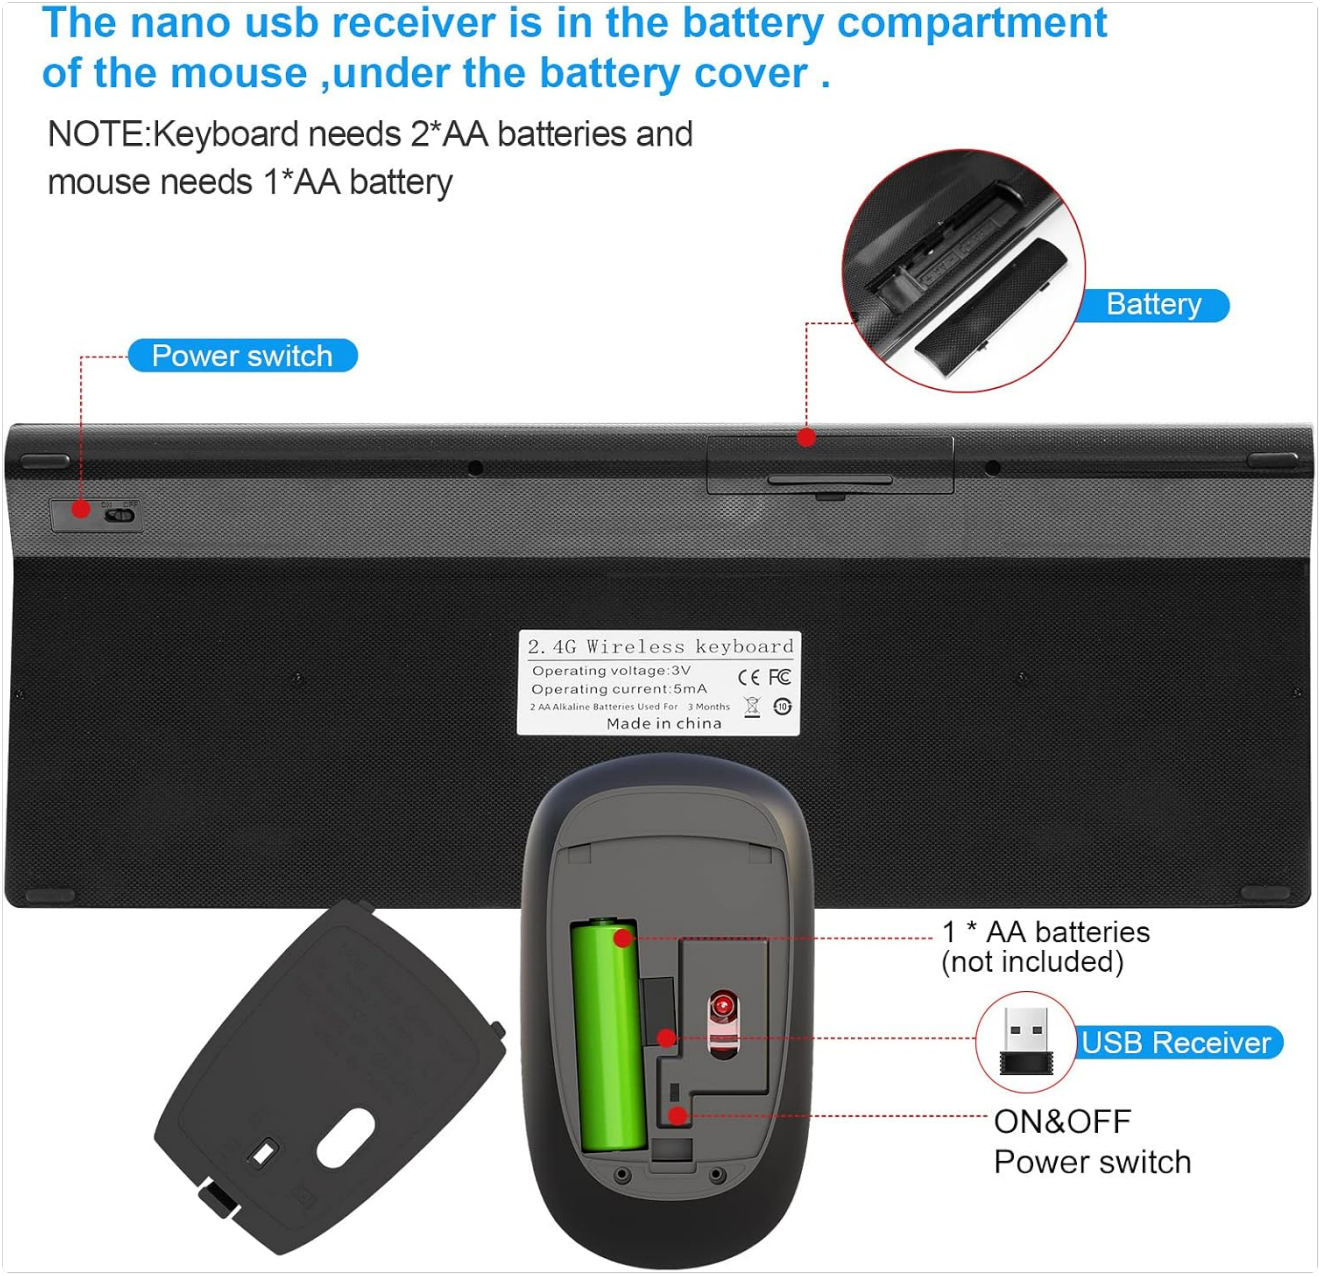


Image: Diagram showing the battery compartments for both the keyboard and mouse, and the location of the USB receiver inside the mouse.

2. Connect USB Receiver

3. **Locate the USB Receiver:** The nano USB receiver is conveniently stored inside the battery compartment of the mouse. Carefully remove it.
4. **Plug into Computer:** Insert the USB receiver into an available USB port on your computer.



Image: Diagram illustrating the 2.4G wireless connection between the keyboard, mouse, and the USB receiver plugged into a laptop.

3. Power On Devices

5. **Keyboard:** Locate the power switch on the keyboard (if present) and slide it to the 'ON' position.
6. **Mouse:** Locate the power switch on the underside of the mouse and slide it to the 'ON' position.

Your computer should automatically detect and install the necessary drivers. The keyboard and mouse are now ready for use.

Operating Instructions

Basic Usage

The keyboard and mouse function like standard input devices. Simply type on the keyboard and move/click the mouse as you normally would. The large print keys ensure clear visibility for comfortable use.



Image: Overview of the Zienstar large print keyboard layout, showing the clear, oversized characters on each key.

Multimedia Shortcuts

The keyboard includes multimedia function keys (F1-F12) that can be activated by pressing the **Fn** key simultaneously with the desired function key. These shortcuts are indicated by blue characters on the keys.

- **Fn + F1:** Media Player
- **Fn + F2:** Volume Down
- **Fn + F3:** Volume Up
- **Fn + F4:** Mute
- **Fn + F5:** Previous Track
- **Fn + F6:** Next Track
- **Fn + F7:** Play/Pause
- **Fn + F8:** Stop
- **Fn + F9:** Email
- **Fn + F10:** Calculator
- **Fn + F11:** Media
- **Fn + F12:** Favorites

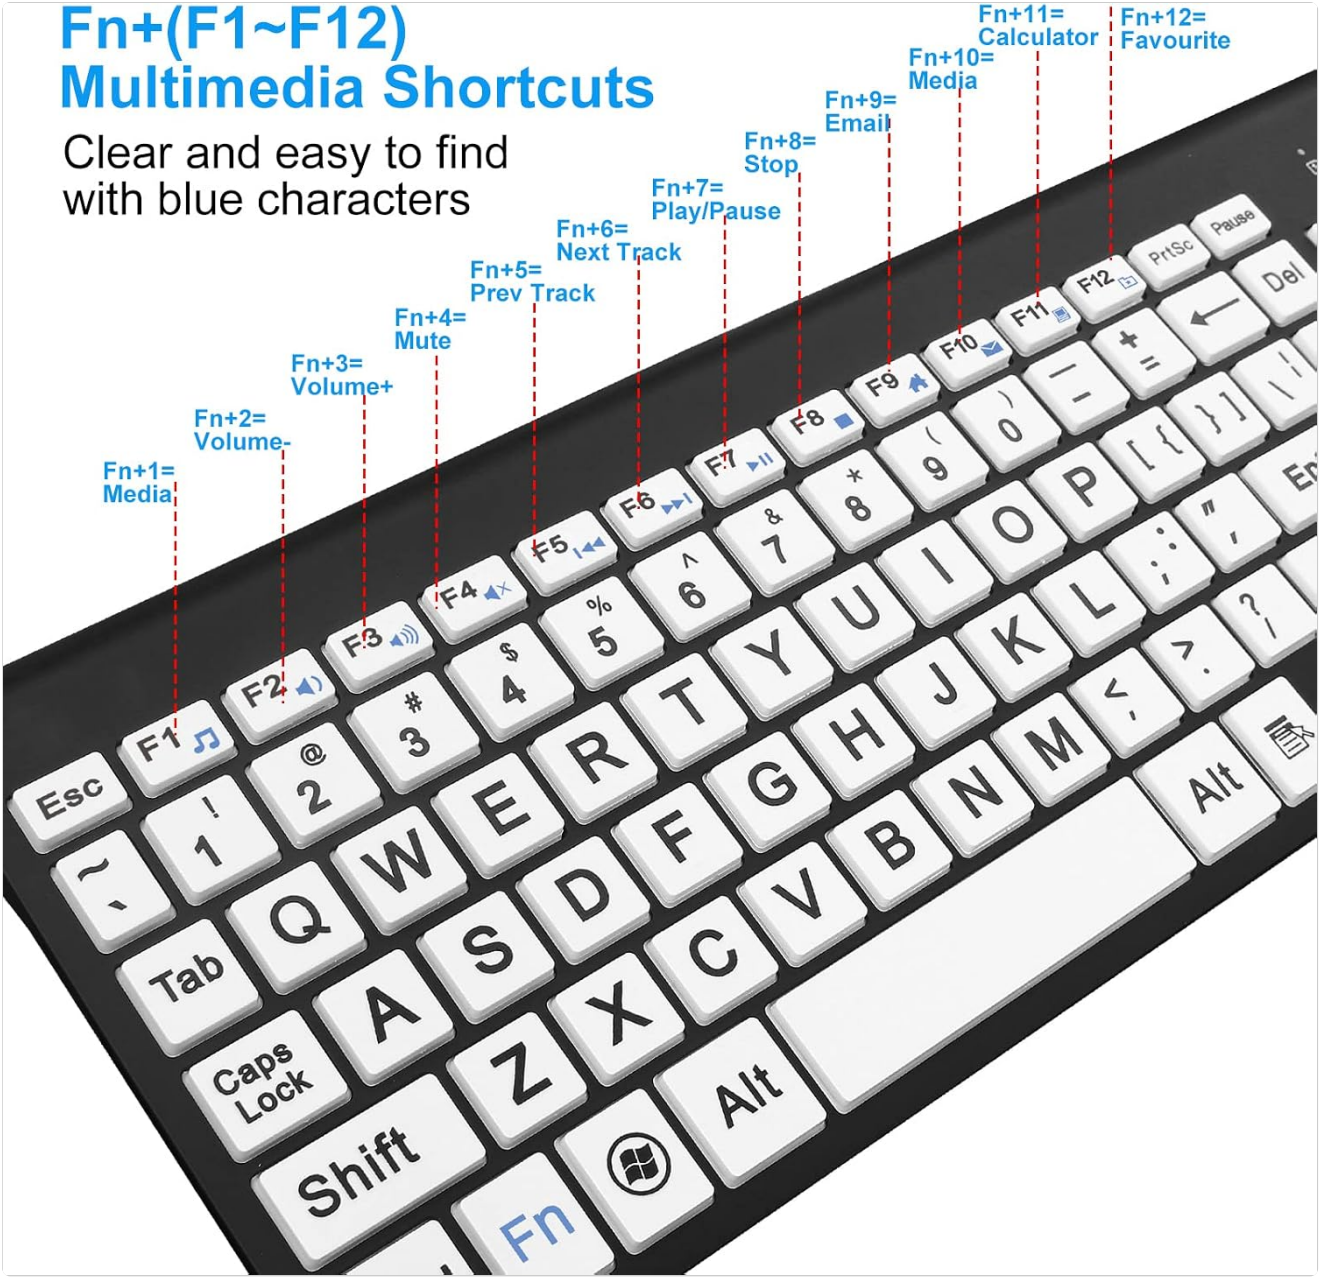


Image: Detailed diagram showing the multimedia shortcuts on the keyboard, activated using the Fn key.

Compatibility

This keyboard and mouse combo is compatible with a wide range of operating systems, including:

- Windows 10 / 8 / 7 / Vista / XP / 2000 / 98
- Mac OSX and macOS
- Android

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the keyboard and mouse. For stubborn dirt, a slightly damp cloth with mild soap can be used, ensuring no liquid enters the device.
- **Battery Replacement:** Replace batteries when performance degrades (e.g., lag, unresponsiveness). Always use new batteries of the specified type (2x AAA for keyboard, 1x AA for mouse).
- **Storage:** When not in use for extended periods, turn off both the keyboard and mouse using their respective power switches to conserve battery life.

Troubleshooting

- **Device not responding:**
  - Ensure the USB receiver is securely plugged into a working USB port on your computer.
  - Check if the keyboard and mouse are powered on using their respective ON/OFF switches.
  - Replace the batteries in both the keyboard and mouse with fresh ones.
  - Try plugging the USB receiver into a different USB port on your computer.
  - Restart your computer.
- **Lagging or intermittent connection:**
  - Ensure the devices are within the operating distance of 10 meters from the USB receiver.
  - Minimize interference from other wireless devices (e.g., Wi-Fi routers, other wireless peripherals).
  - Check and replace batteries if they are low.
- **Mouse not working, but keyboard is:**
  - Confirm the mouse's power switch is ON and its battery is fresh.
  - Remember, both devices use the **same USB receiver**. If the keyboard works, the receiver is likely functional. Focus troubleshooting on the mouse's power and battery.

Product Specifications

Brand	Zienstar
Model Number	E68
Connectivity Technology	Wireless (2.4G)
Operating Distance	Up to 10 meters
Keyboard Layout	QWERTY
Number of Keys	102
Keyboard Dimensions	368 x 143 x 26.3 mm (14.5 x 5.8 x 0.2 inches)
Keyboard Weight	0.428 kgs
Mouse Dimensions	116 x 66 x 35 mm
Mouse Weight	0.06 kgs
Keyboard Battery	2 x AAA batteries (not included)
Mouse Battery	1 x AA battery (not included)
Compatible Operating Systems	Windows, Mac OS, Android
Special Features	Ergonomic, Large font

Warranty and Support

Zienstar products are designed for reliability and performance. For any questions, technical support, or warranty inquiries, please refer to the contact information provided with your purchase or visit the official Zienstar website. Please retain your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question