TIMBELA M336

TIMBELA M336 Wooden Garden Shed Instruction Manual

Model: M336 | Brand: TIMBELA

1. Introduction

Thank you for choosing the TIMBELA M336 Wooden Garden Shed. This large outdoor storage solution is designed to provide ample space and protection for your garden tools, bicycles, toys, and other outdoor equipment. With its robust construction and thoughtful design, it can also serve as a charming summer house.
Key features include:

- **Spacious Interior:** 12 m² internal area with a ceiling height of 226 cm.
- **Durable Construction:** Made from high-quality 17mm thick Nordic spruce wood panels with shiplap interlocking construction.
- **Weather Protection:** Equipped with a durable roofing felt to keep contents dry.
- **Natural Light:** Features double doors and organic glass windows.
- **Security:** Includes a door bolt for added security.
- **European Craftsmanship:** Manufactured in the EU from natural, FSC® C110730 certified wood.



Image 1.1: The TIMBELA M336 Wooden Garden Shed in an outdoor environment, showcasing its double doors and windows.



Image 1.2: Overview of the shed's construction and features, including panel thickness and material quality.

2. Safety Information

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- **Assembly:** Always assemble with at least two people. Wear appropriate safety gear, including gloves and eye protection.
- **Foundation:** Ensure the shed is built on a level, stable, and solid foundation to prevent structural instability.
- **Tools:** Use the correct tools for each step of assembly.
- **Children:** Keep children away from the assembly area. Do not allow children to play inside or around the shed unsupervised.
- **Ventilation:** Ensure adequate ventilation if storing flammable materials or using power tools inside.
- **Weight Distribution:** Distribute stored items evenly to prevent tipping or structural strain.

- **Maintenance:** Regularly inspect the shed for any damage or wear. Address issues promptly to maintain structural integrity.

3. Setup and Assembly

The TIMBELA M336 shed requires assembly. While the instructions are detailed, careful attention is necessary due to the large number of components. We recommend organizing and numbering parts before beginning assembly.

1. **Site Preparation:** Choose a level, well-drained area for your shed. A concrete slab or a sturdy wooden base is recommended.
2. **Unpacking and Inspection:** Carefully unpack all components and check against the parts list provided in your package. Report any missing or damaged parts immediately.
3. **Organize Components:** Lay out all wooden panels, hardware, and roofing materials. Group similar items to streamline the assembly process.
4. **Base Assembly:** Construct the base frame according to the provided diagrams. Ensure it is square and level.
5. **Wall Panel Installation:** Begin installing the wall panels, interlocking them as per the shiplap construction design. Secure them to the base and to each other using the provided fasteners.
6. **Door and Window Installation:** Install the double doors and organic glass windows. Ensure they open and close smoothly and securely.
7. **Roof Structure Assembly:** Assemble the roof trusses and attach them to the top of the wall panels.
8. **Roofing Felt Application:** Apply the durable roofing felt to ensure a waterproof seal. Follow the instructions carefully for proper overlap and fastening.
9. **Final Checks:** Verify that all connections are secure, doors and windows function correctly, and the structure is stable.

Note: Assembly typically requires two people and can take approximately 10-14 hours, depending on experience. Some manual skill is beneficial.

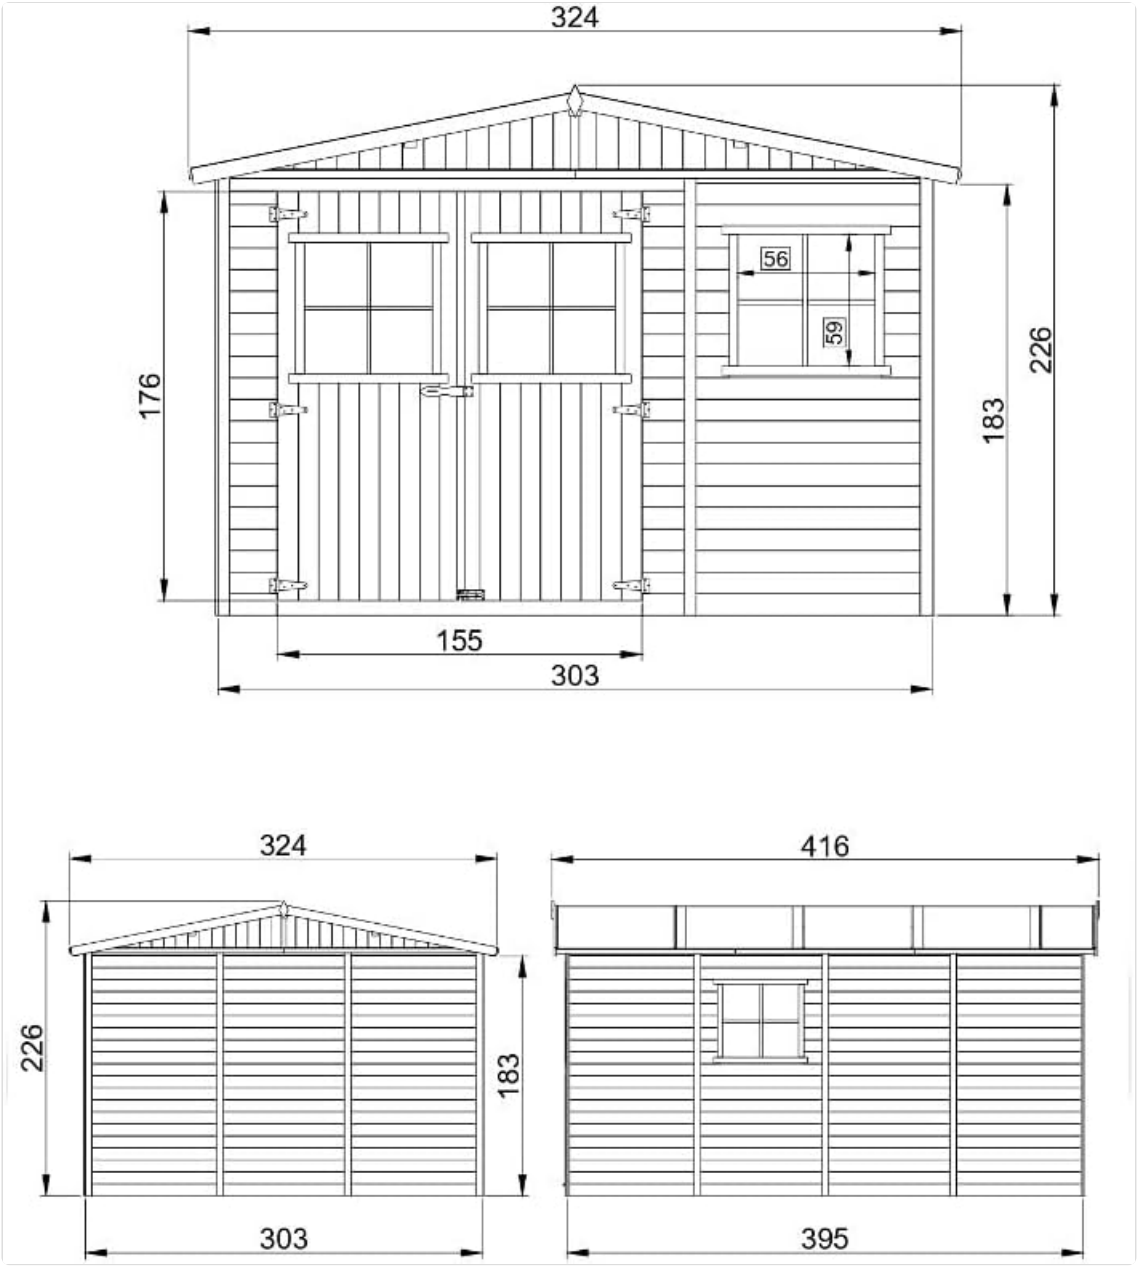


Image 3.1: Front elevation with key dimensions for assembly planning.

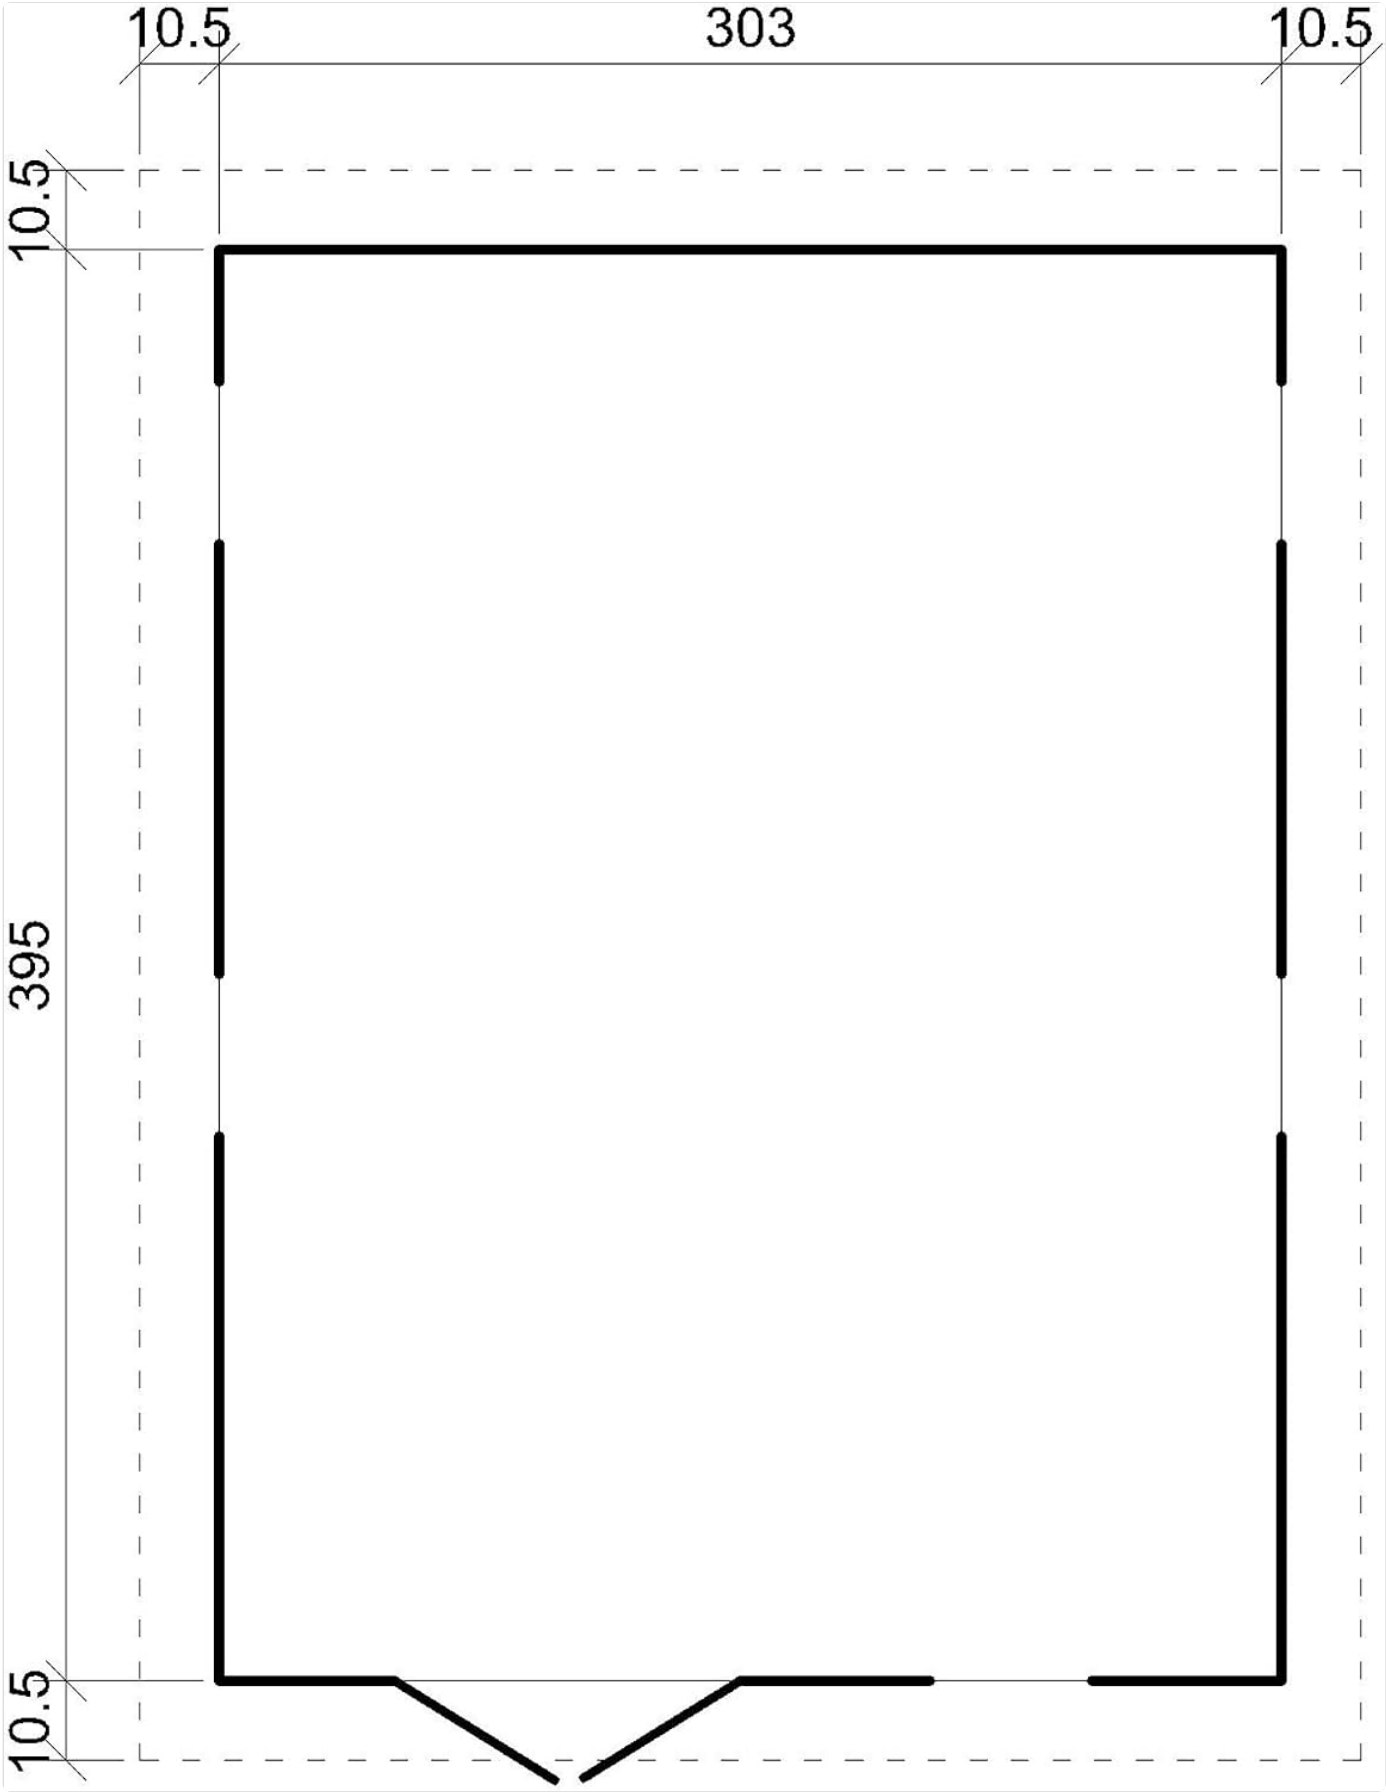


Image 3.2: Floor plan illustrating the shed's footprint and internal layout.

4. Operating Instructions

The TIMBELA M336 Wooden Garden Shed is designed for versatile outdoor storage and use.

- **Storage:** Utilize the 12 m² interior for storing garden tools, lawnmowers, bicycles, and other outdoor equipment. The generous height of 226 cm allows for storage of taller items.
- **Access:** The double doors provide wide access for moving larger items in and out. Ensure the doors are securely closed and bolted when not in use to protect contents.
- **Natural Light:** The organic glass windows allow natural light into the shed, making it suitable for tasks or as a summer house.
- **Ventilation:** Periodically open the doors and windows to allow for air circulation, especially if storing items that require ventilation or if the shed feels damp.

5. Maintenance

Proper maintenance will significantly extend the lifespan and appearance of your TIMBELA M336 Wooden Garden Shed.

- **Wood Treatment:** The shed is made from natural wood. To maximize its lifespan and protect it from weather and pests, treat the raw wood with a suitable wood preservative, paint, or stain of your choice immediately after assembly and periodically thereafter.
- **Roofing Felt:** Regularly inspect the roofing felt for any tears, cracks, or signs of wear. Repair or replace damaged sections promptly to maintain waterproofing.
- **Doors and Windows:** Lubricate hinges and latches as needed. Ensure doors and windows seal properly to prevent water ingress. Clean organic glass windows with a soft cloth and mild cleaner.
- **Cleaning:** Clean the exterior wood surfaces with a soft brush and mild detergent. Avoid high-pressure washers, which can damage the wood.
- **Foundation:** Check the foundation periodically for any shifts or settling that could affect the shed's stability.
- **Snow Load:** In areas with heavy snowfall, ensure snow is cleared from the roof to prevent excessive weight accumulation.

Image 5.1: Example of bituminous shingles, recommended for roof maintenance or upgrade.



Image 5.2: Wood treatment options to protect and enhance the shed's appearance.

6. Troubleshooting

This section addresses common issues you might encounter with your garden shed.

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Water leakage inside the shed	Damaged roofing felt, improper roof installation, gaps in wall panels, unsealed windows/doors.	Inspect roofing felt for damage and repair. Ensure all roof sections overlap correctly. Check wall panels for tight fit. Seal around windows and doors with appropriate sealant.
Doors are difficult to open/close	Misaligned hinges, swollen wood due to moisture, uneven foundation.	Adjust hinges. Apply wood treatment to prevent swelling. Check and level the shed's foundation.
Wood discoloration or rot	Lack of proper wood treatment, prolonged exposure to moisture.	Apply a suitable wood preservative or paint. Ensure good ventilation. Address any sources of excessive moisture.
Shed feels unstable or wobbly	Uneven foundation, loose fasteners, incomplete assembly.	Verify the foundation is level and stable. Tighten all fasteners. Review assembly instructions to ensure all steps were completed correctly.

7. Specifications

Feature	Detail
Model Number	M336
Brand	TIMBELA
Product Dimensions (L x W x H)	416 x 324 x 226 cm
Interior Surface Area	12 m²
Item Weight	444 Kilograms
Material	Natural Wood (Nordic Spruce)
Panel Thickness	17 mm
Door Width	154 cm
Door Height	176 cm
Room Height (Max)	226 cm
Water Resistance Level	Waterproof (with roofing felt)
UV Protection	Low to Medium
Assembly Required	Yes
Country of Origin	Lithuania
GTIN	653078925753

8. Warranty and Support

Your TIMBELA M336 Wooden Garden Shed comes with a**2-year manufacturer's warranty**.
Warranty Extension: If you use accessories provided by TIMBELA, the warranty for your shed can be extended from 2 years to **5 years**. Please refer to the product packaging or contact customer support for details on eligible accessories.



Image 8.1: Accessories that may qualify for warranty extension.

As the manufacturer, TIMBELA is committed to providing support for our products. We handle warranty claims, answer your questions, and assist in resolving any potential issues you may encounter.
For customer support, please contact the seller "TIMBELA&KO" directly through your purchase platform or refer to the contact information provided in your product packaging.

© 2024 TIMBELA. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question