Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Proscenic P8 PLUS

Proscenic P8 Plus Cordless Vacuum Cleaner User Manual

Model: P8 PLUS

1. Important Safety Instructions

Please read all instructions carefully before using this appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is for household use only. Do not use it outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and/or filters in place.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Turn off the appliance before making any adjustments, changing accessories, or storing the vacuum cleaner.
- Do not handle the charger or appliance with wet hands.
- If the charging cable is damaged, it must be replaced by the manufacturer or its service agent to avoid a hazard.

2. Product Overview

The Proscenic P8 Plus is a versatile cordless vacuum cleaner designed for efficient cleaning of various surfaces. It features a powerful motor, removable battery, and multi-stage filtration system.



Image: The Proscenic P8 Plus Cordless Vacuum Cleaner shown with its main unit, extension wand, floor brush, and various attachments like the crevice tool and dusting brush.

3. Package Contents

Carefully unpack all components and check against the list below. If any items are missing or damaged, please contact customer support.



Image: All components of the Proscenic P8 Plus vacuum cleaner, including the main unit, extension wand, floor brush, crevice tool, dusting brush, wall mount, charger, and user manual.

- Main Unit (Motor & Dustbin Assembly)
- Extension Wand
- Motorized Floor Brush
- Crevice Tool
- Dusting Brush
- Wall Mount Bracket
- Power Adapter/Charger
- Rechargeable Li-ion Battery (2200mAh)
- User Manual

4. Assembly

Follow these steps to assemble your Proscenic P8 Plus vacuum cleaner:

1. **Attach the Extension Wand:** Insert the top end of the extension wand into the main unit until it clicks securely into place.
2. **Connect the Floor Brush:** Attach the motorized floor brush to the bottom end of the extension wand, ensuring it clicks firmly.
3. **Install the Battery:** Slide the rechargeable battery into the slot at the bottom of the main unit until it locks. Ensure it is fully seated.

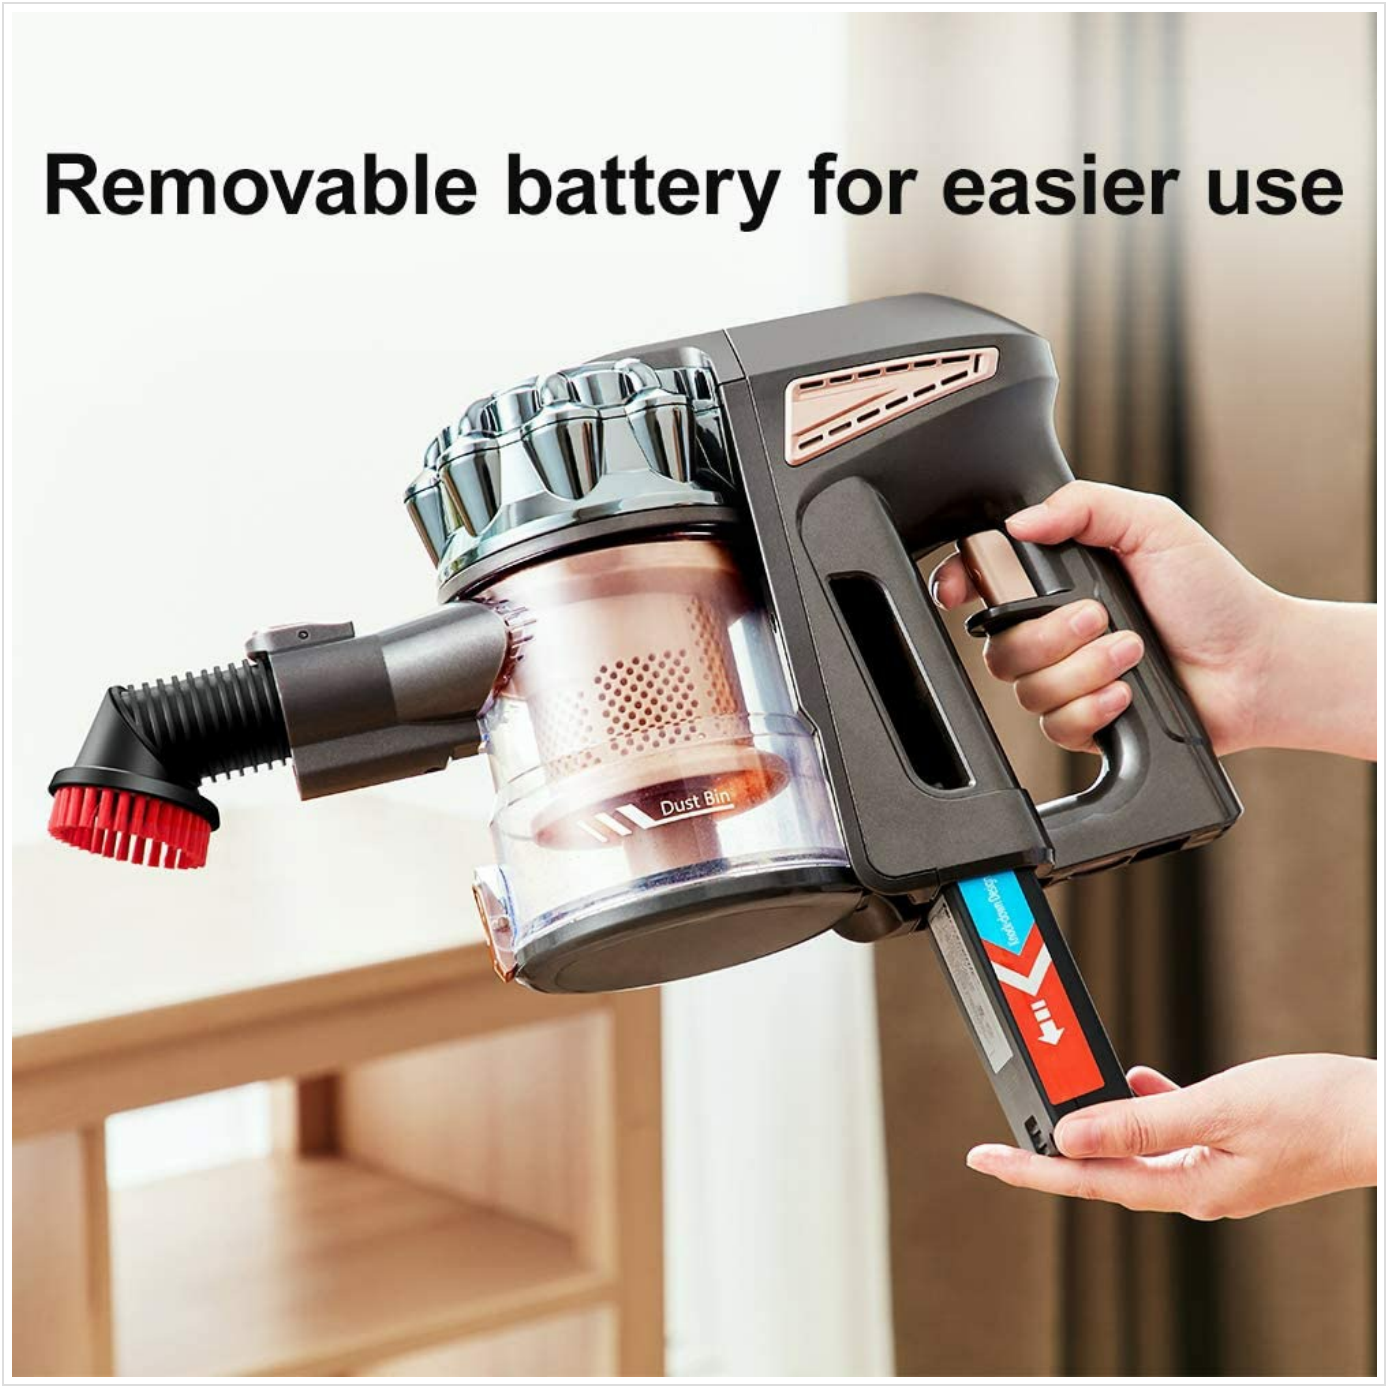


Image: A hand inserting the removable battery into the handheld vacuum unit, demonstrating the ease of battery installation.

Wall Mount Installation

The included wall mount allows for convenient storage and charging.

- Choose a suitable location near a power outlet.
- Mark the drilling points for the wall mount.
- Drill holes and insert wall plugs (if necessary).

- Secure the wall mount to the wall using screws.
- Hang the vacuum cleaner on the wall mount for storage and charging.

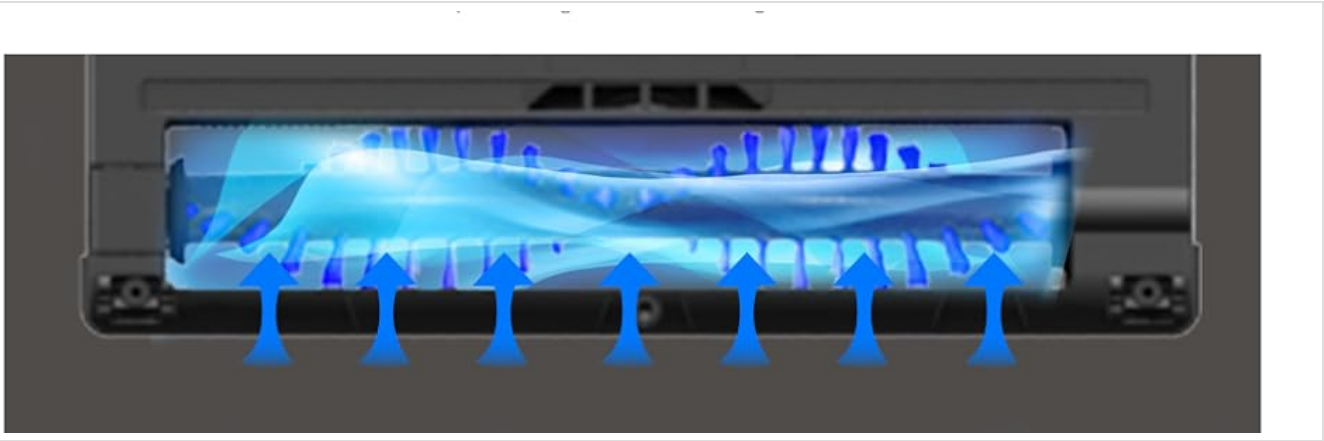


Image: The Proscenic P8 Plus vacuum cleaner conveniently stored on its wall mount, ready for use or charging.

5. Operation

Charging the Battery

Before first use, fully charge the battery. The battery can be charged while attached to the main unit or separately.

- Connect the power adapter to the charging port on the main unit or directly to the battery.
- Plug the adapter into a power outlet.
- The charging indicator lights will show the charging status. A full charge takes approximately 200 minutes.

Starting and Stopping

- Press the power button on the handle to turn the vacuum cleaner ON.
- Press the power button again to turn the vacuum cleaner OFF.

Adjusting Suction Power

The P8 Plus offers two suction power modes:

- **Normal Mode:** Provides up to 35 minutes of runtime, suitable for daily cleaning.
- **Powerful Mode:** Provides up to 25 minutes of runtime, ideal for stubborn dirt and deep cleaning.
- Press the mode button (if available, or power button for cycling) to switch between suction modes.



Image: An illustration showing the 2200mAh battery and its estimated runtime of 25-35 minutes depending on the power mode.

Using Attachments

The vacuum can be converted into a handheld unit for versatile cleaning.

- **Crevice Tool:** Ideal for narrow gaps, corners, and edges.
- **Dusting Brush:** Perfect for delicate surfaces, upholstery, and curtains.



Image: Multiple views of individuals using the Proscenic P8 Plus, demonstrating its versatility as a stick vacuum for floors and a handheld unit for furniture and high areas.



Image: An illustration depicting the vacuum's effectiveness in picking up dust, hairs, and crumbs from both carpet and hard floors.

6. Maintenance

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

Emptying the Dustbin

Empty the 1.2L dustbin regularly, especially when it reaches the MAX fill line.

1. Hold the main unit over a trash can.
2. Press the dustbin release button to open the bottom flap and empty the contents.



Image: A hand demonstrating how to easily empty the dustbin by pressing a button, releasing collected debris into a trash bin.

Cleaning the Filters

The HEPA filter and metal filter should be cleaned regularly to maintain suction power.

1. Twist and remove the dustbin from the main unit.
2. Remove the HEPA filter and metal filter from the dustbin.
3. Tap the filters gently to remove loose dust. For a deeper clean, rinse them under cold running water.
4. Ensure filters are completely dry (allow 24-48 hours) before reassembling to prevent damage to the motor.



Image: Hands washing the detachable dustbin and internal filter components under running water, illustrating the washable design for thorough cleaning.

Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris.

- Turn off the vacuum and detach the floor brush.
- Use scissors or a cleaning tool to cut and remove any tangled hair or fibers from the brush roll.
- Ensure the brush roll spins freely before reattaching.

7. Troubleshooting

If you encounter issues with your Proscenic P8 Plus, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not installed correctly.	Charge the battery fully. Ensure the battery is securely clicked into place.
Weak suction power	Dustbin is full. Filters are clogged. Brush roll is tangled.	Empty the dustbin. Clean or replace the filters. Remove tangled hair from the brush roll.
Battery not charging	Power adapter not connected properly. Outlet has no power.	Ensure the power adapter is firmly plugged into the vacuum and the wall outlet. Test the outlet with another device.
Brush roll stops spinning	Brush roll is jammed by debris.	Turn off the vacuum and clear any obstructions from the brush roll.

8. Specifications

Feature	Specification
Model Name	P8 PLUS
Suction Power	17000 PA
Rated Power	180 Watts
Battery	Detachable 2200mAh Lithium-Ion
Runtime	Up to 35 minutes (Normal Mode), 25 minutes (Powerful Mode)
Charging Time	200 Minutes
Dustbin Capacity	1.2 Liters
Filter Type	HEPA Filter
Speed Modes	2
Form Factor	Handheld / Stick
Noise Level	75 dB
Product Dimensions	119L x 25.4W x 22H Centimeters
Color	Red

9. Warranty and Support

Proscenic is dedicated to providing quality products and services. For product information, repair, or service support, please contact our customer service.



Image: A map of India indicating Proscenic's expansion, with a prominent call to action to contact their toll-free number for product information and support.

Toll-Free Number: 1800 843 1008

For more information, you can visit the official Proscenic store on Amazon:Proscenic Store

© 2024 Proscenic. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B08314NJKL

More documents and user manuals: **https://manuals.plus/**