Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Blissun B0833TQZV6

Blissun 7.2 ft Portable Beach Umbrella with Sand Anchor - Instruction Manual

Model: B0833TQZV6

1. Introduction

Thank you for choosing the Blissun 7.2 ft Portable Beach Umbrella. This manual provides essential information for the safe and effective setup, operation, and maintenance of your new beach umbrella. Designed for convenience and durability, this umbrella features a heavy-duty sand anchor, a tilt pole, an air vent for stability, and UPF 50+ Oxford fabric for sun protection. Please read these instructions carefully before use and retain them for future reference.

2. Safety Information

- Always ensure the sand anchor is deeply and securely installed in the sand. Failure to do so may result in the umbrella becoming dislodged in windy conditions, potentially causing injury or damage.
- Do not use the umbrella in strong winds (e.g., exceeding 15-20 mph) or during thunderstorms. High winds can cause the umbrella to become airborne.
- While the canopy offers UPF 50+ sun protection, prolonged exposure to direct sunlight should still be avoided. Always use appropriate sunscreen and seek additional shade when necessary.
- Keep children and pets away from moving parts during assembly, disassembly, and adjustment to prevent pinching or other injuries.
- Do not hang heavy items on the umbrella frame.

3. Package Contents

Please verify that all the following components are included in your package:

- 1 x Umbrella Canopy (attached to upper pole)
- 1 x Lower Pole with Integrated Sand Anchor
- 1 x Carry Bag

4. Setup Instructions

Follow these steps to set up your Blissun Beach Umbrella:

1. **Remove from Carry Bag:** Take the umbrella and lower pole out of the carry bag.

2. **Assemble the Pole:** Connect the upper pole (with canopy) to the lower pole (with sand anchor). Ensure the connection is secure.
3. **Anchor into Sand:** Locate a suitable spot on the beach. Fold down the handles on the sand anchor. Use these handles to twist the lower pole clockwise, screwing the sand anchor deeply into the sand. Continue twisting until the anchor is firmly embedded and stable. Pack additional sand around the base if needed for extra stability.
4. **Open the Canopy:** Once the pole is securely anchored, push the canopy upwards along the pole until it clicks into place, fully opening the umbrella.



Image: The heavy-duty sand anchor with integrated flip-down handles for secure installation.

Video: A demonstration of the Blissun 7.2 ft Portable Beach Umbrella setup, including pole assembly and canopy opening.

Video: A user demonstrating how to securely install the sand anchor into the beach sand.

5. Operating Instructions

Your Blissun Beach Umbrella is designed for ease of use and maximum comfort.

- **Adjusting Height:** The umbrella pole features an adjustable clip. To adjust the height, press the button on the clip, slide the upper pole to your desired height, and release the button to lock it in place.
- **Tilting the Canopy:** To adjust the angle of the canopy, locate the push-button tilt mechanism on the upper pole. Press the button and tilt the canopy to your preferred angle to block the sun as it moves throughout the day. Release the button to lock the tilt.
- **Air Vent Function:** The air vent located at the top of the canopy is designed to increase wind tolerance and stability. It allows air to pass through, reducing the likelihood of the umbrella being lifted by gusts of wind.
- **Closing the Umbrella:** To close, press the button on the canopy mechanism and gently pull the canopy downwards until it is fully collapsed.



Image: The push-button tilt mechanism allows for easy adjustment of the umbrella's angle.

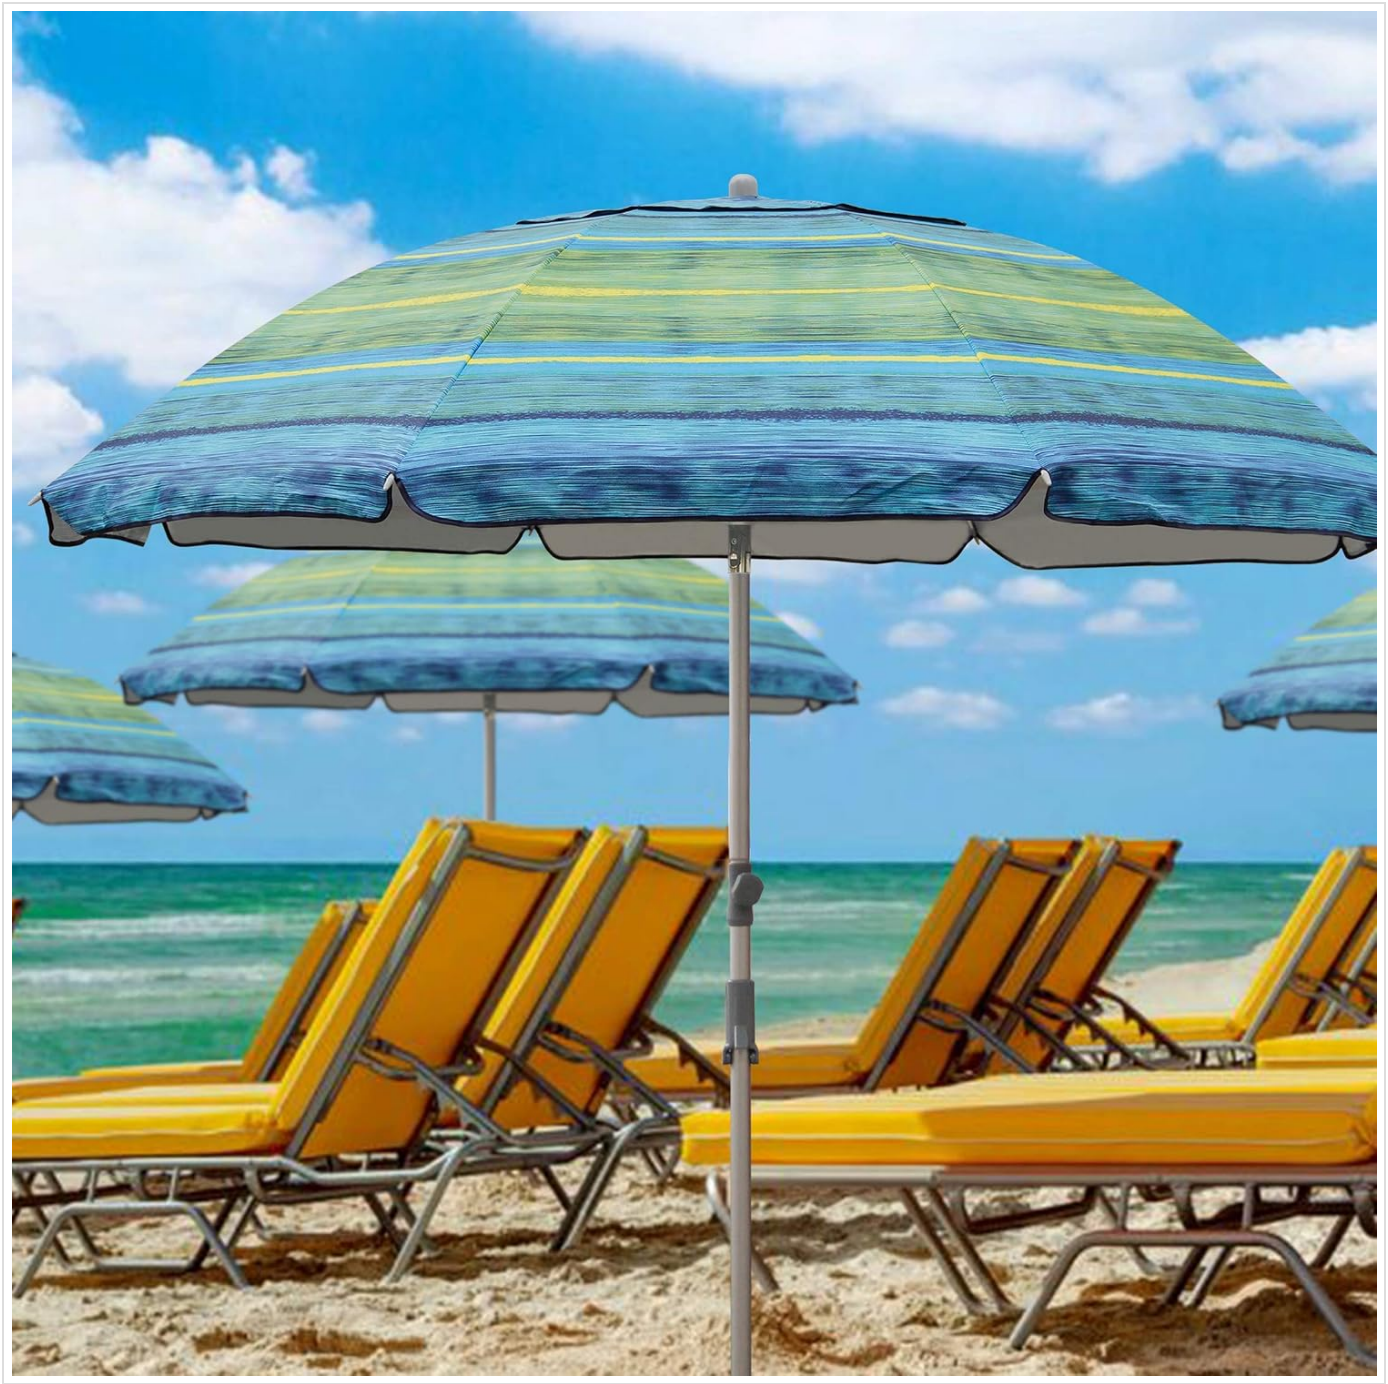


Image: The air vent design enhances wind stability and prevents the umbrella from overturning.

6. Maintenance

- **Cleaning:** The Oxford fabric canopy should be hand washed only. Use mild soap and water, then rinse thoroughly. Do not use harsh chemicals or abrasive cleaners.
- **Drying:** Allow the umbrella canopy to dry completely before folding and storing to prevent mildew and odors.
- **Storage:** When not in use, disassemble the umbrella and store it in its provided carry bag in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Regularly check all parts, especially the pole connections and sand anchor, for any signs of wear, damage, or corrosion.

7. Troubleshooting

- **Umbrella is unstable or blows away easily:**

- Ensure the sand anchor is screwed deeply into the sand.
- Pack additional wet sand around the base of the pole for increased stability.
- Avoid using the umbrella in high wind conditions.

- **Difficulty opening or closing the canopy:**
  - Check for any sand or debris obstructing the push-button mechanism. Clean if necessary.
  - Ensure the pole is not bent or damaged.

8. Specifications

Feature	Detail
Canopy Diameter	7.2 Inches
Overall Dimensions (W x H)	76.75"W x 80.75"H
Canopy Material	Oxford Fabric
Shaft Material	Aluminum, Steel
Frame Material	Fiberglass
Umbrella Tilt Mechanism	Auto Tilt (Push Button)
Special Features	UV Blocking (UPF 50+), Air Vent, Integrated Sand Anchor with Handles
Product Care Instructions	Hand Wash Only

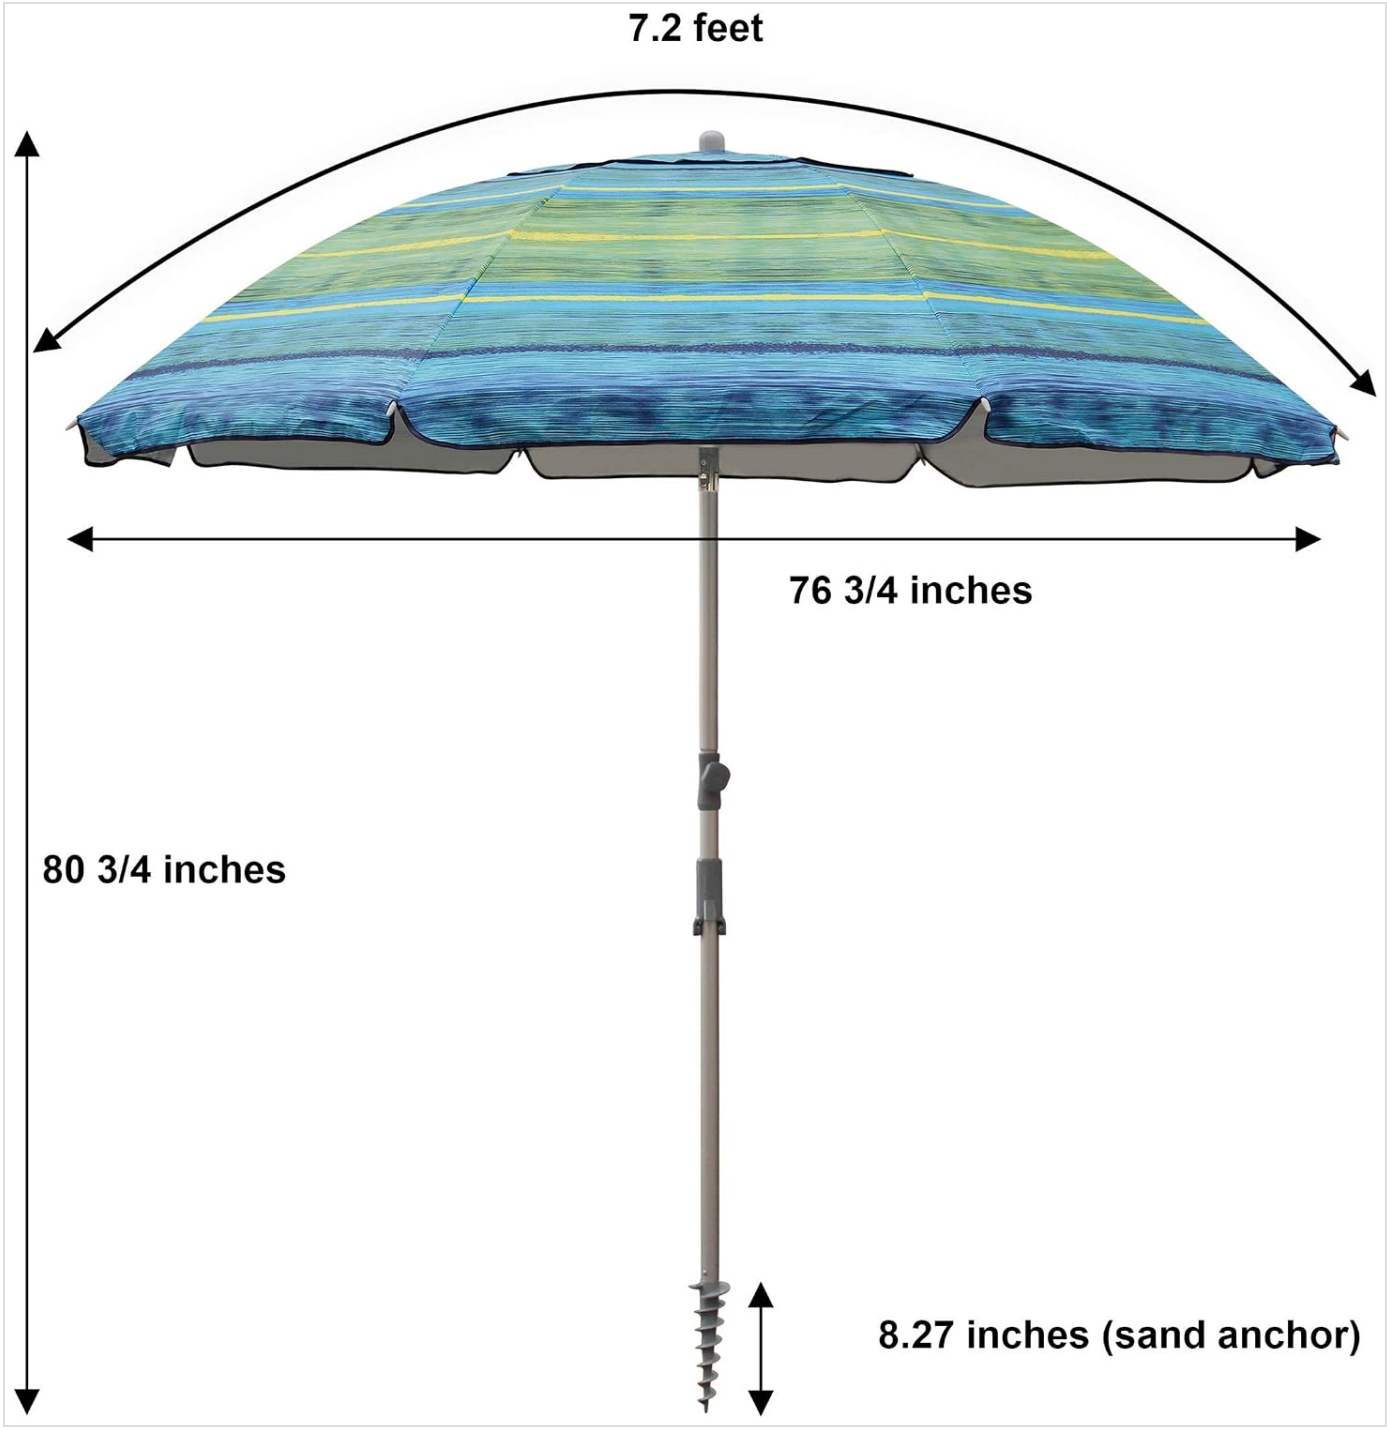


Image: Detailed dimensions of the umbrella, including canopy diameter and overall height.

9. Warranty & Support

For warranty information, product registration, or customer support, please refer to the official Blissun website or contact their customer service department directly. Keep your purchase receipt for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0833TQZV6

More documents and user manuals: **https://manuals.plus/**