Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ALLIMITY AMT-N2QAYB000643

User Manual for ALLIMITY N2QAYB000643 Replacement Remote Control

Brand: ALLIMITY

Model: N2QAYB000643 (AMT-N2QAYB000643)

1. Product Overview

This manual provides instructions for the ALLIMITY N2QAYB000643 Replacement Remote Control, designed to be compatible with Panasonic Compact Stereo Systems, including models SC-HC55, SCHC55, SC-HC55DB, and SCHC55DB.





Figure 1: Front view of the ALLIMITY N2QAYB000643 Replacement Remote Control. This image shows the layout of all buttons, including power, numerical keys, volume controls, playback controls, and menu navigation.

The remote control is an infrared (IR) device, meaning it communicates with your stereo system using infrared light. It requires no programming and is ready to use once batteries are installed.

2. Setup and Battery Installation

Before using your new remote control, you must install the batteries. The remote requires two AAA batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.


AA
AA



Figure 2: View of the open battery compartment, illustrating the correct orientation for inserting two AAA batteries.

Once batteries are installed, the remote control is ready for immediate use with compatible Panasonic Compact Stereo Systems.

3. Operating Instructions

This replacement remote control functions identically to the original N2QAYB000643 remote for Panasonic Compact Stereo Systems. No programming is required.


3.1 General Usage

- **Aiming the Remote:** Always point the remote control directly towards the infrared sensor on your Panasonic Compact Stereo System. Ensure there are no obstacles between the remote and the stereo system that could block the signal.
- **Distance:** For optimal performance, use the remote within a reasonable distance from the stereo system, typically within 20 feet (6 meters) and within the line of sight.

3.2 Key Functions

The remote control features standard buttons for controlling your Panasonic Compact Stereo System. Refer to your stereo system's original manual for specific functions of each button if needed.

- **Power Button (●):** Turns the stereo system on or off.
- **Numerical Buttons (0-9):** Used for direct track selection, radio station tuning, or inputting numbers.
- **Volume (+/-):** Adjusts the audio volume.
- **Mute:** Silences the audio output.
- **Playback Controls (Play/Pause, Stop, Skip, Fast Forward/Rewind):** Controls media playback for CD, iPod, or other connected sources.
- **Input Selection (iPod, CD, EXT-IN, RADIO):** Switches between different audio input sources.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections on the stereo system's display.
- **Menu Buttons (iPod MENU, PLAY MENU, RADIO MENU):** Access specific menus for different functions.
- **D.BASS / PRESET EQ:** Adjusts bass levels or cycles through equalizer presets.
- **DISPLAY -DIMMER:** Adjusts the brightness of the stereo system's display.
- **AUTO OFF:** Activates or deactivates the auto-off function.
- **OPEN/CLOSE SENSOR:** Controls the opening and closing mechanism for the CD tray or other compartments.

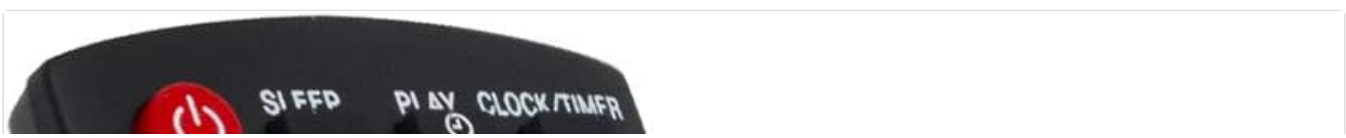


PROGRAM
1 2 3
4 5 6
7 8 9
VOL
DEL
0
10
MUTE
iPod
CD
EXT.IN
RADIO
SOUND
D.BASS
PRESET EQ
PLAY MENU
MENU
iPod MENU
RADIO MENU
OK
DISPLAY -DIMMER
AUTO OFF
ALBUM
OPEN/CLOSE SENSOR
iPod
CD
AUTO PRESET
N2QAYB000643

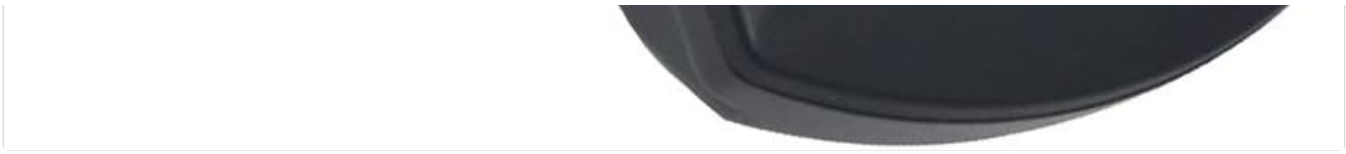


Figure 3: Angled view of the remote control, highlighting the ergonomic design and button placement for ease of use.

4. Maintenance

4.1 Cleaning

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- Avoid getting liquids inside the remote control.

4.2 Battery Replacement

Replace the batteries when the remote control's range decreases or it stops responding. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

5. Troubleshooting

If you experience issues with your remote control, try the following troubleshooting steps:

Problem	Possible Cause	Solution
Remote control is not working.	Batteries are dead or inserted incorrectly. Obstruction between remote and stereo system. Remote is too far from the stereo system. Infrared sensor on stereo system is blocked or faulty.	Replace batteries with new AAA batteries, ensuring correct polarity. Remove any objects blocking the line of sight to the stereo system's sensor. Move closer to the stereo system. Ensure the stereo system's sensor is clean and unobstructed. Consult your stereo system's manual for sensor location.

Problem	Possible Cause	Solution
Buttons are unresponsive or sticky.	Accumulated dirt or debris.	Clean the remote control as described in the Maintenance section.

If the issue persists after attempting these solutions, please refer to the Support section for further assistance.

6. Specifications

Feature	Detail
Model Number	N2QAYB000643 (AMT-N2QAYB000643)
Product Material	Plastic
Connectivity Technology	Infrared (IR)
Compatible Devices	Panasonic Compact Stereo System (SC-HC55, SCHC55, SC-HC55DB, SCHC55DB)
Batteries Required	2 x AAA batteries
Product Dimensions	7 x 2 x 0.7 inches (approx.)
Item Weight	2.46 ounces (approx.)
Special Feature	Ergonomic design

7. Warranty and Support

7.1 Warranty Information

Specific warranty details for this replacement remote control are typically provided by the seller at the time of purchase. Please refer to your purchase documentation or contact the seller directly for information regarding warranty coverage and terms.

7.2 Customer Support

For any questions, concerns, or issues not covered in this manual, please contact the seller, ALLIMITYDirect-US, through the platform where the product was purchased. They can provide further assistance and support.

If you cannot find your specific model number listed as compatible, the seller also offers assistance in identifying the correct remote control for your system.

© 2024 ALLIMITY. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0833W227G

More documents and user manuals: **https://manuals.plus/**