Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Blissun B0833WF64R

Blissun 7.2' Portable Beach Umbrella with Sand Anchor - Instruction Manual

Model: B0833WF64R

Safety Information Package Contents Setup Operation Maintenance Troubleshooting Specifications Support

Introduction

Thank you for choosing the Blissun 7.2' Portable Beach Umbrella. This manual provides essential information for the safe and effective use of your new beach umbrella. Please read these instructions carefully before assembly and use, and retain them for future reference.



The Blissun 7.2' Portable Beach Umbrella, featuring blue and white stripes, ready for use.

Safety Information

- Always ensure the sand anchor is securely twisted deep into the sand to prevent the umbrella from flying away in windy conditions.
- Do not use the umbrella in severe weather conditions, including strong winds, heavy rain, or thunderstorms.
- Keep children and pets away from the umbrella during assembly and disassembly to avoid injury.
- Periodically check all components for wear and tear. Do not use if any part is damaged.
- The umbrella provides UV protection but does not eliminate the need for sunscreen. Always apply appropriate sun protection.


Package Contents

Verify that all parts are present before assembly:

- Umbrella Canopy with Upper Pole
- Lower Pole with Integrated Sand Anchor and Flip-Down Handles
- Carry Bag

Setup Instructions

1. **Prepare the Sand Anchor:** Locate the lower pole with the integrated sand anchor. Extend the flip-down handles on the lower pole.
2. **Secure the Anchor:** Place the pointed end of the sand anchor into the sand. Use the flip-down handles to twist the pole clockwise, screwing the anchor deep into the sand until it is firmly secured. Ensure the anchor is buried sufficiently to provide stability.
3. **Attach Upper Pole:** Take the umbrella canopy with the upper pole. Insert the upper pole into the top opening of the secured lower pole. Ensure the poles click into place or are securely fastened with the provided locking mechanism.
4. **Open the Umbrella:** Gently push up the canopy until it locks into the open position. Ensure all ribs are fully extended.

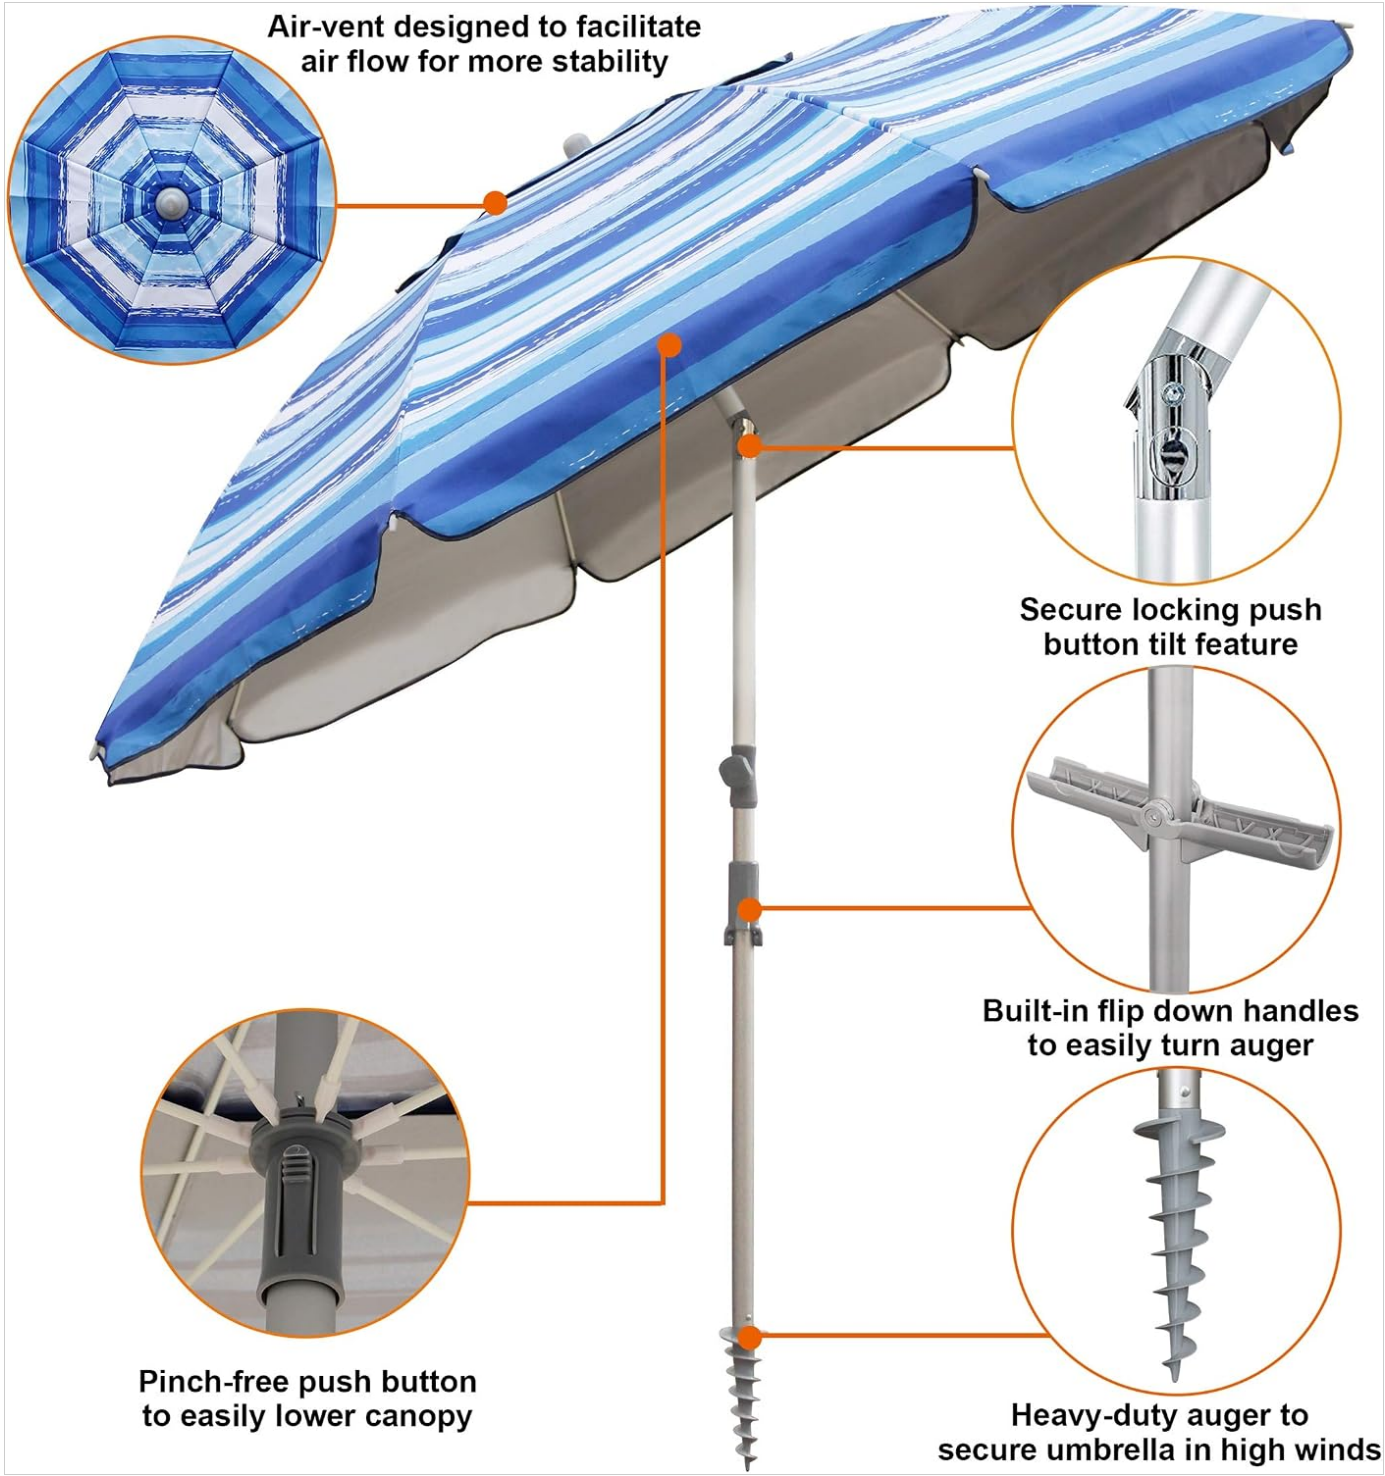

Key features of the Blissun beach umbrella, illustrating the air-vent, tilt mechanism, sand anchor with handles, and pinch-free button.

Setup Video Guide

Your browser does not support the video tag.

Official video demonstrating the setup and features of the Blissun 7.2' Portable Beach Umbrella.

Operation

Opening and Closing the Umbrella

- **To Open:** Push the canopy upwards along the pole until the pinch-free push button locks into place.
- **To Close:** Press the pinch-free push button located on the upper pole and gently pull the canopy downwards until it

is fully collapsed.

Using the Tilt Feature

The umbrella features a secure, locking push-button tilt mechanism, allowing you to adjust the canopy angle to block the sun as it moves throughout the day.

1. Locate the tilt button on the upper pole, just below the canopy.
2. Press the button and simultaneously tilt the canopy to your desired angle.
3. Release the button to lock the canopy in the tilted position.

Air Vent Functionality

The air vent located at the top of the umbrella canopy is designed to facilitate air flow. This feature increases the umbrella's wind tolerance and stability, reducing the likelihood of it being lifted by gusts of wind.



Top view of the umbrella canopy, highlighting the integrated air vent for enhanced wind stability.

Maintenance

- **Cleaning:** The Oxford fabric canopy should be hand washed only. Use mild soap and water to clean any dirt or stains. Rinse thoroughly and allow to air dry completely before storing. Do not machine wash or use harsh chemicals.
- **Storage:** When not in use, collapse the umbrella and store it in its included carry bag. Store in a cool, dry place away from direct sunlight and extreme temperatures to prolong its lifespan.
- **Inspection:** Regularly inspect the pole, ribs, and fabric for any signs of damage, rust, or wear. Address any issues promptly to ensure safe operation.

Troubleshooting

Problem	Possible Cause	Solution
Umbrella is unstable or blows away easily.	Sand anchor not sufficiently secured.	Ensure the sand anchor is twisted deep into the sand using the flip-down handles until it is very firm. Avoid use in high winds.
Canopy does not open or close smoothly.	Mechanism is stiff or obstructed.	Check for any sand or debris in the locking mechanism. Apply a silicone-based lubricant if necessary. Ensure the pinch-free button is fully depressed when closing.
Tilt feature does not lock.	Tilt button not fully engaged or mechanism is dirty.	Press the tilt button firmly. Clean any sand or debris from the tilt mechanism.

Specifications

Feature	Detail
Canopy Diameter	7.2 feet (7.2 inches in product data is likely a typo, assuming 7.2 feet based on '7.2' Beach Umbrella' title)
Material	Oxford fabric
UV Protection	UPF 50+ (blocks 99% of intensive ultraviolet rays)
Shaft Material	Aluminum, Steel
Ribs	8 Fiberglass support ribs
Special Features	Integrated Sand Anchor, Tilt Pole, Air Vent, Carry Bag
Product Weight	2.13 kg
Color	Blue & White

Warranty and Support

For any questions, concerns, or warranty claims regarding your Blissun Beach Umbrella, please contact the seller,

Kissavos llc, through your purchase platform. Please have your model number (B0833WF64R) and purchase date available when contacting support.

© 2026 Blissun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0833WF64R

More documents and user manuals: **https://manuals.plus/**