Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Garmin 010-02259-00

Garmin Dash Cam Tandem User Manual

Model: 010-02259-00

1. Product Overview

The Garmin Dash Cam Tandem is a compact, dual-lens dash camera designed to provide comprehensive video coverage both in front of and inside your vehicle. It features a front-facing lens that records in super HD 1440p and an interior-facing lens with 720p resolution and exclusive NightGlo technology for clear night vision. With built-in GPS, Wi-Fi connectivity, voice control, and automatic incident detection, this device ensures you capture important moments on the road.



Image: Front view of the Garmin Dash Cam Tandem, showcasing its compact design and dual lens setup.

2. What's in the Box

- Garmin Dash Cam Tandem

- microSD™ card
- Low-profile magnetic mount
- 4m power cable
- 1.5m USB cable
- Dual USB power adapter
- Documentation



Image: The Garmin Dash Cam Tandem displayed alongside its included accessories: the magnetic mount, power cable, USB cable, and dual USB power adapter.

3. Setup

3.1 Installing the Memory Card

1. Locate the microSD card slot on the side of the dash camera.
2. Insert the included microSD card into the slot until it clicks into place. Ensure the card is oriented correctly.

3.2 Mounting the Dash Cam

1. Clean the windshield thoroughly where you intend to mount the camera.
2. Attach the low-profile magnetic mount to the cleaned area of your windshield. The mount uses an adhesive backing.
3. Connect the dash cam to the magnetic mount. The strong magnet will hold it securely.
4. Adjust the camera angle to ensure a clear view of the road ahead and the vehicle's interior.



Image: A visual representation of the dual-lens capability, showing both interior and exterior recording perspectives from the dash cam.

3.3 Connecting to Power

1. Plug the 4m power cable into the dash cam's power port.
2. Insert the other end of the power cable into the dual USB power adapter.
3. Plug the dual USB power adapter into your vehicle's power outlet (cigarette lighter socket).
4. The dash cam will automatically power on and begin recording when your vehicle receives power.



Image: The power cable and dual USB power adapter, highlighting the convenient extra USB port for charging other devices.

4. Operating Instructions

4.1 Automatic Recording

Once powered on, the Garmin Dash Cam Tandem automatically begins continuous recording. The front lens captures 1440p video of the road, while the interior lens records 720p video of the cabin, utilizing NightGlo technology for low-light conditions.



Image: A close-up view of the front-facing lens of the Garmin Dash Cam Tandem, emphasizing its clarity and design.

4.2 Incident Detection

The camera features built-in incident detection. In the event of an impact or sudden braking, the device automatically saves video footage from before, during, and after the incident, protecting it from being overwritten.

4.3 Voice Control

Control your dash cam hands-free using voice commands. Supported languages include English, German, French, Spanish, Italian, and Swedish. For example, you can say "OK Garmin, save video" to manually save a recording.

4.4 Garmin Drive App

The Garmin Drive app (requires a compatible smartphone with GPS and Bluetooth Low Energy) allows you to:

- View and share recorded videos directly from your smartphone via Wi-Fi.
- Control and play back synchronized video from up to four dash cameras using the Dash Cam Auto Sync feature (additional dash cams sold separately).
- Adjust camera settings.

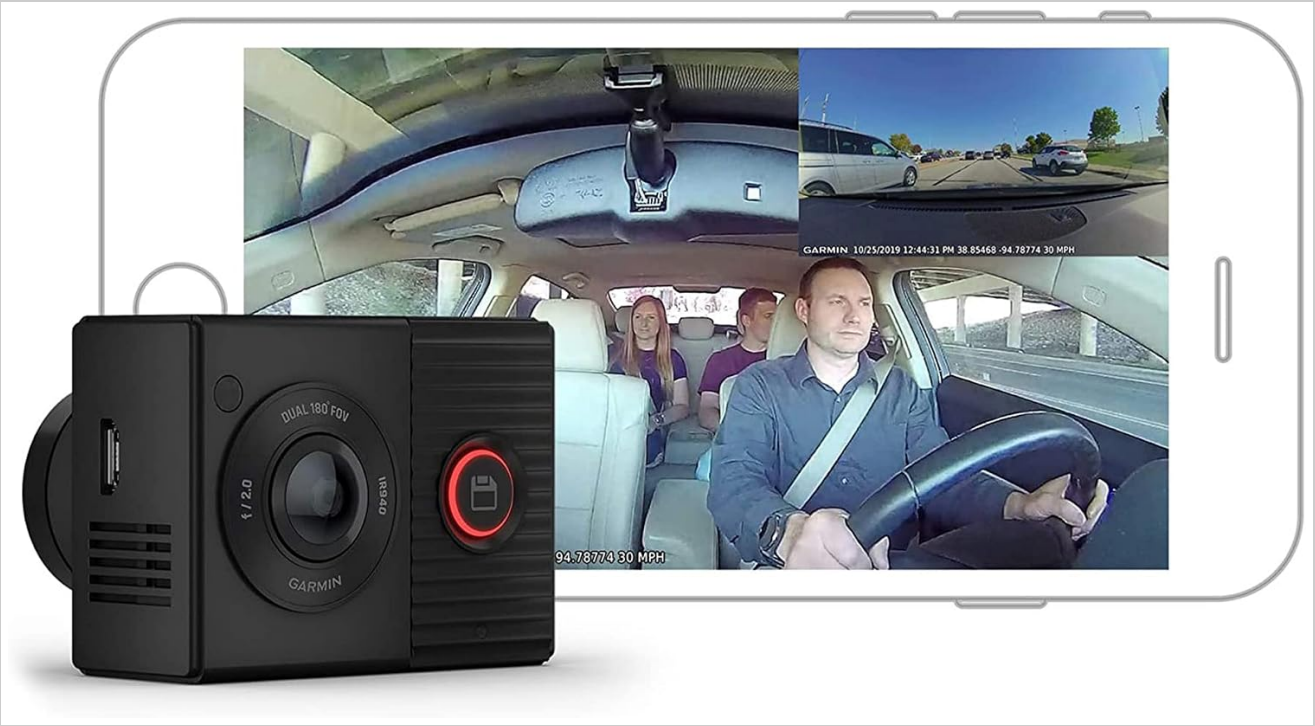


Image: The Garmin Dash Cam Tandem mounted in a car, with a smartphone displaying the Garmin Drive app interface showing both front and interior camera views.



Image: A close-up of the Garmin Drive app interface on a smartphone, demonstrating how users can select and trim video clips for playback.

4.5 Parking Mode

When properly configured (may require a separate cable, sold separately), the parking mode feature allows the dash cam to automatically record motion in front of and inside the vehicle even when the car is parked and turned off.

5. Maintenance

- **Cleaning:** Gently wipe the camera lenses with a soft, lint-free cloth. Avoid using abrasive cleaners or solvents.
- **MicroSD Card:** Periodically format the microSD card (via the Garmin Drive app or a computer) to maintain optimal recording performance and prevent data corruption. Replace the card if you experience frequent errors or recording issues.
- **Firmware Updates:** Keep your dash cam's software up to date by checking for firmware updates through the Garmin Drive app. Updates can improve performance and add new features.

6. Troubleshooting

6.1 Camera Not Powering On

- Ensure the power cable is securely connected to both the dash cam and the vehicle's power outlet.
- Verify that the vehicle's power outlet is functioning correctly.
- Try a different power source or USB port if available.

6.2 Recording Issues

- Check if the microSD card is inserted correctly and is not full.
- Format the microSD card.
- Ensure the camera's lenses are clean and unobstructed.

6.3 App Connectivity Problems

- Ensure Wi-Fi and Bluetooth are enabled on your smartphone.
- Restart both the dash cam and your smartphone.
- Make sure the Garmin Drive app is updated to the latest version.
- If issues persist, try forgetting the device in your phone's Bluetooth/Wi-Fi settings and re-pairing.

For more detailed troubleshooting, please refer to the official Garmin support resources or the complete user manual.

7. Specifications

Feature	Detail
Model Number	010-02259-00
Product Dimensions	0.93 x 2.17 x 1.61 inches
Item Weight	2.24 ounces
Front Camera Resolution	1440p Garmin Clarity HDR
Interior Camera Resolution	720p with NightGlo Technology
Field of View	Two 180-degree lenses
Connectivity	Bluetooth, Wi-Fi
Special Features	Built-in GPS and Galileo Sensors, Dash Cam Auto Sync, Voice Control
Mounting Type	Adhesive Mount (Low-profile magnetic mount)
Power Source	Vehicle power cable (dual USB adapter)
Battery	1 Lithium Ion battery required (internal)
Color	Black

8. Warranty and Support

Garmin products are designed for reliability and performance. For information regarding your product's warranty, please refer to the documentation included in the box or visit the official Garmin website.
For further assistance, technical support, or to download the complete user manual in PDF format, please visit the Garmin support page or access the official user manual directly via this link: Garmin Dash Cam Tandem User Manual (PDF).
Important Notice: *Some jurisdictions regulate or prohibit the use of dash cameras. It is your responsibility to know and comply with applicable laws and rights to privacy in jurisdictions where you plan to use this device.*

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B083643D8X

More documents and user manuals: **https://manuals.plus/**