**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



### Quicktec Large Gun Safe-Numeric Keypad

# Quicktec Large Rifle Safe with Numeric Keypad: Instruction Manual

Model: Large Gun Safe-Numeric Keypad

## 1. Introduction

This manual provides essential information for the safe and effective use of your Quicktec Large Rifle Safe. Please read these instructions carefully before installation and operation to ensure proper functionality and security.

Your Quicktec rifle safe features an all-steel body and a reliable digital lock system, designed for the secure storage of 5-6 rifles and shotguns, with or without scopes. It includes a pistol lockbox for additional security. This safe is engineered to keep firearms away from unauthorized access, especially children.




Image: The Quicktec Digital Rifle Safe integrated into a home environment, showcasing its sleek design and potential for discreet placement.

## 2. What's Included

Please verify that all components are present in the package:

- 1 x Quicktec Rifle Gun Cabinet
- 4 x AA Batteries
- 2 x Spare Keys
- 4 x Anchor Bolts
- 1 x Instruction Manual

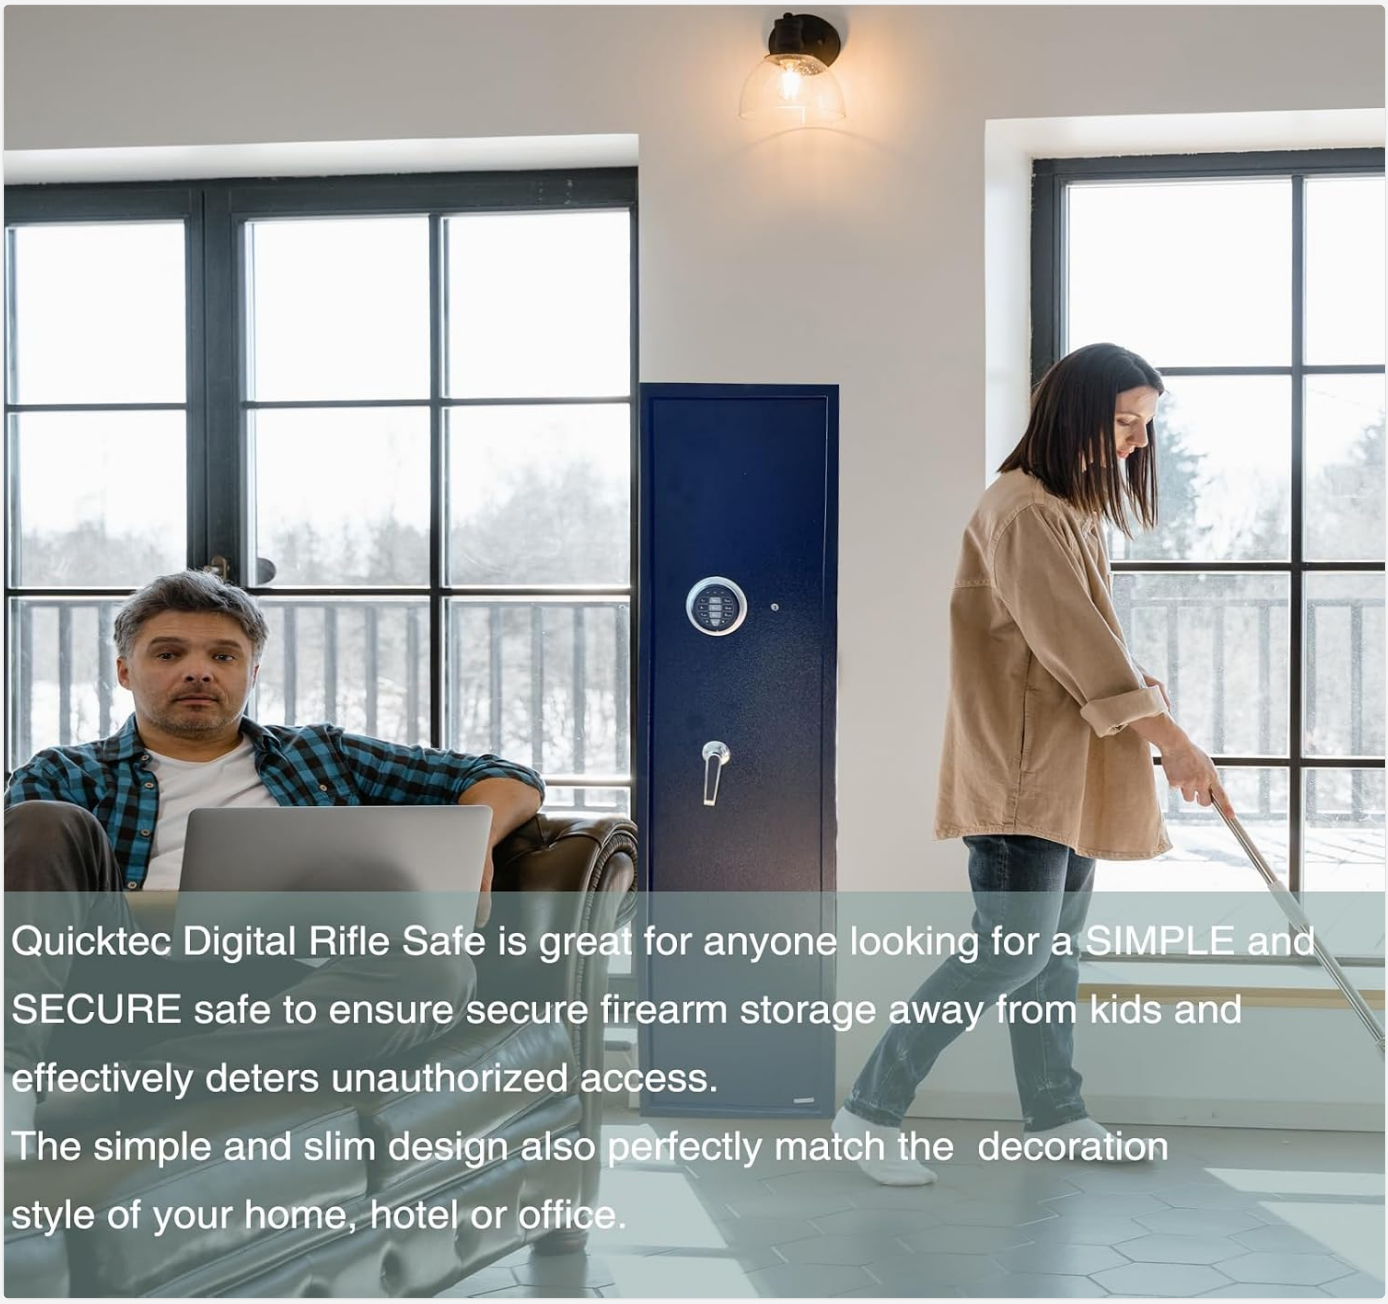



Image: The Quicktec Large Rifle Safe shown with its essential accessories, including keys, batteries, and anchor bolts for installation.

## 3. Setup

### 3.1 Unpacking

Carefully remove the safe from its packaging. Inspect the safe for any signs of damage. Retain packaging materials until you are satisfied with the product.

### 3.2 Battery Installation

The digital keypad requires 4 AA batteries for operation. Locate the battery compartment, typically on the inside of the safe door. Insert the batteries, ensuring correct polarity.

### 3.3 Mounting the Safe

For optimal security, it is highly recommended to anchor the safe to a floor or wall. The safe features five pre-punched mounting holes in the back and at the bottom. Use the provided anchor bolts to secure the safe.

1. Choose a suitable location for the safe.
2. Mark the drilling points through the pre-punched holes on the wall or floor.
3. Drill pilot holes at the marked locations.
4. Align the safe with the drilled holes and insert the anchor bolts.
5. Tighten the anchor bolts securely.



Image: A visual guide demonstrating the process of anchoring the safe to a wall or floor for enhanced security.

## 4. Operating Instructions

### 4.1 Opening the Safe

Your Quicktec safe can be opened using either the digital keypad or the emergency keys.

- **Using the Digital Keypad:** Enter your 3-8 digit security code. If the code is correct, the safe will unlock, allowing you to turn the handle and open the door.
- **Using Emergency Keys:** In case of forgotten codes or battery failure, insert one of the provided emergency keys into the keyhole, turn it, and then turn the handle to open the safe.



Image: The safe's exterior, highlighting both the digital keypad and the emergency key access points.

### 4.2 Setting/Changing Your Security Code

Refer to the detailed instructions provided in the included paper manual for specific steps on how to set or change your 3-8 digit security code. It is recommended to change the default code immediately after installation.

### 4.3 Silent Mode

The keypad sound can be toggled between silent and audible modes. Consult your paper manual for instructions on how to enable or disable the sound.

### 4.4 Alarm Function

For enhanced security, the safe is equipped with an alarm system. If an incorrect security code is entered three consecutive times, the safe will activate an audible alarm and temporarily disable the keypad for a short period to prevent further tampering.



Image: Illustration of the intrusion alert system, triggered by multiple incorrect code entries.

## 5. Maintenance

### 5.1 Cleaning

Wipe the exterior of the safe with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish. The interior felt lining can be gently vacuumed if needed.

### 5.2 Battery Replacement

Replace the AA batteries annually or when the low battery indicator (if present) illuminates. Always use new, high-quality alkaline batteries. If the batteries die completely, use the emergency keys to access the safe.

## 6. Troubleshooting

- **Safe will not open with digital code:**
  - Ensure batteries are fresh and correctly installed.
  - Verify you are entering the correct 3-8 digit code.
  - If the keypad is locked due to multiple incorrect entries, wait for the lockout period to expire.
  - Use the emergency key to open the safe.
- **Alarm sounds unexpectedly:**
  - This indicates three consecutive incorrect code entries. The alarm will cease after the lockout period.
- **Keypad is unresponsive:**
  - Check battery power. Replace batteries if necessary.
  - Ensure no debris is obstructing the buttons.

## 7. Specifications

| Feature | Detail |
|---|---|
| Brand | Quicktec |
| Model Number | Large Gun Safe-Numeric Keypad |
| Exterior Dimensions (W x D x H) | 13.8" x 12" x 57.2" |
| Capacity | 5-6 Rifles/Shotguns |
| Lock Type | Electronic Keypad, Key Lock |
| Material | Alloy Steel, Hot Rolled Steel, Felt |
| Item Weight | 92 pounds |
| Mounting Type | Floor Mount, Wall Mount |
| Alarm | Audible (after 3 incorrect entries) |
| Included Components | Rifle gun cabinet, AA batteries, spare keys, anchor bolts, instruction manual |




Image: Detailed diagram showing the exterior dimensions and internal configuration for rifle storage.



Image: A visual comparison highlighting the robust construction and generous depth of the Quicktec safe.

## 8. Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or contact Quicktec customer service. Contact details are typically found on the product packaging or the official Quicktec website.

© 2023 Quicktec. All rights reserved.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

**Open the live page**

**https://manuals.plus/asin/B08392TKKM**

More documents and user manuals: **https://manuals.plus/**