Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Whirlpool IF INV CNV 278 3S

Whirlpool 265 L 3 Star IntelliFresh Inverter Frost-Free Double Door Refrigerator User Manual

Model: IF INV CNV 278 3S

Introduction

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new Whirlpool 265 L 3 Star IntelliFresh Inverter Frost-Free Double Door Refrigerator. Please read these instructions thoroughly before using the appliance and retain them for future reference.

Important Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons. This includes:

- Ensure the refrigerator is properly grounded.
- Do not use extension cords or ungrounded adapters.
- Unplug the appliance before cleaning or performing any maintenance.
- Keep ventilation openings clear of obstruction.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Setup and Installation

Unpacking

Carefully remove all packaging materials. Inspect the refrigerator for any damage. Report any damage to your retailer immediately.

Location

Place the refrigerator on a firm, level surface away from direct sunlight and heat sources. Ensure adequate air circulation around the appliance. Maintain the following minimum clearances:

- **Back:** 10 cm (4 inches)
- **Sides:** 5 cm (2 inches)

- **Top:** 30 cm (12 inches)



Image: Side view of the Whirlpool refrigerator showing its dimensions (1590 mm height, 670 mm depth, 570 mm width). This illustrates the physical size for placement considerations.

Electrical Connection

Connect the refrigerator to a dedicated, grounded electrical outlet. This appliance is designed for stabilizer-free operation within a voltage range of 95V - 300V.

Initial Operation

After plugging in, allow the refrigerator to run for at least 2-3 hours before placing food inside. This allows the internal temperature to stabilize.

Operating Instructions

Temperature Control

The refrigerator features IntelliSense Inverter Technology for optimal cooling. Temperature settings can be adjusted via the control panel located on the freezer door.





Image: Front view of the Whirlpool refrigerator, highlighting the control panel on the freezer door. This panel is used for adjusting settings and selecting modes.

5-in-1 Convertible Modes

Your refrigerator offers 5 convertible modes for flexible storage. These modes allow you to optimize the freezer section based on your needs:

- **All Season Mode:** Standard operation for both refrigerator and freezer.
- **Chef Mode:** Optimizes cooling for fresh food storage.
- **Dessert Mode:** Ideal for freezing desserts quickly.
- **Party Mode:** Provides extra cooling for beverages and party food.
- **Deep Freeze Mode:** For extended preservation of frozen items.

To switch between modes, use the control panel. Refer to the on-appliance guide or the full manual for specific button combinations.

Storage Features

- **Toughened Glass Shelves:** Adjustable for flexible storage.
- **Honey Comb Moisture Lock Crisper:** Designed to maintain optimal humidity for fruits and vegetables, extending freshness.
- **Zeolite Technology:** Helps prevent excessive ripening of fruits and vegetables.

Care and Maintenance

Cleaning the Interior

Unplug the refrigerator before cleaning. Use a soft cloth and a mild detergent solution to clean the interior surfaces, shelves, and drawers. Rinse with clean water and dry thoroughly. Avoid abrasive cleaners or solvents.

Cleaning the Exterior

Wipe the exterior with a soft, damp cloth. For stainless steel finishes, use a specialized stainless steel cleaner. Do not spray water directly onto the appliance.

Defrosting

This is a frost-free refrigerator, meaning manual defrosting is generally not required. However, if excessive ice buildup occurs in the freezer, unplug the unit and allow the ice to melt naturally. Do not use sharp objects to remove ice.

Power Outage

In case of a power outage, keep the refrigerator doors closed to maintain internal temperature for as long as possible. Food can remain frozen for several hours if the doors are not opened frequently.

Troubleshooting Guide

Before contacting customer service, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator not cooling	Power cord unplugged; temperature setting too high; door left open; poor ventilation.	Check power connection; adjust temperature; ensure door is closed; clear obstructions around the unit.
Unusual noise	Refrigerator not level; items vibrating inside; fan obstruction.	Adjust leveling feet; rearrange items; check for obstructions near fan.
Water on floor	Drain tube blocked; drip tray overflowing.	Clear drain tube; empty and clean drip tray.
Light not working	Bulb loose or burnt out.	Ensure bulb is tightened; replace bulb if necessary (refer to full manual for bulb type).

If the problem persists after attempting these solutions, please contact Whirlpool customer support.

Product Specifications

Feature	Detail
Brand	Whirlpool
Model Number	IF INV CNV 278 GERMAN STEEL (3s)-N
Capacity	265 Litres
Energy Rating	3 Star
Annual Energy Consumption	190 Kilowatt Hours
Refrigerator Fresh Food Capacity	184 Litres
Freezer Capacity	75 Litres
Defrost System	Automatic (Frost-Free)
Special Features	Convertible, Door Lock, Stabilizer Free Operation, IntelliSense Inverter Technology, Honey Comb Moisture Lock, Zeolite Technology
Dimensions (LxWxH)	67.0D x 57.0W x 159.0L Centimeters
Item Weight	40 kg
Shelf Type	Toughened Glass
Voltage	230 Volts

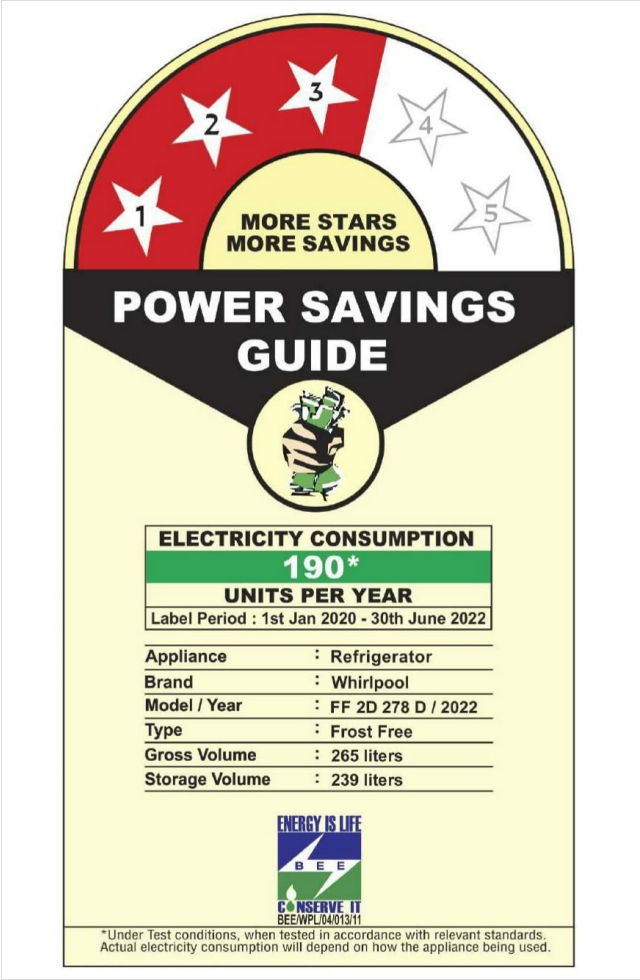


Image: Energy rating label for the Whirlpool refrigerator, indicating a 3-star rating and an annual energy consumption of 190 units per year. This label confirms the appliance's energy efficiency.

Warranty Information

Your Whirlpool refrigerator comes with the following warranty:

- **Product Warranty:** 1 year from the date of purchase.
- **Compressor Warranty:** 10 years from the date of purchase.

Please retain your purchase receipt for warranty claims. The warranty covers manufacturing defects under normal use conditions. It does not cover damage due to misuse, accidents, or unauthorized repairs.

Customer Support

For any queries, service requests, or technical assistance, please contact Whirlpool customer support:

- **Toll-Free Number:** 1800 208 1800
- **Email:** helpdeskindia@whirlpool.com
- **Manufacturer Address:** Whirlpool of India Ltd. Plot No. A-4, MIDC Ranjangaon, Taluka Shirur, Dist: Pune, Maharashtra 412220, India.

When contacting support, please have your model number (IF INV CNV 278 3S) and purchase date available.

Additional Resources

For more information and product registration, visit the official Whirlpool website or the Whirlpool Store on Amazon:

- Whirlpool Store on Amazon

© 2025 Whirlpool. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B083JN87RJ

More documents and user manuals: **https://manuals.plus/**