Generep AC14RL3A

Generep String Trimmer Spool and Cap Replacement Manual

Model: AC14RL3A | Brand: Generep

Introduction

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Generep AC14RL3A String Trimmer Spool and Cap Replacement. These replacement parts are designed to ensure optimal performance and compatibility with specified Ryobi One Plus+ cordless string trimmers. Please read this manual thoroughly before use to ensure safe and effective operation.

Package Contents

Verify that all items listed below are included in your package:

- 6 x String Trimmer Spool Line (0.065 inch diameter, 11 feet length each)
- 1 x Cap Cover

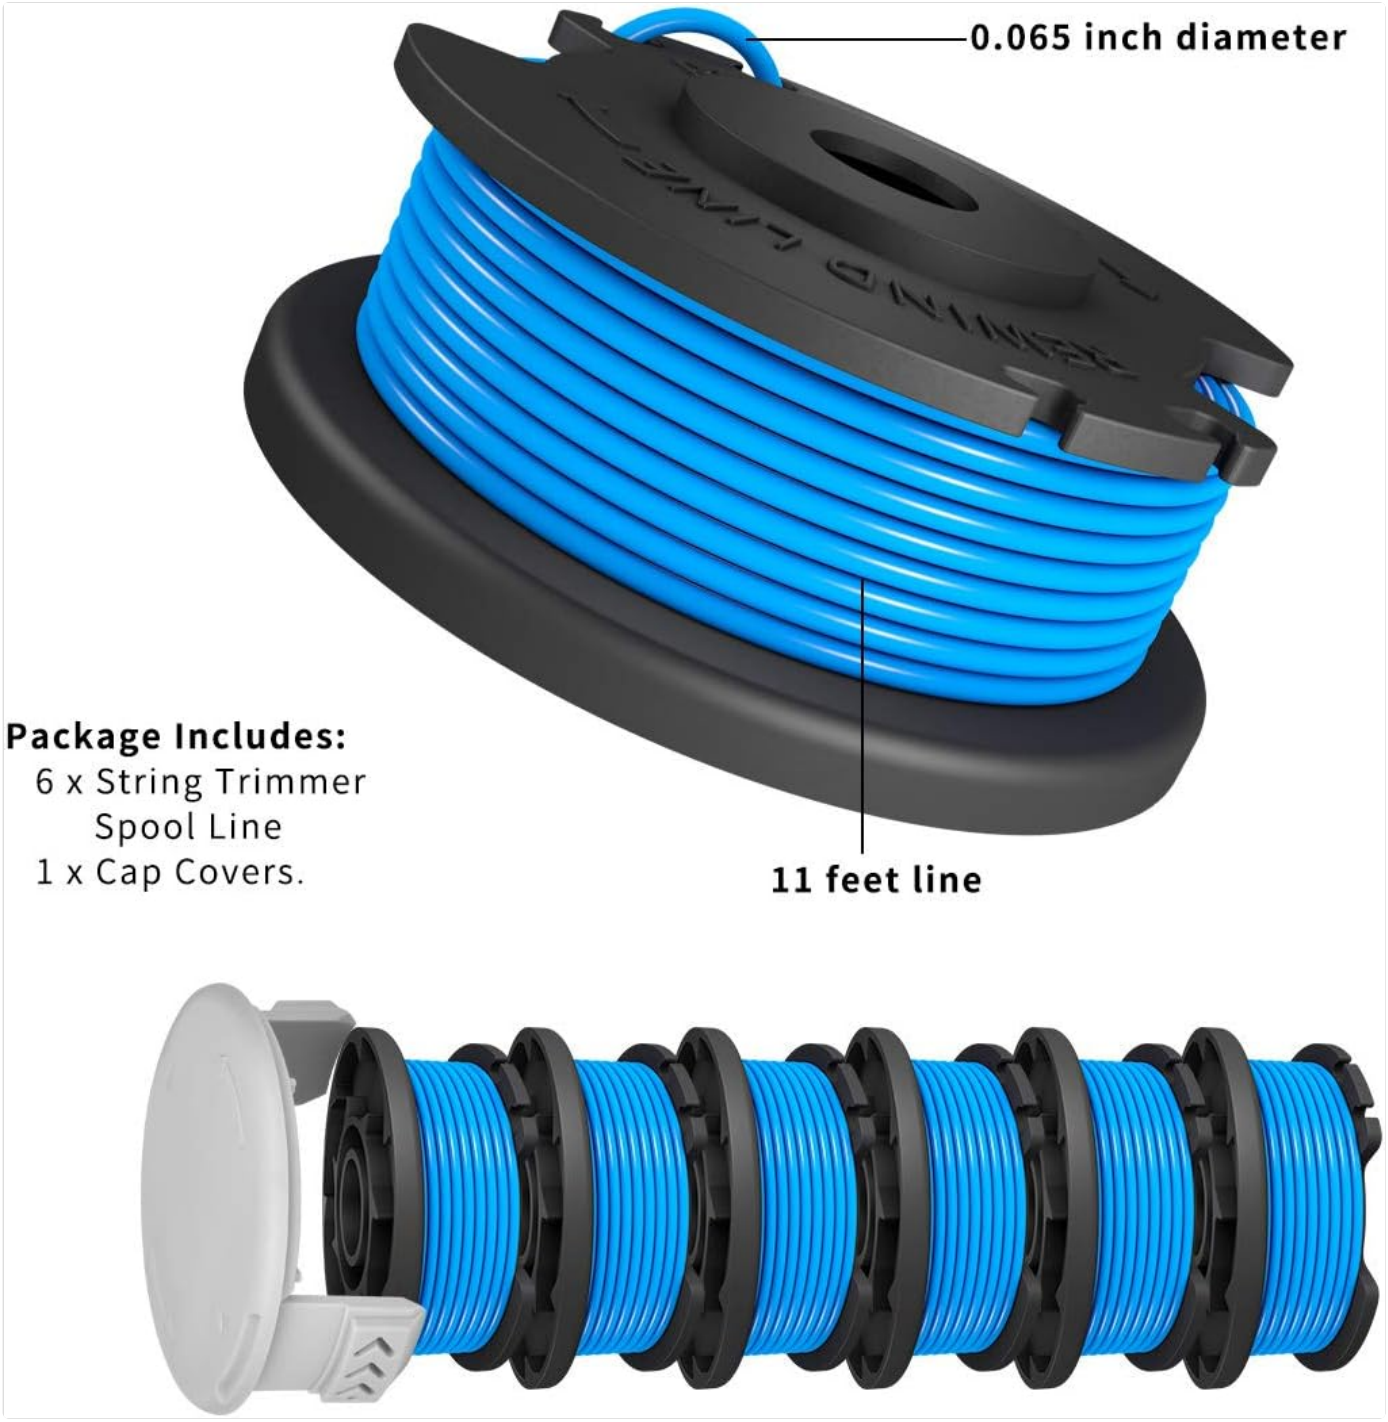


Figure 1: Contents of the Generep AC14RL3A replacement package, including six spools of blue trimmer line and one grey cap cover.

Compatibility

These replacement spools and cap covers are specifically designed for use with the following Ryobi One Plus+ electric string trimmer models:

- 18 Volt Ryobi One Plus+ Cordless Trimmers
- 24 Volt Ryobi One Plus+ Cordless Trimmers
- 40 Volt Ryobi One Plus+ Cordless Trimmers

The cap covers are compatible with Spool Cap Models: AC14HCA, 522994001, 3411546-7G.



Figure 2: Visual representation of compatible Ryobi One Plus+ string trimmer models (18V, 24V, 40V) for the replacement spools and cap.

Important Safety Information

Always prioritize safety when working with power tools. Adhere to the following guidelines:

- Always wear **safety glasses** to protect your eyes from debris.
- Wear **long pants** and **sturdy shoes** for personal protection.
- Ensure **bystanders are kept away** from the operating area while the trimmer is in use.
- Before performing any maintenance or changing parts, ensure the trimmer's power source (battery) is disconnected.

Setup: Spool and Cap Installation

Follow these steps to replace the string trimmer spool and cap:

1. **Disconnect Power:** Before beginning, ensure your string trimmer is turned off and the battery pack is removed to prevent accidental startup.
2. **Remove Old Spool and Cap:** Press the tabs on the side of the existing cap cover and pull it off. Carefully remove the old

spool from the trimmer head.

3. **Prepare New Spool:** Take a new Generep replacement spool. Locate the small hole on the spool and insert the end of the trimmer line into it.
4. **Insert New Spool:** Align the new spool with the trimmer head. Ensure the line is threaded through the eyelet on the trimmer head. The automatic winding feature allows for quick changes.
5. **Attach New Cap Cover:** Place the new cap cover over the spool, aligning the tabs with the slots on the trimmer head. Press firmly until it clicks into place, securing the spool.
6. **Verify Installation:** Gently pull on the trimmer line to ensure it is properly seated and can feed freely.



Figure 3: Step-by-step visual guide for replacing the string trimmer spool and cap cover.

Operating Guidelines

Once the new spool and cap are installed, you can resume using your string trimmer. The 0.065-inch high-strength copolymer nylon resin line is designed for effective cutting and durability. For best results, operate your trimmer according to its original manufacturer's instructions.

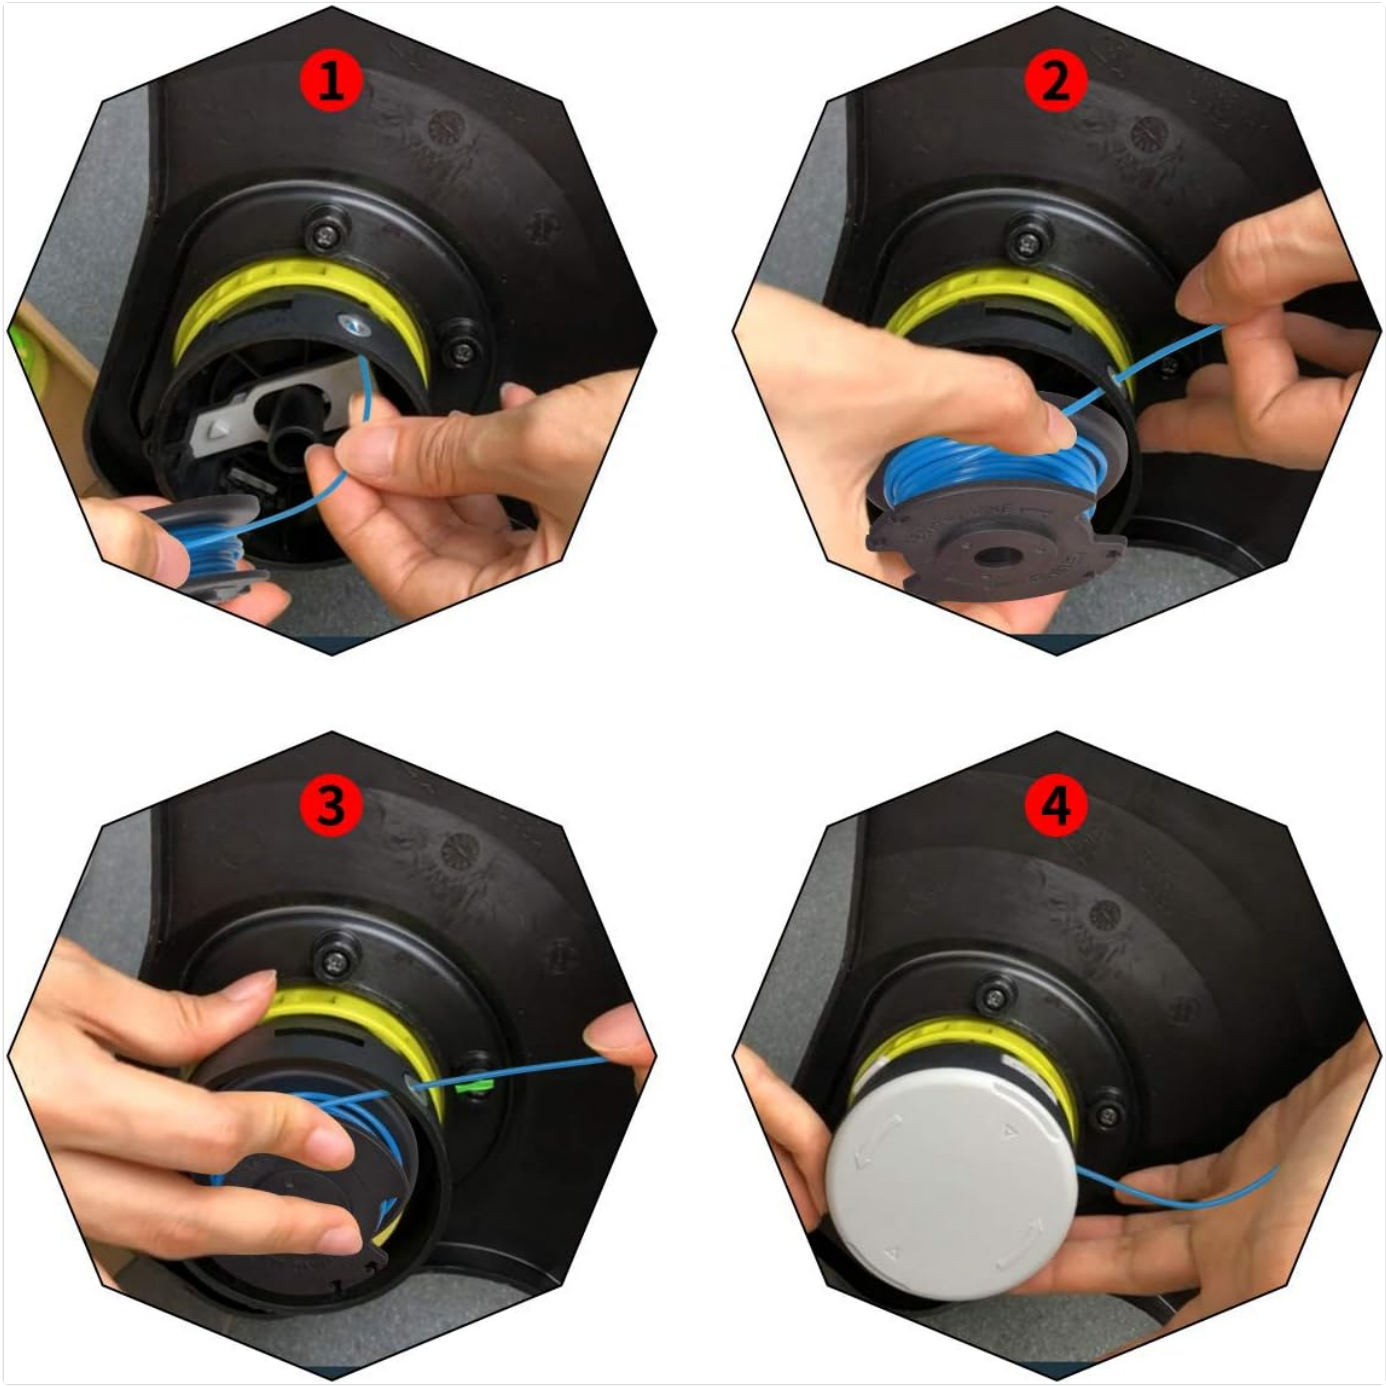


Figure 4: A string trimmer in operation, effectively trimming grass and maintaining a clean edge.

Maintenance

Proper maintenance ensures the longevity of your replacement spools and cap:

- **Storage:** Store unused spools in a cool, dry place away from direct sunlight to prevent the line from becoming brittle.
- **Cleaning:** Periodically clean the trimmer head and cap cover to remove accumulated grass and debris, which can impede line feeding.
- **Inspection:** Before each use, inspect the trimmer line for any signs of wear, fraying, or damage. Replace the spool if the line appears compromised.

Troubleshooting

Refer to the table below for common issues and their solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Trimmer line not feeding automatically.	Line is tangled or stuck inside the spool; debris in the trimmer head; incorrect spool installation.	Remove the cap and spool, untangle the line, clear any debris, and re-install the spool ensuring the line is properly threaded.
Line breaks frequently.	Line is worn, old, or brittle; hitting hard surfaces; incorrect trimming technique.	Replace with a new spool. Avoid hitting concrete, rocks, or fences. Use a sweeping motion to trim.
Cap cover does not fit securely.	Incorrect cap model; debris preventing proper seating; tabs are damaged.	Ensure you are using the correct cap model for your trimmer. Clean the area where the cap seats. Inspect tabs for damage.

Specifications

Key specifications for the Generep AC14RL3A String Trimmer Spool and Cap:

Feature	Detail
Model Number	AC14RL3A
Line Diameter	0.065 inches
Line Length per Spool	11 feet
Line Material	High-strength copolymer nylon resin / Nylon polyamide
Cap Cover Compatibility	AC14HCA, 522994001, 3411546-7G
Package Quantity	6 Spools, 1 Cap

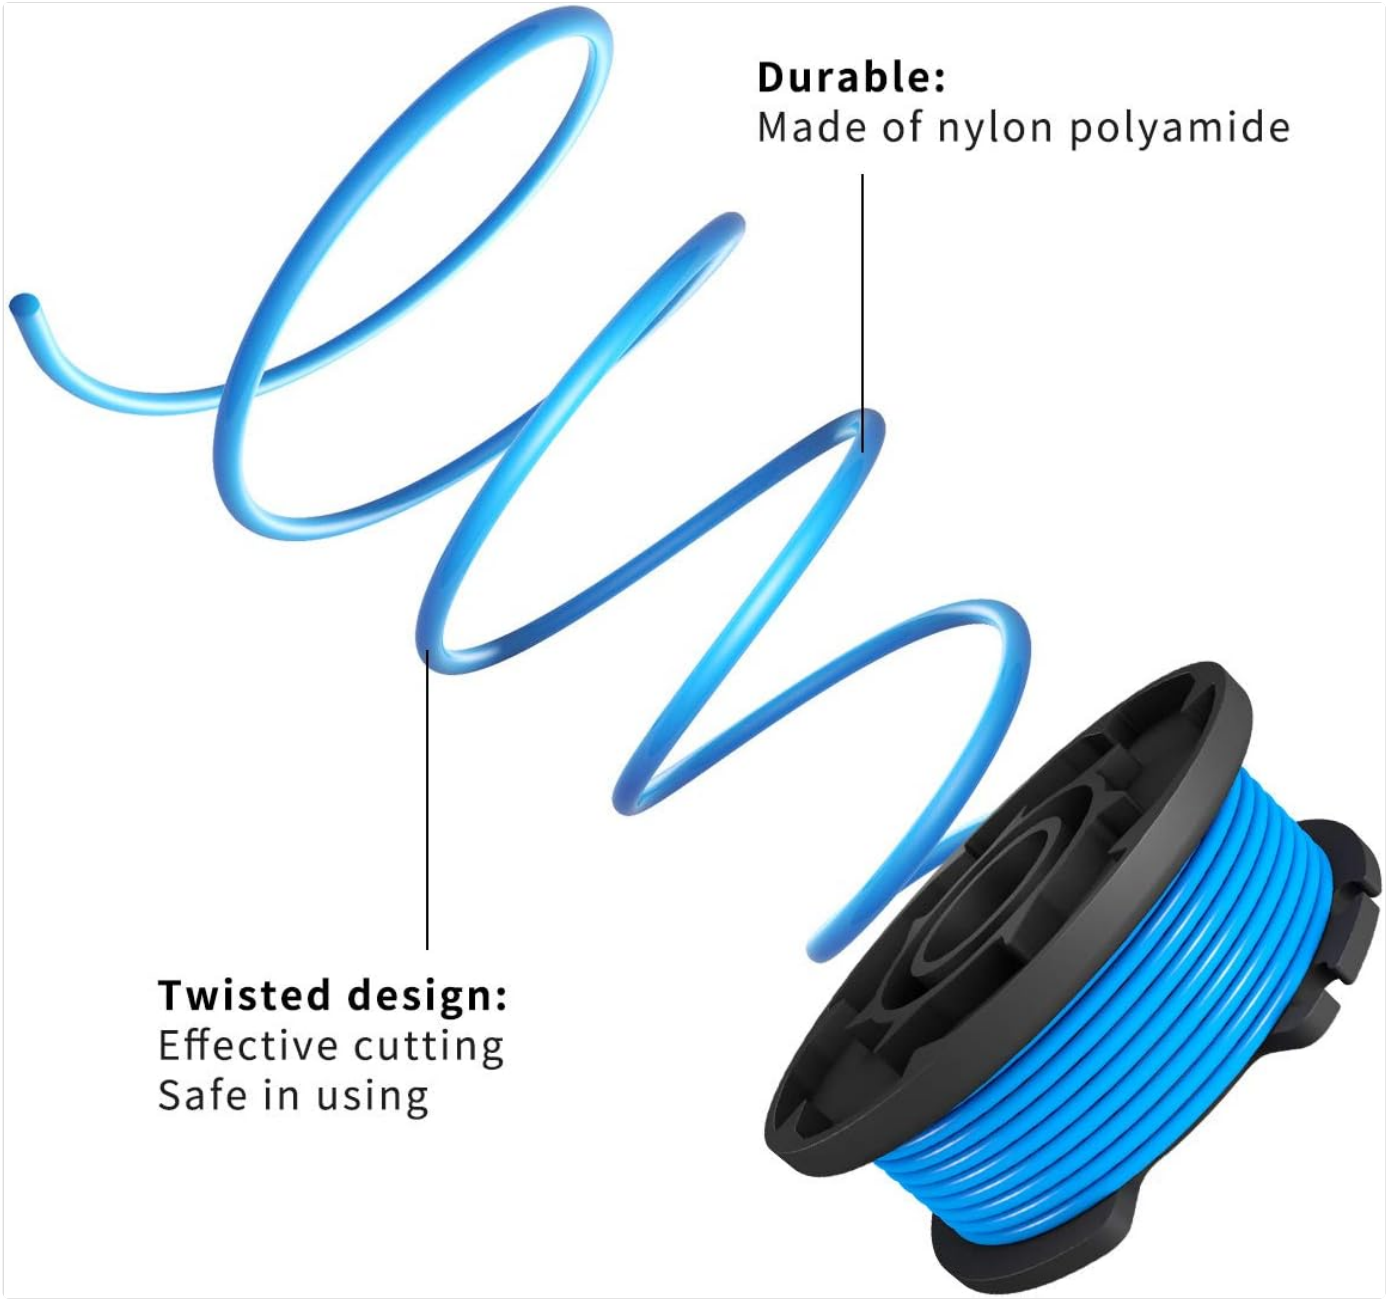


Figure 5: Close-up of the trimmer line and spool, detailing its twisted design for effective cutting and durable nylon polyamide material.

Warranty and Support

Generep is committed to customer satisfaction. If you encounter any questions or problems with your product, please do not hesitate to contact us. We aim to provide a suitable solution within 24 hours of your inquiry.
For support, please refer to the contact information provided with your purchase or visit the official Generep store on Amazon: Generep Amazon Store.

© 2025 Generep. All rights reserved.
This manual is for informational purposes only. Always refer to your original trimmer's manual for specific operating instructions and safety precautions.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question