Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Outsunny 84C-099GY

Outsunny 10' x 13' Patio Gazebo Instruction Manual

Model: 84C-099GY

1. Important Safety Information

Please read and understand all instructions and warnings before assembly and use of this product. Failure to follow these instructions may result in injury or damage.

- Ensure all parts are present and undamaged before beginning assembly.
- Assembly requires at least three people for safe and efficient setup.
- Do not use this gazebo in extreme weather conditions, including heavy rain, snow, sleet, hail, or strong winds. The canopy top should be stored away during such conditions to prevent collapse and damage.
- Properly anchor the gazebo to the ground using the provided support stakes or other suitable anchoring methods.
- Keep children and pets away from the assembly area.
- Do not hang heavy objects from the gazebo frame.
- This product is intended for outdoor use only.
- Periodically check all connections and anchors to ensure they remain secure.
- Proposition 65 Warning: This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

2. Product Overview

The Outsunny 10' x 13' Patio Gazebo provides a spacious and comfortable outdoor shelter, perfect for gatherings, parties, and relaxation. It features a durable steel frame, a double-tier vented roof for airflow, and privacy curtains.



Image: Front view of the Outsunny 10' x 13' Patio Gazebo in gray, featuring its two-tier roof and privacy curtains.



Image: The Outsunny gazebo set up in a lush green garden, providing shade over outdoor furniture.

Key Features:

- **Complete Package:** Includes metal frame, curtains, and canopy.
- **Durable Construction:** Powder-coated steel frame resists rust; 180g coated polyester fabric resists UV rays and fading.
- **Spacious Design:** Measures 9.75' L x 13' W x 8.75' H, providing ample space.
- **Well-Designed Roof:** Double-tier roof for proper airflow and protection from rain and wind.
- **Integrated Drainage:** Built-in grommets for water drainage.
- **Privacy Curtains:** Hook and loop straps for convenient curtain attachment and double-sided zippers for easy closure.

3. Assembly Instructions

Assembly of the Outsunny Patio Gazebo is straightforward but requires careful attention to detail and the assistance of at

least three people for safety and ease. Refer to the included assembly diagram for specific part identification.

3.1. Unpacking and Preparation

1. Carefully unpack all components from the packaging.
2. Verify all parts are present against the parts list (refer to the separate parts diagram if provided).
3. Lay out all components on a clean, flat, and soft surface to prevent scratching or damage.
4. Ensure you have adequate space for assembly.

3.2. Frame Assembly

Begin by assembling the main steel frame structure. Handle components with care as the material can be thin.

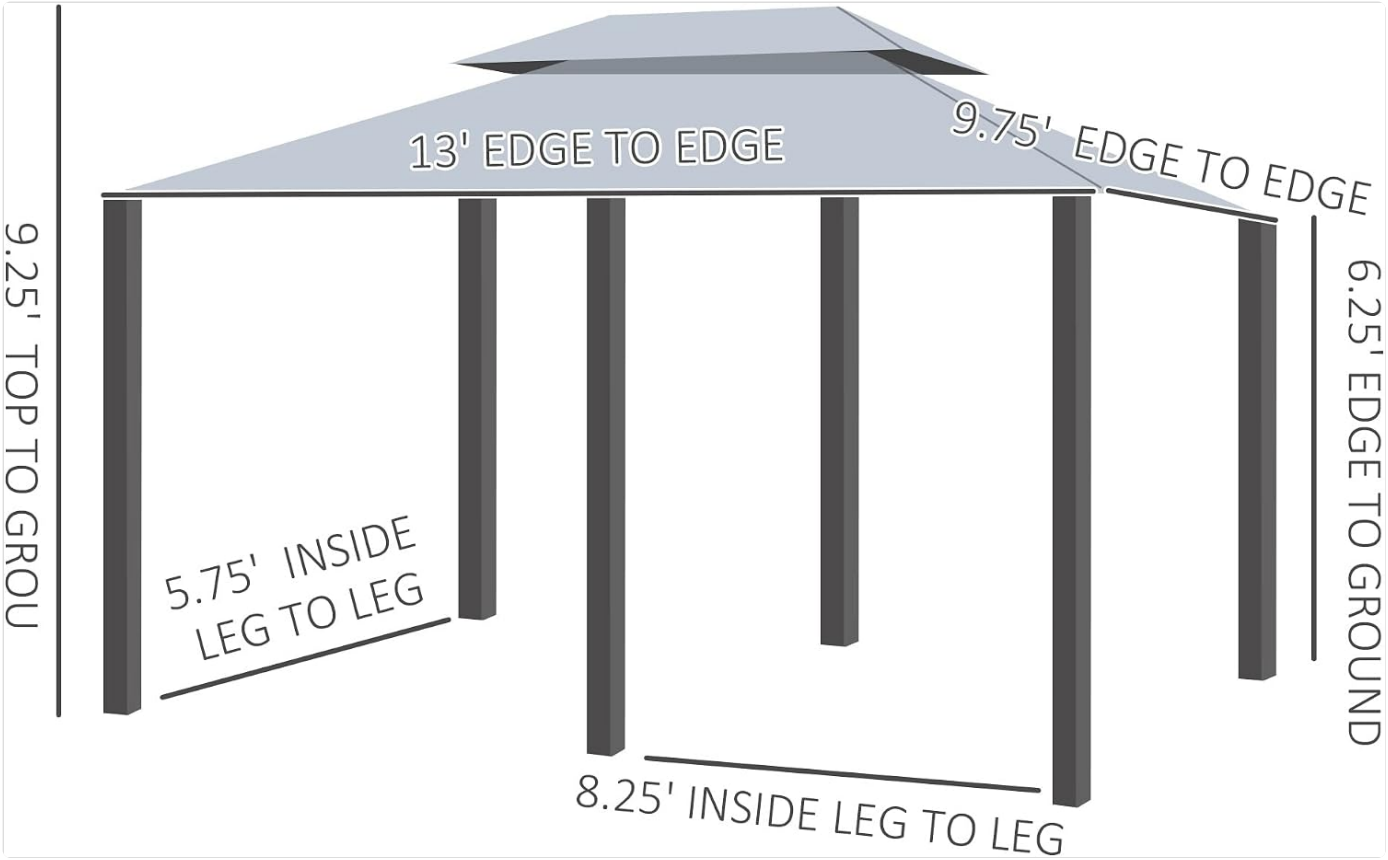


Image: The bare steel frame of the gazebo, showing the upright posts and roof support beams before the canopy is attached.

1. Connect the vertical support posts to the horizontal roof beams using the provided hardware. Ensure all connections are finger-tight at this stage.
2. Assemble the upper tier roof frame separately.
3. With the help of others, carefully lift and secure the assembled roof frame onto the vertical posts.
4. Once the main frame is upright and stable, tighten all bolts and screws securely. Do not overtighten.
5. Attach the ground stakes to the base of each leg for added stability, especially if placing on soft ground.



Image: A close-up view of a gazebo leg connected to a horizontal beam, showing the bolt and nut assembly.

3.3. Canopy and Curtain Installation

Install the polyester canopy and privacy curtains after the frame is fully assembled.



Image: Detailed view of the gazebo's polyester cover, ground stakes, double-tier roof, and drainage holes, highlighting key features.

1. Drape the main canopy fabric over the assembled roof frame, ensuring it is correctly oriented. The double-tier roof allows for proper airflow.
2. Secure the canopy to the frame according to the specific attachment points (e.g., corner pockets, ties).
3. Attach the privacy curtains to the frame using the integrated hook and loop straps.
4. Ensure the curtains can be easily opened and closed using the double-sided zippers.



Image: Close-up showing the high-quality curtains, highlighting the hook & loop straps for fixing to the frame, curtain straps for tying, and double-sided zippers for easy use.

4. Operating Instructions

The Outsunny Patio Gazebo is designed for simple operation to enhance your outdoor experience.

4.1. Using the Curtains

- To open the curtains, unzip them and use the integrated curtain straps to tie them neatly to the gazebo posts.
- To close the curtains for privacy or protection from light wind, untie them and zip them together. The double-sided zippers allow for easy access from both inside and outside.



Image: A close-up of a gazebo curtain tied back neatly to the leg post with its integrated strap.

4.2. General Use

The gazebo is ideal for various outdoor activities. Ensure the area under and around the gazebo is clear of obstructions.



Image: The gazebo providing a shaded area for an outdoor dining setup, demonstrating its suitability for family gatherings and parties.

Your browser does not support the video tag.

Video: An official product video from Outsunny showcasing the 10' x 13' Patio Gazebo in various outdoor settings, highlighting its features and spacious design.

5. Maintenance

Proper maintenance will extend the life of your Outsunny Patio Gazebo.

- **Cleaning:** Clean the canopy and curtains with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** The powder-coated steel frame is designed to resist rust. However, inspect the frame periodically for any signs of rust or damage. Touch up any chipped paint to prevent further corrosion.
- **Seasonal Storage:** It is highly recommended to store the canopy top and curtains during adverse weather conditions (heavy rain, snow, strong winds) and during off-seasons to prevent damage and prolong their lifespan.
- **Anchoring:** Regularly check the ground stakes and other anchoring points to ensure the gazebo remains securely

fastened, especially after strong winds.

6. Troubleshooting

Here are some common issues and potential solutions for your gazebo.

Problem	Possible Cause	Solution
Gazebo feels unstable or wobbly.	Loose connections; insufficient anchoring; uneven ground.	Ensure all frame bolts are tightened. Verify ground stakes are fully inserted and secure. Relocate to a level surface if possible, or use shims to level the legs.
Canopy accumulates water.	Improper canopy installation; clogged drainage grommets.	Ensure the canopy is stretched taut and correctly positioned. Clear any debris from the drainage grommets.
Curtains do not close properly.	Zippers are misaligned or damaged; fabric caught.	Check for fabric caught in the zipper. Ensure curtains are properly aligned on their tracks/loops. If zippers are damaged, contact customer support.
Frame components appear bent or damaged.	Rough handling during assembly; exposure to strong winds or heavy loads.	Handle components carefully during assembly. Always store the canopy during adverse weather. Damaged structural components may require replacement. Note that replacement canopy tops may not always be available directly from the manufacturer.

7. Product Specifications

Specification	Detail
Brand	Outsunny
Model Number	84C-099GY
Material	Polyester, Alloy Steel
Color	Gray
Overall Dimensions (L x W x H)	9.75' x 13' x 8.75' (157.5"L x 118.1"W x 110.2"H)
Edge Height	6.5' H
Space Between Columns (L x W)	5.73' L x 8.38' W
Item Weight	71.5 Pounds
Water Resistance Level	Water Resistant
UV Protection	Yes
Assembly Required	Yes
Occupancy	12 Person
UPC	842525146463



Image: A diagram illustrating the key dimensions of the gazebo, including overall length, width, height, and internal leg-to-leg measurements.

8. Warranty and Support

Outsunny products are designed for quality and durability. For any questions, concerns, or support needs, please contact Aosom Direct customer service.

- **Returns:** This product is eligible for 30-day easy returns. Please refer to your purchase platform's return policy for detailed instructions.
- **Customer Support:** For assistance with assembly, missing parts, or product issues, please contact Aosom Direct, the manufacturer and seller. Contact information can typically be found on your purchase receipt or the seller's page.
- **Protection Plans:** Extended protection plans may be available for purchase separately.

For more information and to explore other Outsunny products, visit the official Outsunny Store.

© 2024 Outsunny. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0841W6HQH

More documents and user manuals: **https://manuals.plus/**