ZdalaMit GFS2712

ZdalaMit Replacement Remote Control for Vizio Smart TVs

Model: GFS2712

Introduction

This manual provides instructions for the ZdalaMit GFS2712 replacement remote control, designed for use with various Vizio Smart TV models. This remote offers a direct replacement solution, requiring no complex programming or pairing procedures. Simply install batteries, and it is ready for operation.

Compatible Vizio TV Models:

- D43f-F2, D40f-F1
- E55-F1, D70-F3, E75-F1
- M65-F0, E65-F0
- D32f-G4
- M706-G3, V755-G4

Package Contents

- 1x ZdalaMit Replacement Remote Control (Model GFS2712)

Note: Batteries and additional manuals are not included in the package.

Setup

Battery Installation

The remote control requires two (2) AAA alkaline batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.


INPUT
VUDU
NETFLIX
amazon
KUMO
CRACKLE
iHeart RADIO
EXIT
MENU
OK
BACK
INFO
CC
VOL
CH
PIC
1
2
3
4
5
6
7
8
9
0



Image: Angled view of the ZdalaMit remote control. The battery compartment is located on the back of the device.

Initial Use

This replacement remote control is designed for immediate use with compatible Vizio Smart TVs. No programming or pairing is required. Once batteries are installed, the remote is ready to control your television.

Operating Instructions

The ZdalaMit GFS2712 remote control features a standard layout for Vizio Smart TVs, providing direct access to common functions and streaming services.





Image: Front view of the ZdalaMit replacement remote control, showing all buttons and their labels.

Button Functions Overview

- **Power Button ( ):** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI 1, HDMI 2, AV, etc.).
- **App Buttons (VUDU, NETFLIX, Amazon, XUMO, CRACKLE, iHeartRadio):** Provides direct access to these streaming applications.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and select options.
- **Back Button:** Returns to the previous screen or menu.
- **Menu Button:** Opens the TV's main settings menu.
- **Info Button:** Displays information about the current program or input.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the television channel.
- **Mute Button ( ):** Mutes or unmutes the TV audio.
- **CC (Closed Caption) Button:** Toggles closed captions on or off.
- **PIC (Picture) Button:** Accesses picture settings.
- **Number Pad (0-9):** Directly enters channel numbers.

Basic Operation

To operate your Vizio TV with this remote, simply point the remote control towards the television and press the desired button. Ensure there are no obstructions between the remote and the TV's infrared receiver.



Image: A hand holding the remote control, demonstrating its use to control a television.

Maintenance

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage to the device. Store the remote in a cool, dry place.
- **Avoid Damage:** Do not drop the remote control, expose it to extreme temperatures, or immerse it in water.

Troubleshooting

- **Remote Not Responding:**
  - Ensure batteries are installed correctly with the correct polarity (+/-).
  - Replace old batteries with new AAA alkaline batteries.
  - Check for any obstructions between the remote control and the TV's infrared sensor.
  - Point the remote directly at the TV.
- **Intermittent Function:**
  - This may indicate low battery power. Replace batteries.
  - Ensure you are within the effective range of the TV's infrared sensor.

- **Specific Buttons Not Working:**
  - If only certain buttons are unresponsive, try replacing the batteries. If the issue persists, the remote may require replacement.

If troubleshooting steps do not resolve the issue, please refer to the support information provided by the seller.

SPECIFICATIONS

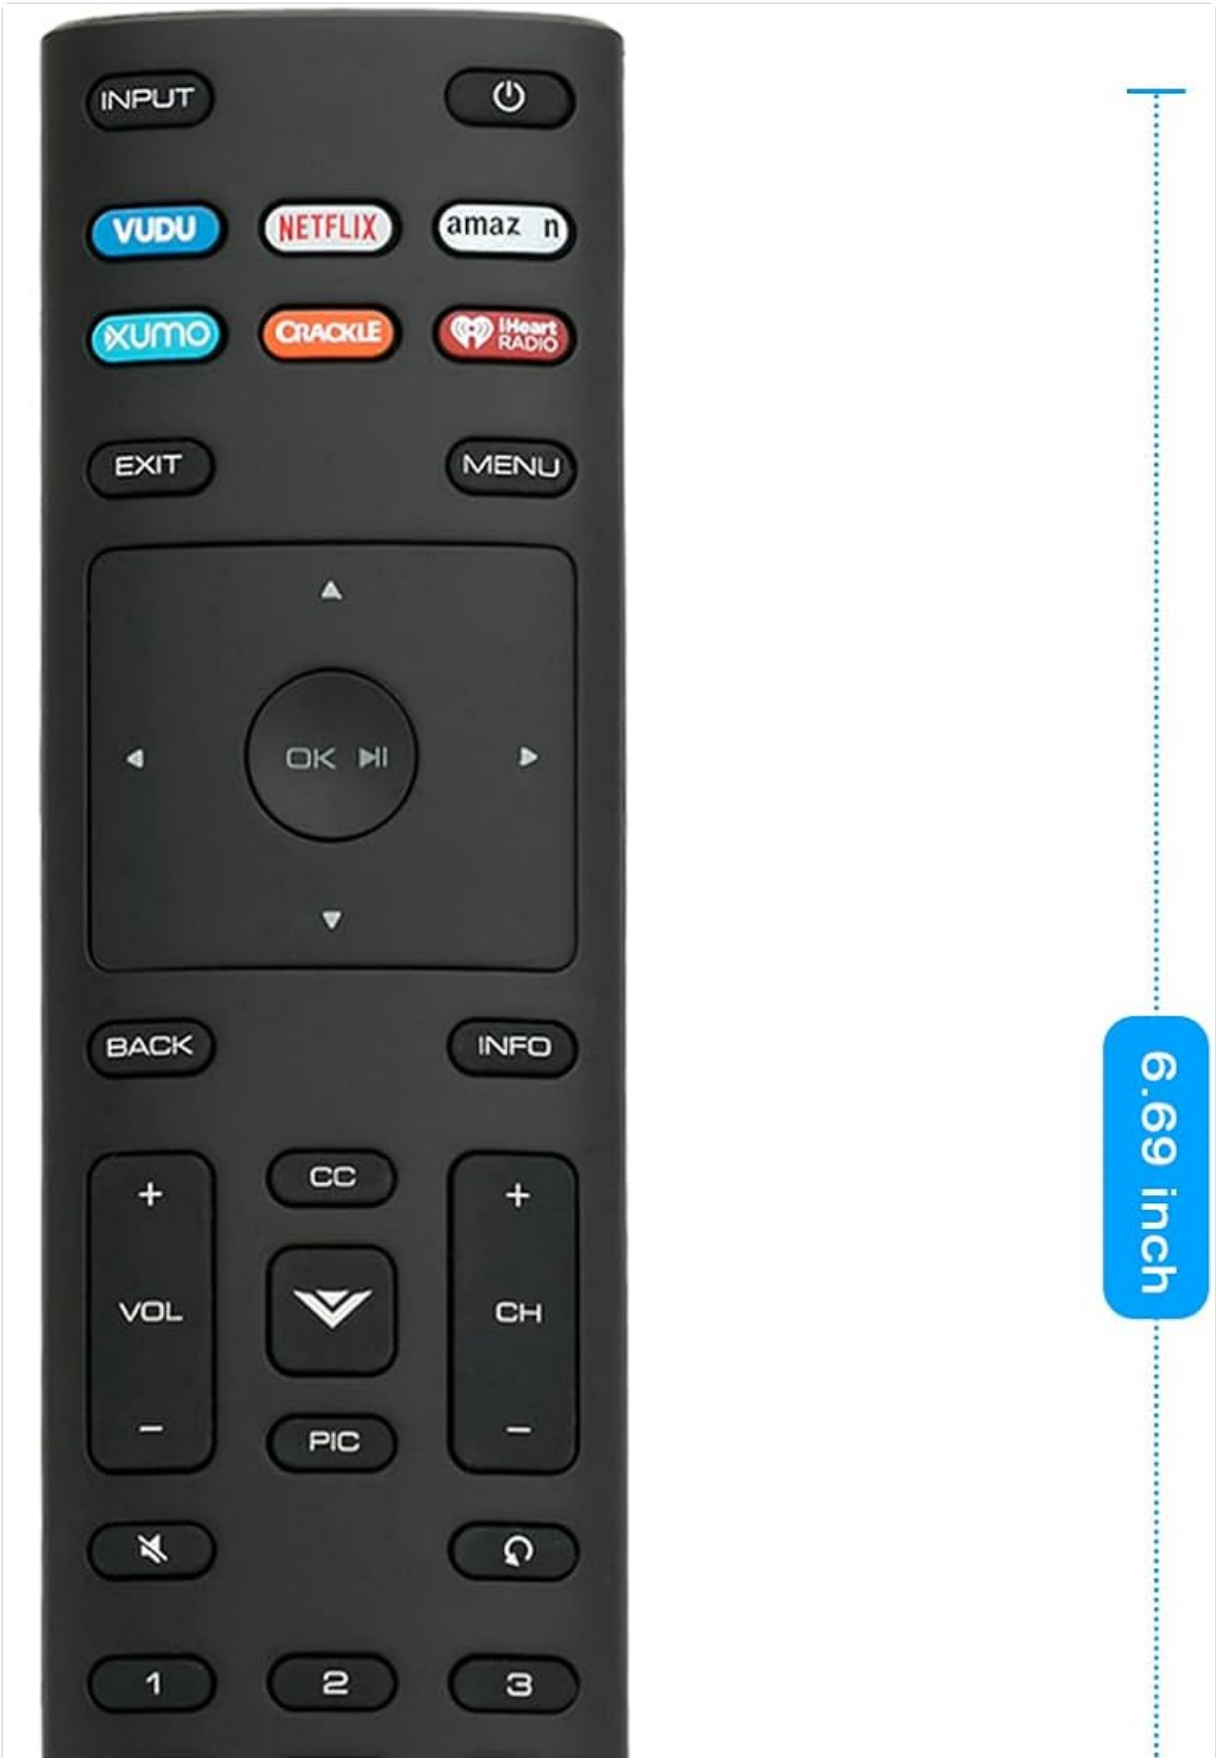




Image: The ZdalaMit remote control with its approximate dimensions indicated.

Model Number	GFS2712
Product Dimensions	6.1 x 1.4 x 0.6 inches
Item Weight	1.6 ounces
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Compatible Devices	Vizio Televisions (specific models listed in Introduction)
Special Feature	Ergonomic design

Warranty and Support

For any questions, concerns, or support regarding your ZdalaMit replacement remote control, please contact the seller directly through your purchase platform. They can provide assistance with product-specific inquiries and any applicable warranty information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question