ZdalaMit HW-MM45C, HW-MM36, HW-MM37, HW-MM45, HW-MM4500C, HW-MM55C

ZdalaMit Replacement Remote Control User Manual

For Samsung Soundbar Models: HW-MM45C, HW-MM36, HW-MM37, HW-MM45, HW-MM4500C, HW-MM55C

1. Introduction

This manual provides instructions for the ZdalaMit replacement remote control, designed for seamless operation with various Samsung Soundbar models. This remote offers a direct replacement solution, requiring no complex programming or pairing procedures.



Image 1.1: Angled view of the ZdalaMit replacement remote control.

2. Compatibility

This replacement remote control is compatible with the following Samsung Soundbar models:

- HW-MM45C
- HW-MM36
- HW-MM37
- HW-MM45
- HW-MM4500C
- HW-MM55C
- And their regional variants (e.g., HW-MM45C/ZA)

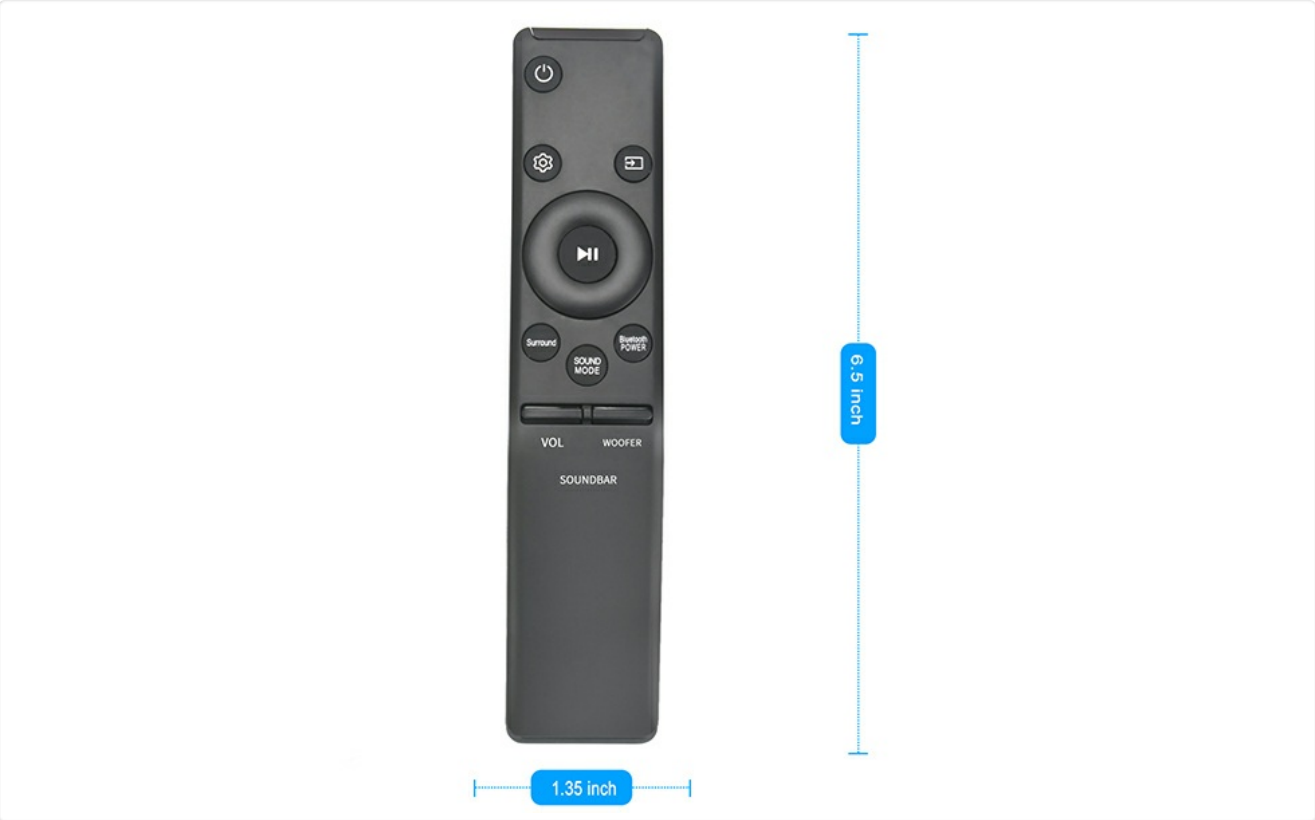


Image 2.1: The replacement remote control shown in a typical soundbar setup, illustrating compatibility.

3. Setup

The ZdalaMit replacement remote control is pre-programmed and does not require any manual programming or pairing with your Samsung Soundbar. Simply install the batteries, and it will be ready for immediate use.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) 1.5V AA alkaline batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Note: Batteries are not included with the remote control and must be purchased separately.

4. Operating Instructions

Familiarize yourself with the buttons on your replacement remote control and their corresponding functions.





Image 4.1: Straight-on view of the remote control, highlighting button layout.

4.1 Button Functions

Button	Function
Power ( )	Turns the soundbar on or off.
Settings (⚙)	Accesses soundbar settings menu.
Source (↷)	Cycles through available input sources (e.g., HDMI, Optical, Bluetooth).
Play/Pause ( )	Plays or pauses audio playback.
Navigation Ring	Navigates through menus and options.
Enter (Center of Ring)	Confirms selections.
Surround	Activates or deactivates surround sound mode.
Sound Mode	Cycles through various sound modes (e.g., Standard, Music, Movie).
Bluetooth Power	Activates Bluetooth pairing mode or connects to a previously paired device.
VOL (Volume)	Adjusts the main soundbar volume (Up/Down).
WOOFER	Adjusts the subwoofer volume level (Up/Down).

5. Specifications

Key technical specifications for the ZdalaMit replacement remote control:

- **Product Dimensions:** 5.8 x 1.2 x 0.55 inches (14.7 x 3.0 x 1.4 cm)
- **Item Weight:** 1.7 ounces (48 grams)
- **Power Supply:** 2 x 1.5V AA Alkaline Batteries (not included)
- **Special Feature:** Pre-programmed, no pairing required
- **Compatible Devices:** Samsung Soundbars (specific models listed in Section 2)



Image 5.1: The remote control displaying its approximate dimensions.

6. Troubleshooting

If you encounter issues with your remote control, please refer to the following common troubleshooting steps:

- **Remote Not Responding:**
  - Ensure batteries are inserted correctly with the proper polarity.
  - Replace old batteries with new 1.5V AA alkaline batteries.
  - Check for any obstructions between the remote control and the soundbar's infrared receiver.
- **Limited Range:**
  - Ensure you are within a reasonable distance and have a clear line of sight to the soundbar.
  - Strong light sources or other electronic devices may interfere with the signal. Try operating the remote in a different environment.
- **Specific Button Not Working:**
  - Verify that the soundbar model is listed in the compatibility section (Section 2).
  - Clean the remote control buttons and surface with a soft, dry cloth to remove any dirt or residue.

7. Maintenance

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Care:** Remove batteries if the remote control will not be used for an extended period to prevent leakage. Dispose of used batteries responsibly according to local regulations.
- **Storage:** Store the remote control in a cool, dry place, away from direct sunlight and extreme temperatures.

8. Support

If you have any questions, concerns, or require further assistance regarding your ZdalaMit replacement remote control, please do not hesitate to contact the seller or manufacturer. Provide your product details and a clear description of the issue for efficient support.

© 2023 ZdalaMit. All rights reserved.